

Manuals.plus /

› INTECHING /

› INTECHING RC035SR AV Receiver Remote Control User Manual

INTECHING RC035SR

INTECHING RC035SR AV Receiver Remote Control User Manual

Model: RC035SR

1. INTRODUCTION

This user manual provides comprehensive instructions for the INTECHING RC035SR AV Receiver Remote Control. This remote is designed as a direct replacement for various Marantz AV receiver models, offering seamless functionality without the need for complex programming or pairing. Its durable design ensures reliable operation for an enhanced audio-visual experience.





Figure 1: Front view of the RC035SR remote control, showcasing its button layout.

Key Features:

- Fully functioning, brand new, and durable replacement remote control.
- No programming, pairing, or setting required; works directly out of the packaging.
- Ensures responsive control for your AV Receiver.
- Ergonomic design for comfortable handling.

2. SETUP

2.1 Battery Installation

The RC035SR remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 2: Back view of the remote control showing the open battery compartment and proper battery orientation.

2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming, pairing, or complex setup procedures are required. Simply point the remote control towards your compatible Marantz AV Receiver and begin operation.

3. OPERATING INSTRUCTIONS

The RC035SR remote control provides full functionality for your Marantz AV Receiver. Ensure there is no obstacle between the remote control and the AV Receiver when operating the device to ensure proper signal transmission.

3.1 Button Functions Overview



Figure 3: Angled view of the remote control, illustrating the ergonomic design and button layout.

- **POWER:** Turns the AV Receiver on or off.
- **ZONE SELECT (MAIN/ZONE 2):** Switches control between the main zone and Zone 2.
- **Input Selectors (CBL/SAT, DVD, Blu-ray, GAME, AUX 1, MEDIA PLAYER, TV AUDIO, AUX 2, TUNER, USB, CD, Bluetooth, PHONO, INTERNET RADIO):** Selects the desired input source.
- **ECO:** Activates or deactivates the ECO mode for power saving.
- **MUTE:** Mutes or unmutes the audio output.
- **VOLUME (+/-):** Adjusts the master volume level.
- **CH/PAGE (+/-):** Navigates through channels or pages.
- **INFO:** Displays information on the screen.

- **OPTION:** Accesses additional options for the current function.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **BACK:** Returns to the previous menu or screen.
- **SETUP:** Accesses the system setup menu.
- **Playback Controls (TUNE -, Play/Pause, TUNE +):** Controls media playback (e.g., skip tracks, play/pause).
- **SMART SELECT (1, 2, 3, 4):** Customizable buttons for quick access to specific modes or settings (e.g., MOVIE, MUSIC, GAME, PURE).

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in Section 2.1. Always replace both batteries simultaneously with new AAA batteries to ensure optimal performance.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

If you experience issues with your RC035SR remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Intermittent response.	Weak batteries or obstruction between remote and receiver.	Replace batteries. Ensure a clear line of sight between the remote's IR emitter and the AV Receiver's sensor.
Certain buttons not working.	Dirt or debris under the button.	Clean the remote control as described in Section 4.2. If the issue persists, the button may be damaged.

6. SPECIFICATIONS

Attribute	Detail
Model Number	RC035SR
Brand	INTECHING
Product Dimensions	8.27 x 1.97 x 0.79 inches (21 x 5 x 2 cm)
Item Weight	3.17 ounces (90 grams)
Batteries Required	2 x AAA (not included)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (Marantz AV Receiver)
Special Feature	Ergonomic design
Compatible Marantz AV Receiver Models	NR1508, NR1509, NR1510, NR1608, NR1609, NR1710, SR5012, SR5013, SR5014, SR6012, SR6013

7. WARRANTY AND SUPPORT

7.1 Product Warranty

The INTECHING RC035SR remote control comes with a warranty period of **12 months** from the date of delivery. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, concerns, or technical assistance regarding your remote control, please contact INTECHING customer service. Our well-trained support team is committed to providing professional assistance and will reply to your messages within 24 hours.

You can typically find contact information on the product packaging or through the retailer's website where the product was purchased.

