

[Manuals.plus](#) /

› [Easyfone](#) /

› Easyfone T100 4G Mobile Phone User Manual

## Easyfone T100

# Easyfone T100 4G Mobile Phone User Manual

Model: T100

## 1. INTRODUCTION

The Easyfone T100 4G is a minimalist mobile phone designed for ease of use, particularly suitable for seniors and children. It features essential functionalities, high-quality components, and a simple operating system. Key features include a 2.0-inch HD IPS display with large fonts, loud volume, large buttons with a talking number feature, and a dedicated SOS button for emergencies.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Easyfone T100 Mobile Phone
- 1 x 1500mAh Battery
- 1 x Charger (Power Adapter)
- 1 x USB Cable
- 1 x Charging Dock (Black)
- 1 x User Manual

## 3. DEVICE OVERVIEW

Familiarize yourself with the physical components and interface of your Easyfone T100 mobile phone.

### 3.1 Front and Rear View



**Image 3.1:** Front view of the Easyfone T100 in its charging dock, showing the display and large keypad. The rear view shows the camera and SOS button.

### 3.2 Display and Keypad

# 2.0" HD IPS Display

With Enlarged Fonts and Icons, Easy to Read



**Image 3.2:** The 2.0-inch HD IPS display features enlarged fonts and icons for improved readability. The keypad includes large, easy-to-press buttons.

### 3.3 Enhanced Audio and Hearing Aid Compatibility

## Enhanced Loud & Clear Volume, Easy to Hear M4/T4 Hearing Aid Compatible



**Image 3.3:** The phone is designed with enhanced loud and clear volume, making conversations easier to hear. It is also compatible with M4/T4 hearing aids.

### 3.4 Side Keys and Unlock Switch

# Easy-to-Use Unlock Switch

Slide to unlock the keyboard, say goodbye to complex key combinations unlock



Extra Big Buttons with Talking Number Feature  
Easy for the elderly and prevent accidental touch

**Image 3.4:** The side of the phone features dedicated volume buttons and an easy-to-use slide switch for locking and unlocking the keypad. The large keypad buttons are designed to prevent accidental presses.

## 3.5 SOS Button

# SOS Button for Emergency Help

Emergency Call / Emergency Text / GPS Location Delivery



**Image 3.5:** The rear of the phone features a prominent SOS button. When activated, it can initiate emergency calls, send emergency texts, and deliver GPS location information to pre-set contacts.

## 4. SETUP

### 4.1 Installing the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. Insert your 4G/3G/2G SIM card into the designated SIM slot. Ensure the gold contacts face downwards and the card is correctly oriented.
3. Insert the 1500mAh battery into the battery compartment, aligning the contacts.
4. Replace the back cover, ensuring it clicks securely into place.

### 4.2 Initial Charging

# 1500mAh

## Easy to Charge

Large size charging dock for seniors, Just put it in the stand and start charging!



Standby Time 96H+



USB-Charging



**Image 4.1:** The Easyfone T100 can be charged using the convenient charging dock or directly via a USB cable. The 1500mAh battery provides a standby time of over 96 hours.

1. Connect the charger to a power outlet.
2. Connect the USB cable to the charger and then to the charging dock.
3. Place the Easyfone T100 into the charging dock. Ensure it is seated correctly and the charging indicator appears on the screen.
4. Alternatively, you can connect the USB cable directly to the phone's charging port.
5. Allow the phone to charge fully before first use.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

- To power on: Press and hold the red 'End Call' button until the screen lights up.
- To power off: Press and hold the red 'End Call' button, then confirm 'Power Off' on the screen.

## 5.2 Making and Receiving Calls

- **Making a Call:** Dial the number using the large keypad buttons. The phone features a talking number function that announces each digit as you press it. Press the green 'Call' button to initiate the call.
- **Receiving a Call:** When the phone rings, press the green 'Call' button to answer.
- **Ending a Call:** Press the red 'End Call' button.

## 5.3 Photo Speed Dial

The Easyfone T100 supports 8 photo speed dial buttons. You can assign contacts with photos for quick dialing.

- Navigate to the 'Contacts' or 'Speed Dial' menu.
- Select an empty speed dial slot (e.g., 2-9).
- Assign a contact and, if desired, a photo to that slot.
- To use: Press and hold the assigned number button to dial the contact.

## 5.4 SOS Emergency Function

The SOS button is located on the back of the phone. It is designed for emergency situations.

- **Setting up SOS Contacts:** Access the 'SOS Settings' menu to add up to 5 emergency contacts. These contacts will receive calls and SMS messages when the SOS button is activated.
- **Activating SOS:** In an emergency, press and hold the SOS button for a few seconds. The phone will automatically call the primary SOS contact. If unanswered, it will cycle through the other SOS contacts. It will also send an emergency SMS with your GPS location to all pre-set contacts.

## 5.5 Keypad Lock/Unlock

Use the slide switch on the side of the phone to lock or unlock the keypad, preventing accidental presses.

- Slide the switch downwards to lock the keypad.
- Slide the switch upwards to unlock the keypad.

## 5.6 Volume Adjustment

Use the dedicated volume buttons on the side of the phone to adjust call volume, ringtone volume, and media volume.

- Press the '+' button to increase volume.
- Press the '-' button to decrease volume.

## 5.7 Flashlight

The phone includes a built-in flashlight for convenience.

- Slide the dedicated flashlight switch on the side of the phone to turn the flashlight on or off.

## 5.8 Other Functions

The Easyfone T100 includes useful tools such as an alarm clock, notes with reminders, calculator, calendar, Bluetooth connectivity, and wireless FM radio.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid exposing the phone to extreme temperatures. Charge the battery regularly, but avoid overcharging for extended periods.
- **Storage:** If storing the phone for a long time, charge the battery to about 50% and store it in a cool, dry place.
- **Water Resistance:** This phone is not water-resistant. Avoid exposure to water or high humidity.

## 7. TROUBLESHOOTING

If you encounter issues with your Easyfone T100, refer to the following common problems and solutions:

Problem	Possible Solution
Phone does not power on	Ensure the battery is correctly installed and fully charged. Connect the phone to the charger and try again.
Cannot make or receive calls	Check if the SIM card is properly inserted and activated. Verify that you have network signal. Contact your network provider if necessary.
No sound or low volume during calls	Adjust the call volume using the side volume buttons. Ensure the speaker is not blocked. Check if 'Silent' mode is active.
Ringtone stopped working	Check the sound settings to ensure a ringtone is selected and the volume is not set to zero or silent. Restart the phone.
Phone not charging	Ensure the charger and USB cable are securely connected. Try charging via the dock and directly via USB to identify if the issue is with the dock or cable. Check if the charging port is clean.
SOS function not working	Verify that emergency contacts are correctly set up in the 'SOS Settings'. Ensure the phone has network signal and GPS is active for location sharing.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Easyfone
Model Name	T100
Color	Black
Product Type	Bar Phone (Slider type mentioned in original, but product image is bar phone)
Screen Size	2.0 Inches HD IPS
Resolution	1280 x 720 (Note: This resolution seems high for a 2-inch feature phone, likely a typo in source data, but stated as is)

Feature	Detail
SIM Type	Single SIM
Cellular Technology	4G (LTE), 3G, 2G
Wireless Carrier	Unlocked (Works with all GSM network providers)
Connectivity Technology	Bluetooth
Memory Storage Capacity	64 MB (Flash: 128+64MB)
Battery Capacity	1500mAh Lithium-ion (Included)
Camera	0.3MP
Special Features	SOS Button with GPS, Photo Speed Dial, Large Buttons, Loud Volume (HAC), Flashlight, Wireless FM, MP3/MP4 Support, Charging Dock
Languages Supported	English, French, German, Italian, Spanish, etc.

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or contact Easyfone customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.