



[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Norelco Multigroom Series 8000 Instruction Manual

## PHILIPS MG7796/40

# Philips Norelco Multigroom Series 8000 Instruction Manual

Model: MG7796/40

## 1. PRODUCT OVERVIEW

Enjoy best-in-class styling with our most advanced trimmer. DualCut blades deliver maximum precision for head-to-toe styling. The steel frame and rubber grips deliver superior control and the Lithium-ion battery yields 6 hours of runtime. Trim and style your face, head and body with 22 piece Maximum precision with 2x more blades Easy to maintain Reinforced guards that won't bend or buckle Easy to grip and control Trim and style your face, head and body with 22 piece Maximum precision with 2x more blades Easy to grip and control

## 2. SAFETY INFORMATION

For safe operation, keep the shaver away from water. Clean and dry the shaver regularly to prevent bacterial growth. Apply gentle pressure to minimize the risk of cuts or skin irritation. Charge the device according to the manufacturer's instructions to ensure safety.

*Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.*

## 3. PRODUCT COMPONENTS



The Philips Norelco Multigroom Series 8000 includes the main trimmer unit, a variety of grooming guards and attachments for different hair lengths and body areas, a cleaning brush, charger, and a convenient storage pouch.

## 4. SETUP AND FIRST USE

---

1. **Unpack Contents:** Carefully remove all components from the packaging. Verify that all listed accessories are present.
2. **Initial Charge:** Before first use, fully charge the trimmer. Connect the charger to the trimmer and plug it into a power outlet. The battery indicator will show charging status. A full charge provides approximately 6 hours of runtime.
3. **Attach Desired Guard:** Select the appropriate grooming guard or attachment for your desired hair length or grooming area. Align the attachment with the trimmer head and press firmly until it clicks into place.
4. **Power On:** Press the power button to turn on the trimmer.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. General Trimming Tips

- Ensure hair is clean and dry for best results.
- Always move the trimmer against the direction of hair growth.
- Use light pressure and smooth, even strokes.
- Regularly clean the trimmer head during use to prevent hair buildup.

### 5.2. Using Different Attachments

The Philips Norelco Multigroom Series 8000 comes with various attachments for versatile grooming. Each attachment is designed for specific areas and hair lengths.

- **Hair Trimmer:** Use the wider trimmer blade with the adjustable hair combs for precise hair cutting on the head.
- **Beard & Stubble Trimmer:** Utilize the narrower trimmer blade with the adjustable beard combs for shaping and maintaining facial hair.
- **Precision Trimmer:** For fine lines, contours, and detailing around the beard, mustache, or sideburns.
- **Nose & Ear Trimmer:** Gently insert the nose and ear trimmer into nostrils or ear canals to remove unwanted hair.
- **Body Groomer:** Attach the body shaver or body comb for comfortable and safe trimming of body hair.

### 5.3. Battery Life and Charging

The trimmer features a long-lasting Lithium-ion battery. A full charge provides up to 6 hours of cordless use. The battery indicator light will signal when the battery is low or fully charged. Avoid overcharging by disconnecting the charger once the battery is full.

## 6. MAINTENANCE AND CLEANING

---

- **After Each Use:** Turn off the trimmer and remove the attachment. Use the provided cleaning brush to remove any loose hairs from the trimmer head and attachment.
- **Rinsing:** The trimmer head and attachments are washable. Rinse them under warm running water. Ensure they are completely dry before reattaching or storing. Do not rinse the main body of the trimmer unless specified as fully waterproof.
- **Lubrication:** Periodically apply a small drop of light machine oil (not included) to the trimmer blades to maintain optimal performance and longevity.
- **Storage:** Store the trimmer and all attachments in the provided storage pouch in a dry, cool place.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Trimmer not turning on.	Battery is depleted.	Charge the trimmer fully.
Poor trimming performance.	Blades are clogged with hair or not lubricated.	Clean the blades and attachments thoroughly. Apply a drop of oil to the blades.
Trimmer makes unusual noise.	Attachment not properly secured or internal issue.	Ensure attachment is clicked into place. If noise persists, contact customer support.

---

## 8. SPECIFICATIONS

---

- **Brand:** PHILIPS
- **Model Name:** Series 8000
- **Item Model Number:** MG7796/40
- **Power Source:** Battery Powered (Lithium-ion)
- **Recommended Uses:** Ear, Face, Body
- **Included Components:** Attachment, Battery, Charger, Cleaning Brush
- **Package Dimensions:** 11.54 x 10.55 x 6.22 inches
- **Item Weight:** 2.12 Pounds
- **First Available Date:** November 26, 2021
- **Manufacturer:** Norelco

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the official Philips Norelco website or contact their customer service line. Keep your proof of purchase for any warranty claims.

You may also consider purchasing extended protection plans for your device:

- **3-Year Protection Plan:** [Learn More](#)
- **Complete Protect:** One plan covers all eligible past and future purchases. [Learn More](#)