

[Manuals.plus](#) /

› [Bomann](#) /

› Bomann GS 7243 91L Upright Freezer Instruction Manual

Bomann GS 7243

Bomann GS 7243 91L Upright Freezer Instruction Manual

Model: GS 7243

1. INTRODUCTION

Thank you for choosing the Bomann GS 7243 91L Upright Freezer. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your appliance. Please read these instructions carefully before use and keep them for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation, please observe the following safety guidelines:

- Read all instructions before operating the appliance.
- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- Unplug the appliance before cleaning or performing maintenance.
- This appliance is intended for household use only.

3. PRODUCT OVERVIEW

The Bomann GS 7243 is a compact 91-liter upright freezer designed for efficient food storage. It features a 4-star freezer rating, electronic temperature control, and an acoustic door warning signal.



Figure 3.1: Front view of the Bomann GS 7243 Upright Freezer, highlighting its 91-liter capacity and 4-star freezer rating.



Figure 3.2: Dimensions (58 cm depth, 55 cm width, 85 cm height) and key features including electronic temperature control, energy efficiency, reversible door hinge, LED display, and quick freeze function.

Akustische Alarmfunktion

bei offenstehender Tür oder Temperaturanstieg



Figure 3.3: Interior view with the door open, illustrating the acoustic alarm for open door/temperature rise, reversible door hinge, freezing capacity of 4.4 kg/24h, and a temperature range of -16°C to -22°C.

Stillvolles Design mit

cleverem System und genug Stauraum



Figure 3.4: The freezer interior, featuring three medium-sized drawers, one large drawer, and an included ice cube tray for organized storage.

4 Sterne Gefrierfach

für langfristige Lagerung

Sterne	Temperatur	Lagerdauer
0	3°C bis -4 °C	1 - 2 Tage
*	-6°C bis -12 °C	1 - 3 Tage
**	-12°C bis -18 °C	3 - 14 Tage
***	-18°C	2 - 6 Monate
****	-18°C und weniger	2 - 12 Monate

Figure 3.5: Exterior view emphasizing the stylish design, quiet operation at only 40 dB, and the energy-saving mode for reduced power consumption.

Genug Platz für deine Leckereien

3 mittelgroße & 1 große Schublade



Figure 3.6: Close-up of the digital LED display, providing easy and intuitive control over the freezer settings.

4. INSTALLATION & SETUP

4.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

4.2 Placement

- Place the freezer on a firm, level surface. Use the adjustable feet to ensure stability.
- Allow adequate space around the appliance for proper ventilation (at least 10 cm on sides and back, 30 cm above).
- Avoid direct sunlight, heat sources, or extreme cold. The climate class for this appliance is N/ST, meaning it operates optimally in ambient temperatures between +16°C and +38°C.

4.3 Electrical Connection

Connect the appliance to a properly installed and grounded wall socket. The required connection voltage is 220-240 V ~ / 50 Hz.

4.4 Initial Cleaning

Before first use, clean the interior and exterior of the freezer with a damp cloth and mild detergent. Dry thoroughly.

4.5 Door Hinge Change

The door hinge is reversible, allowing you to change the door opening direction to suit your kitchen layout. Refer to the detailed instructions in the full manual for this procedure.

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

The freezer features electronic temperature control with an LED front display. The temperature range can be set between -16°C and -22°C. Use the control panel to adjust the desired temperature.

5.2 Quick Freeze Function

Activate the quick freeze function when adding a large quantity of fresh food to rapidly lower the temperature and preserve food quality. This function typically deactivates automatically after a set period or when the target temperature is reached.

5.3 Energy Saving Mode

The appliance includes an energy-saving mode to optimize power consumption. Refer to the control panel instructions for activation and deactivation.

5.4 Acoustic Door Warning Signal

An acoustic alarm will sound if the freezer door is left open for an extended period or if the internal temperature rises significantly, helping to prevent food spoilage.

5.5 Star Marking System

The 4-star marking indicates the freezer's ability for long-term storage of frozen foods. Refer to the table below for general storage guidelines:

Einfache Bedienung mit digitalem LED Display



Figure 5.1: Freezer Star Rating and Storage Duration Guide.

Stars	Temperature	Storage Duration
0	3°C to -4°C	1 - 2 Days
*	-6°C to -12°C	1 - 3 Days
**	-12°C to -18°C	3 - 14 Days
***	-18°C	2 - 6 Months
****	-18°C and below	2 - 12 Months

6. MAINTENANCE & CLEANING

6.1 Defrosting

This appliance requires manual defrosting. When a layer of ice approximately 5mm thick has formed, unplug the freezer and allow the ice to melt. Remove defrosted water and dry the interior thoroughly before restarting.

6.2 Cleaning

- Always unplug the freezer before cleaning.
- Clean the interior with a solution of mild detergent and warm water. Avoid abrasive cleaners or solvents.
- Wipe down the exterior with a soft, damp cloth.
- Regularly clean the condenser coils at the back of the appliance to maintain efficiency.

7. TROUBLESHOOTING

If you experience issues with your freezer, consult the following common problems and solutions:

- **Appliance not operating:** Check if the power cord is plugged in correctly and if there is power to the outlet.
- **Temperature not cold enough:** Ensure the door is closed properly. Check if the temperature setting is appropriate. Avoid placing hot food inside.
- **Acoustic alarm sounding:** Close the door firmly. If the alarm persists, check for excessive ice buildup or a significant temperature rise.
- **Excessive noise:** Ensure the appliance is level and not touching a wall or other objects.

For persistent issues not resolved by these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model	GS 7243
Net Capacity	91 Litres
Energy Class	E
Connection Voltage	220-240 V ~ / 50 Hz
Power Consumption	100 W
Climate Class	N/ST (+16°C ~ +38°C)
Coolant	R600a
Operating Noise	40 dB
Energy Consumption / 24h	0.409 kWh
Energy Consumption / Year	166 kWh
Freezing Capacity	4.4 kg/24 h
Storage during Power Failure	12 hours
Dimensions (D x W x H)	58 x 55 x 85 cm
Item Weight	35 kg
Included Components	4 freezer drawers, ice cube tray

9. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09MLTZR6T>

More documents and user manuals: <https://manuals.plus/>