

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROOFULL](#) /

› [ROOFULL External CD DVD Drive UL41-Y Instruction Manual](#)

## ROOFULL UL41-Y

# ROOFULL External CD DVD Drive UL41-Y Instruction Manual

Model: UL41-Y

Overview	Package Contents	Setup	Operation	USB Hub & Card Reader	Compatibility
Power Supply	Region Code	Troubleshooting		Specifications	Warranty & Support

## 1. OVERVIEW

The ROOFULL External CD DVD Drive UL41-Y is a versatile optical drive designed for laptops and desktop computers that lack an internal CD/DVD drive. This device functions as a CD/DVD reader, burner, writer, rewriter, and ripper. It features USB 3.0 and USB-C connectivity, ensuring high-speed data transfer. Additionally, it integrates a 4-port USB hub and a 2-slot SD/TF card reader, expanding your computer's peripheral capabilities. Its ultra-slim and portable design makes it suitable for various environments.



Figure 1: ROOFULL External CD DVD Drive UL41-Y, showcasing its 8-in-1 functionality including CD/DVD drive, 4 USB ports, and SD/TF card reader.


## 2. PACKAGE CONTENTS

---


Verify that all items are present in the package:

- 1 x ROOFULL Multifunction CD/DVD Drive (Model: UL41-Y)
- 1 x USB Power Supply Cord (USB-A to USB-C)
- 1 x User Manual

*Note: Other accessories shown in product images are for demonstration purposes only and are not included.*

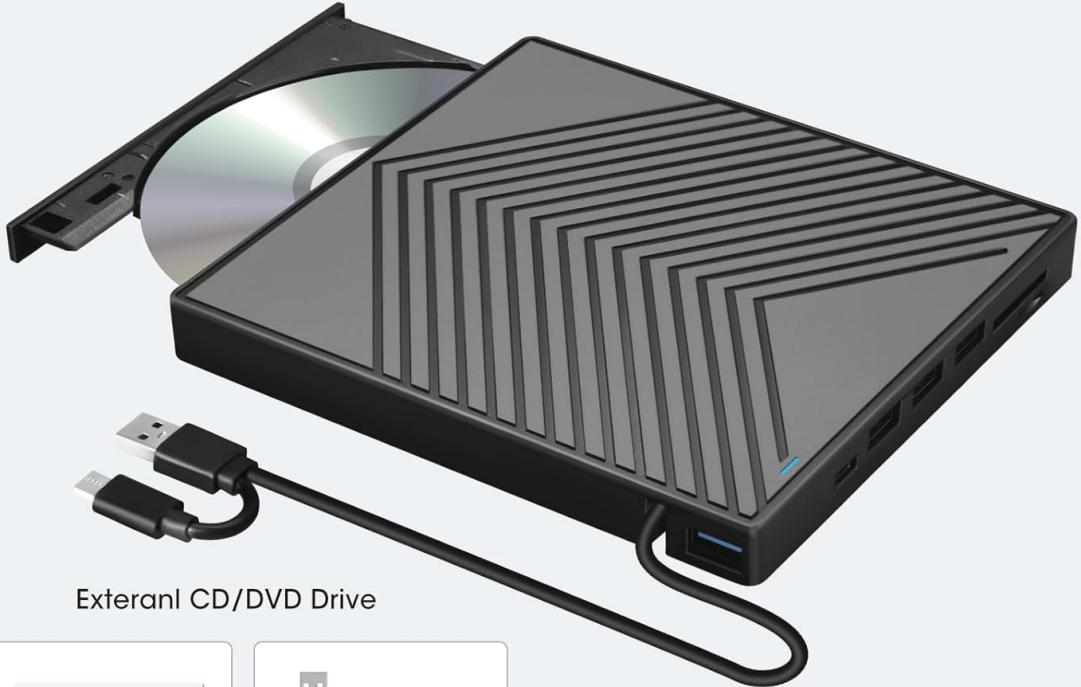

External CD/DVD Drive

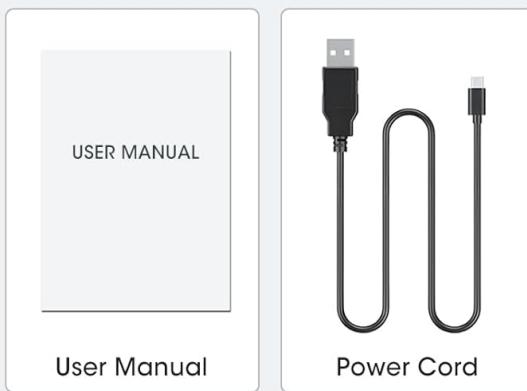

## PACKAGE CONTAINS



*Note: The other accessories shown in the pictures are for demonstration purposes only and are not included.*

Figure 2: Contents of the ROOFULL External CD DVD Drive package, including the drive, USB power supply cord, and user manual.

### 3. SETUP INSTRUCTIONS

Follow these steps to connect and prepare your ROOFULL External CD DVD Drive for use:

- 1. Locate the Data Cable:** The integrated data cable is located at the bottom of the optical drive. Gently pull it out.
- 2. Connect to Computer:** The data cable features both USB-A and USB-C connectors. Plug the appropriate connector into an available USB 3.0 or USB-C port on your laptop or desktop computer.



Figure 3: Connecting the drive to a laptop using either the USB-C or USB 3.0 connector.

**3. Automatic Recognition:**

- For Windows PCs: The drive will be recognized automatically by your operating system.
- For Mac computers: The drive icon will appear on your desktop after a disc is inserted.

**4. Optional Power Supply:** If your computer's USB port does not provide sufficient power, connect the included USB power supply cord from the drive's power port to a USB power adapter or power bank. (The power cord is not a data cable and cannot be used independently).



## Ensure Sufficient Power

If your computer's USB port cannot provide enough power for the drive through a single data cable, use the included power supply cord to ensure proper power supply.

- \* This power cord cannot be used alone
- \* The power adapter in this image is not included

Figure 4: Connecting the optional USB power supply cord to ensure stable operation, especially with low-power USB ports.

Your browser does not support the video tag.

Video 1: Demonstrates the setup and basic usage of the ROOFULL External CD/DVD RW Drive, including connecting the data cable, inserting a disc, and automatic recognition by the operating system.

## 4. OPERATING INSTRUCTIONS

The drive supports reading, burning, writing, re-writing, and ripping CDs and DVDs.

### 4.1. Inserting and Ejecting Discs

- Open the Tray:** Press the eject button on the front of the drive to open the disc tray.
- Insert Disc:** Carefully place a CD or DVD onto the tray, ensuring it is centered and securely fastened on the spindle.
- Close the Tray:** Gently push the tray back into the drive until it clicks shut. The indicator light on the drive will illuminate.
- Eject Disc:**
  - For Windows: Right-click on the drive icon in "This PC" or "My Computer" and select "Eject".
  - For macOS: Right-click the disc icon on the desktop and select "Eject", or go to "File" > "Eject"

from the menu. *Note: Due to macOS limitations, the physical eject button may not function after playing or burning a disc.*

- Manual Ejection: In case of power failure or software issues, locate the small emergency eject hole on the front of the drive. Insert a straightened paperclip into the hole to manually open the tray.

## 4.2. Playing Discs

To play DVDs or music CDs, you will need compatible media player software installed on your computer. Recommended software includes:

- Windows Media Player (Windows)
- Apple Music (macOS)
- VLC Player (Windows, macOS, Linux)

After inserting a disc, open your preferred media player and select the drive to begin playback.

## 4.3. Burning and Ripping Discs

To burn data to blank CDs/DVDs or rip content from discs to your computer, you will need burning or ripping software. Examples include Nero (for burning) or various ripping tools available online.

- **Burning:** Use burning software to select files (music, videos, photos, documents) and write them to a blank CD-R, CD-RW, DVD-R, or DVD-RW disc.
- **Ripping:** Use ripping software to extract audio tracks from music CDs or video content from DVDs and save them to your computer's hard drive.

## 5. INTEGRATED USB HUB & CARD READER

---

The ROOFULL UL41-Y drive includes additional ports for enhanced connectivity:

- **USB 3.0 Port (1x):** For connecting high-speed USB devices.
- **USB 2.0 Ports (3x):** For connecting standard USB devices like mice, keyboards, or flash drives.
- **SD Card Slot (1x):** For reading standard SD cards.
- **Micro-SD Card Slot (1x):** For reading micro-SD (TF) cards.

These ports can be used simultaneously with the CD/DVD drive function, allowing for multi-tasking such as transferring photos from an SD card while burning a DVD.

**ULTRA SLIM** 

0.7 IN  
1.9 CM

Ejection Button

Forced Ejection Hole

6 IN / 15.3 CM

5.6 IN / 14.3 CM

Anti-slip Rubber Pad

10.6 IN / 27 CM

**Data Cable Embedded  
In the Back of Drive**

USB-A Connector

USB-C Connector

Figure 5: The integrated USB hub and card reader on the ROOFULL drive, allowing connection of various peripherals and memory cards.

Your browser does not support the video tag.

Video 2: A short preview video demonstrating the ease of use of the external CD/DVD drive, including inserting a disc and connecting to a laptop. This video is a 7-second preview but is relevant to basic operation.

## 6. COMPATIBILITY

### 6.1. Supported Operating Systems

- Windows: 11, 10, 8.1, 7, Vista, XP, 98, SE, ME, 2000
- macOS: 10.16 and later (including Apple MacBook, iMac, Mac Pro/Studio)
- Linux

### 6.2. Supported Devices

- Laptops
- Desktop PCs
- Notebooks
- All-in-one computers

## 6.3. Supported Disc Types

- CD±R, CD±RW, CD-ROM
- DVD±R, DVD±RW, DVD-RAM
- VCD, SVCD

## 6.4. Unsupported Devices and Disc Types

The drive is NOT compatible with the following:

- Chromebooks
- Phones, iPads/Tablets
- Cars, Projectors, TVs
- PS4/5, Xbox
- Blu-ray and 4K discs



Figure 6: Visual representation of compatible operating systems and devices, along with a list of unsupported devices and disc types.

## 7. POWER SUPPLY

---

The ROOFULL External CD DVD Drive typically draws power directly from your computer's USB port via the integrated data cable. However, some USB ports, especially on older or low-power devices, may not provide sufficient power for stable operation.

If you experience issues such as the drive not being recognized, intermittent operation, or slow performance, connect the included USB power supply cord to the drive's dedicated power port and then to a reliable 5V USB power source (e.g., a USB wall adapter, power bank, or a powered USB hub). The power supply cord is for power only and does not transmit data.



Figure 7: Illustrates connecting the external power supply cord to ensure adequate power for the drive.

## 8. DVD REGION CODE INFORMATION

DVDs are region-coded to restrict playback to specific geographical areas. Your ROOFULL External CD DVD Drive will only play DVDs that use the same region country codes. For example, if you are in the U.S. or Canada, you are in Region 1, and you need to set the DVD drive Region code to #1 to play Region 1 DVDs. CDs are not region-coded.

*Important: Each external optical drive only allows you to change the region code 4-5 times. After that, the region code will be permanently locked to the last setting.*

### DVD Region Codes:

- **Region 1:** Canada, United States
- **Region 2:** Japan, Europe, South Africa, Middle East
- **Region 3:** Southeast Asia, East Asia (including Hong Kong)
- **Region 4:** Australia, New Zealand, Pacific Islands, Central America, Mexico, South America
- **Region 5:** Eastern Europe, Russia, Indian Subcontinent, Africa, North Korea, and Mongolia
- **Region 6:** China
- **Region 7:** Reserved for unspecified special use

- **Region 8:** Air and oceanic travel



Figure 8: Explanation of DVD region codes and their geographical distribution.

## 9. TROUBLESHOOTING

If you encounter issues with your ROOFULL External CD DVD Drive, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drive not recognized by computer.	Insufficient power from USB port; loose connection; incompatible USB port.	<ul style="list-style-type: none"> <li>• Ensure the data cable is securely connected to a USB 3.0 or USB-C port.</li> <li>• Connect the included USB power supply cord to an external power source.</li> <li>• Try a different USB port on your computer.</li> <li>• Restart your computer.</li> </ul>
Disc not reading or playing.	Dirty or scratched disc; incorrect media player software; incompatible disc type; incorrect DVD region code.	<ul style="list-style-type: none"> <li>• Clean the disc with a soft cloth.</li> <li>• Ensure you have appropriate media player software (e.g., VLC Player).</li> <li>• Verify the disc type is supported (no Blu-ray/4K).</li> <li>• Check DVD region code settings if playing a DVD.</li> </ul>
Disc burning failure.	Faulty blank disc; incorrect burning software settings; insufficient power.	<ul style="list-style-type: none"> <li>• Use a high-quality blank CD-R/RW or DVD-R/RW.</li> <li>• Ensure burning software settings are correct (e.g., burning speed).</li> <li>• Connect the USB power supply cord.</li> </ul>

Problem	Possible Cause	Solution
Tray does not open/close smoothly.	Obstruction; mechanical issue.	<ul style="list-style-type: none"><li>Ensure no physical obstructions.</li><li>Use the emergency eject hole with a paperclip if the button fails.</li></ul>

## 10. SPECIFICATIONS

Feature	Detail
Model	UL41-Y
Brand	ROOFULL
Interface	USB 3.0 Type A, USB 3.0 Type C (2-in-1 cable)
Optical Storage Read Speed	Max 24x CD / 8x DVD
Optical Storage Write Speed	Max 24x CD / 8x DVD
Integrated Hub	1x USB 3.0, 3x USB 2.0
Card Reader	1x SD Card Slot, 1x Micro-SD (TF) Card Slot
Dimensions (LxWxH)	5.6 x 5.6 x 0.55 inches (14.3 x 14.3 x 1.4 cm)
Item Weight	10.6 ounces (300g)
Color	Black
Power Supply	USB powered (optional external 5V USB power via included cord)

## 11. WARRANTY AND SUPPORT

ROOFULL offers a comprehensive after-sales service, including up to a 2-year warranty for this product. If you encounter any issues or require technical assistance, please contact ROOFULL customer support. Contact information can typically be found on the official ROOFULL website or through your purchase platform.

For the latest support resources, FAQs, and contact details, please visit the official ROOFULL website or refer to the contact information provided in your product packaging.