

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mellerware](#) /

› [Mellerware Mixy! Multifunction Blender ES9120070L Instruction Manual](#)

Mellerware ES9120070L

Mellerware Mixy! Multifunction Blender ES9120070L Instruction Manual

Model: ES9120070L

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Mellerware Mixy! Multifunction Blender. Retain this manual for future reference.

- Always unplug the appliance from the power outlet before cleaning, assembling, disassembling, or when not in use.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance.
- Avoid contact with moving parts.
- Do not blend hot liquids. Allow hot ingredients to cool before blending to prevent pressure buildup and potential injury.
- Never operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Ensure the lid is securely in place before operating the blender.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always operate the blender on a stable, dry, and level surface.
- Exercise caution when handling the sharp blades, especially when removing the blades from the jug, emptying the jug, and during cleaning.
- Do not overfill the blender jug. Observe the maximum fill line.

2. PRODUCT OVERVIEW AND COMPONENTS

The Mellerware Mixy! Multifunction Blender is designed for efficient blending of various ingredients. Familiarize yourself with its components:

- **Motor Base:** Contains the powerful 1300W motor and control dial.
- **Glass Jug (1.5L):** High-quality glass container for blending.
- **Blade Assembly:** Features 6 high-performance stainless steel blades.
- **Lid:** Secures the jug during operation, often with a removable measuring cup insert.
- **Control Dial:** For selecting speed settings and pulse function.



Image 1: Fully assembled Mellerware Mixy! Multifunction Blender.



Image 2: Exploded view showing the motor base, glass jug, blade assembly, and lid components.

3. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section for detailed instructions.

1. Place the motor base on a clean, dry, and stable surface.
2. Ensure the blade assembly is securely attached to the bottom of the glass jug. Twist until it locks into place.
3. Place the assembled glass jug onto the motor base. Ensure it is seated correctly and firmly.
4. Add your ingredients to the jug. Do not exceed the maximum fill line indicated on the jug.
5. Place the lid securely onto the glass jug. Ensure the lid is properly sealed to prevent splashes during operation.
6. Insert the removable measuring cup into the lid opening, if applicable.
7. Plug the power cord into a suitable electrical outlet.



Image 3: Close-up view of the high-performance blade assembly within the blender jug.

4. OPERATING INSTRUCTIONS

The Mellerware Mixy! Blender features a control dial for selecting speeds and a pulse function.



Image 4: The control dial on the blender base, showing speed settings and pulse function.

4.1 Speed Settings

- Turn the control dial to position '1' for a lower blending speed, suitable for softer ingredients or initial mixing.
- Turn the control dial to position '2' for a higher blending speed, ideal for tougher ingredients or achieving a smoother consistency.
- To stop blending, turn the dial back to the '0' (off) position.

4.2 Pulse Function

- The 'P' (Pulse) setting provides short bursts of maximum power. This is useful for chopping, crushing ice, or when you need more control over the blending process.
- To use the pulse function, turn and hold the dial to the 'P' position. Release the dial to stop.
- Use short pulses to avoid over-processing ingredients.

4.3 Blending Tips

- For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice.

- Cut large ingredients into smaller pieces (approx. 2-3 cm) before blending.
- If ingredients stick to the sides, turn off the blender, unplug it, remove the lid, and use a spatula to push ingredients towards the blades. Never use your hands or utensils while the blender is running.
- Do not operate the blender continuously for more than 60 seconds. Allow the motor to rest for a few minutes between cycles to prevent overheating.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your blender.

5.1 Cleaning the Glass Jug and Blade Assembly

- After each use, unplug the blender and disassemble the jug from the motor base.
- Carefully remove the blade assembly from the bottom of the jug.
- Wash the glass jug, lid, and blade assembly with warm, soapy water. The glass jug is dishwasher safe.
- Exercise extreme caution when cleaning the blades as they are very sharp. Use a brush if necessary.
- Rinse all parts thoroughly and allow them to air dry completely before reassembling or storing.

5.2 Cleaning the Motor Base

- Ensure the motor base is unplugged before cleaning.
- Wipe the exterior of the motor base with a damp cloth. Do not use abrasive cleaners or scourers.
- Never immerse the motor base in water or any other liquid.
- Dry thoroughly with a soft cloth.

6. TROUBLESHOOTING

If you encounter issues with your Mellerware Mixy! Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; jug not correctly assembled; power outage.	Ensure the power cord is securely plugged in. Check if the jug is correctly seated on the motor base. Verify power supply.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use the pulse function or a higher speed.
Blender stops during operation.	Overheating; motor overload.	Unplug the blender and let it cool down for at least 15-20 minutes. Reduce the load or add more liquid before restarting.
Leakage from the jug.	Lid not properly secured; blade assembly not tightened; jug overfilled.	Ensure the lid is firmly in place. Tighten the blade assembly to the jug. Do not exceed the maximum fill line.

If the problem persists after trying these solutions, please contact Mellerware customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model Number	ES9120070L
Power	1300 Watts
Voltage	220 Volts
Capacity	1.5 Liters (Glass Jug)
Dimensions (L x W x H)	17.5 x 17.5 x 39 cm
Weight	3.28 Kilograms
Material	Plastic (Base), Glass (Jug)
Special Features	2 Speeds + Pulse, Anti-splash system, Dishwasher-safe glass jug
Components Included	Blender base, Glass jug, Blade assembly, Lid

8. WARRANTY AND SUPPORT

Mellerware products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Mellerware website.

For technical assistance, spare parts, or any other inquiries, please contact Mellerware customer support through their official channels. Keep your purchase receipt and model number (ES9120070L) handy when contacting support.

© 2023 Mellerware. All rights reserved.

Related Documents - ES9120070L

	<p>Mellerware Executiv Bravissimo II Pro Steam Station User Manual Comprehensive user manual for the Mellerware Executiv Bravissimo II Pro Steam Station (Model 23810), detailing operation, safety warnings, maintenance, and troubleshooting.</p>
	<p>Mellerware Sauty! Frying Pan: User Guide and Safety Information Comprehensive user guide for the Mellerware Sauty frying pan, including essential safety warnings, care instructions, and warranty details. Available in multiple languages.</p>
	<p>Mellerware Mixo Hand Mixer 26450 User Manual and Warranty Information Comprehensive user manual and warranty details for the Mellerware Mixo Hand Mixer (Model 26450), including safety instructions, operating procedures, cleaning, and troubleshooting. Covers extended warranty registration.</p>
	<p>Mellerware Crunchy! Plus Air Fryer User Manual User manual for the Mellerware Crunchy! Plus Air Fryer. Includes safety instructions, operating guide, cleaning, and troubleshooting tips for healthy hot air cooking.</p>
	<p>Mellerware Egg Master 350W Egg Boiler (Model 27006A) - User Manual and Warranty Comprehensive user manual and warranty information for the Mellerware Egg Master 350W Egg Boiler (Model 27006A). Learn how to use, clean, and register your appliance.</p>
	<p>Mellerware Orion II Steam Iron - User Manual and Warranty Information Comprehensive guide to the Mellerware Orion II Steam Iron, covering warranty registration, usage instructions, safety precautions, cleaning, and maintenance. Includes details on the 3-year warranty program and product operation.</p>