

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Arspic](#) /
- › [Arspic Electric Spin Scrubber \(Model AES001\) User Manual](#)

Arspic AES001

Arspic Electric Spin Scrubber (Model AES001) User Manual

1. PRODUCT OVERVIEW

The Arspic Electric Spin Scrubber (Model AES001) is a cordless power cleaning tool designed to simplify various household cleaning tasks. It features two rotating speeds, multiple interchangeable brush heads, and an LED display for battery and mode indication. Its robust design and IPX7 waterproof rating ensure durability and versatility in wet environments.



Figure 1: Arspic Electric Spin Scrubber with included brush heads.

2. PACKAGE CONTENTS

- 1x Arspic Electric Spin Scrubber Unit
- 1x Flat Brush Head
- 1x Corner Brush Head
- 1x Scouring Pad
- 1x Sponge Pad
- 1x Velcro Backer (for pads)
- 1x USB-C Charging Cable
- 1x User Manual

3. SETUP

3.1 Charging the Scrubber

Before first use, fully charge the electric spin scrubber. The unit features a built-in rechargeable battery. Connect the provided USB-C charging cable to the charging port located at the bottom of the handle and plug the other end into a compatible USB power adapter (not included). The LED display will indicate the charging status and battery percentage. A full charge typically takes approximately 2.5 hours and provides 80-100 minutes of continuous operation.

Long Lasting Battery

Enough power for each cleaning without interruption

About 2.5h
Fully Recharged

Max 100min
Runtime

 USB-C Port



Figure 2: Charging the Arspic Electric Spin Scrubber via USB-C port.

3.2 Attaching Brush Heads

To attach a brush head, align the brush head with the rotating shaft on the scrubber unit. Push the brush head onto the shaft and then quickly rotate it in the lock direction until it clicks into place. To remove, quickly rotate in the unlock direction and pull the brush head off.

Easy to Remove Brush Head

Quickly rotate in lock direction and then quickly rotate in unlock direction till to stop position



Figure 3: Instructions for attaching and removing brush heads.

For the scouring pad and sponge, first attach the Velcro backer to the scrubber unit, then press the desired pad onto the Velcro backer.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Speed Selection

Press the power button once to turn on the scrubber in low speed mode (280 revolutions per minute). Press the button a second time to switch to high speed mode (350 revolutions per minute). Press the button a third time to turn the unit off. The LED display will show the current speed mode and remaining battery percentage.

One Button, Dual-Speed

For your health, we suggest you use two different scrubbers in the kitchen and bathroom

tough cleaning

High Speed: 300 RPM

normal cleaning

Low Speed: 240 RPM



Figure 4: LED display indicating speed and battery status.

4.2 General Usage

- Apply appropriate cleaning solution to the surface before scrubbing.
- Hold the scrubber firmly and apply gentle pressure. The high torque motor (up to 45kgf.cm) is designed to maintain speed even with pressure.
- The brush head is safe for use in water due to its IPX7 waterproof rating. **Do not submerge the USB-C charging port in water.**

Brushing While Washing

Note: The brush head is safe to be used in water, but do not let the USB-C charging port submerged in water.



Figure 5: The scrubber's brush head is waterproof for wet cleaning.

4.3 Specific Brush Head Applications

- **Flat Brush:** Ideal for large flat surfaces such as floors, shower walls, counters, and bathtubs.
- **Corner Brush:** Designed for cleaning tile grout, edges, corners, and hard-to-reach areas.
- **Scouring Pad:** Suitable for kitchen grease cleaning, including stovetops, grease-stained walls, and pots.
- **Sponge Pad:** Effective for cleaning glass surfaces.

Multi-purpose Brushes

Keep every coner clean in your kitchen and bathroom



Polishing Cloth



Flat brush



Sponge



Pointed Brush

Figure 6: Various brush heads and their recommended uses.

4.4 Cleaning Demonstrations

How to Effectively Clean Heavy Stains with a Flat Brush

Your browser does not support the video tag.

Video 1: Demonstration of using the flat brush to clean heavy stains on kitchen surfaces.

How to Effectively Clean Tile Grout Dirt

Your browser does not support the video tag.

Video 2: Demonstration of using the scrubber to clean dirt from tile grout.

5. MAINTENANCE

5.1 Cleaning the Scrubber and Brush Heads

- After each use, rinse the brush heads thoroughly with water to remove any cleaning solution or debris.
- Wipe the main scrubber unit with a damp cloth. Ensure the USB-C charging port is dry before storing or recharging.
- Allow all components to air dry completely before reassembling or storing.

5.2 Storage

Store the Arspic Electric Spin Scrubber and its accessories in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Scrubber not turning on:** Ensure the unit is fully charged.
- **Brush head stops rotating under pressure:** The scrubber features an anti-short circuit protection. If excessive pressure is applied or the brush gets stuck on a non-flat surface, it may temporarily stop to prevent damage. Reduce pressure or reposition the brush.
- **Short battery life:** Ensure the unit is fully charged for 2.5 hours. Battery performance can vary based on usage intensity (high speed consumes more power).

7. SPECIFICATIONS

- **Brand:** Arspic
- **Model:** AES001
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Product Dimensions:** 9.05"L x 4.33"W x 1.18"H
- **Item Weight:** 2.2 pounds (approximately 1 Kilogram)
- **Rotating Speeds:** 280 r/min (Low), 350 r/min (High)
- **Torque:** Up to 45kgf.cm
- **Battery:** 1 Lithium Ion battery (included)
- **Charging Time:** Approximately 2.5 hours
- **Runtime:** 80-100 minutes (continuous)
- **Waterproof Level:** IPX7 (brush head only; USB-C port must not be submerged)
- **Charging Port:** USB-C

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Arspic Electric Spin Scrubber, please refer to the contact details provided on the product packaging or the official Arspic website. Keep your purchase receipt for warranty claims.