

[Manuals.plus](#) /

› [Pokémon](#) /

› Pokémon Boy's Digital Quartz Watch POK4322 User Manual

Pokémon POK4322

Pokémon Digital Quartz Watch User Manual

Model: POK4322

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Pokémon Boy's Digital Quartz Watch (Model POK4322). Please read this manual carefully to ensure proper use and longevity of your watch.

PRODUCT OVERVIEW

The Pokémon Digital Quartz Watch features a vibrant digital display and a comfortable silicone strap adorned with popular Pokémon characters. It is designed for ease of use and durability.





Image: Front view of the Pokémon Digital Quartz Watch, displaying "10:10" on its digital screen. The strap features Pikachu at the top and a Poké Ball symbol below the screen.



Image: A close-up of the watch face highlighting the LED display. Text describes it as an "LED WATCH" designed to "Catch every moment with this Pokémon digital LED watch!"





Image: Full length view of the watch, showcasing the silicone strap with various Pokémon characters including Pikachu, Charmander, Squirtle, and Bulbasaur, against a background of Poké Balls.

SETUP

Your Pokémon Digital Quartz Watch comes with a pre-installed CR2032 battery. No initial battery installation is required.

Setting the Time

1. **Display Time:** Press the single button located on the right side of the watch face once to display the current time. The display will light up for a few seconds.
2. **Enter Setting Mode:** While the time is displayed, press and hold the same button for approximately 3-5 seconds until the hour digits begin to flash.
3. **Adjust Hour:** While the hour digits are flashing, press the button repeatedly to advance the hour. The time format is 12-hour with AM/PM indication.
4. **Adjust Minute:** After setting the hour, press and hold the button again for 3-5 seconds until the minute digits begin to flash. Then, press the button repeatedly to advance the minutes.
5. **Exit Setting Mode:** Once the minutes are set, press and hold the button one more time for 3-5 seconds until the digits stop flashing. The time is now set. If no button is pressed for a few seconds during setting, the watch will automatically exit setting mode.

Note: This watch model typically does not have a date setting function. The display is primarily for time.

OPERATING INSTRUCTIONS

Reading the Time

To view the time, simply press the button on the right side of the watch. The digital display will illuminate, showing the current hour and minute. The display will automatically turn off after a few seconds to conserve battery life.



Image: The Pokémon watch worn on a child's wrist, demonstrating its size and fit. The digital display shows "10:10".

MAINTENANCE

General Care

- **Cleaning:** Wipe the watch face and strap with a soft, dry cloth. For stubborn dirt on the silicone strap, a slightly damp cloth can be used, followed by drying.
- **Water Resistance:** This watch is not water-resistant. Avoid exposing it to water, including showering, swimming, or heavy rain, to prevent damage to the internal components.
- **Temperature:** Avoid exposing the watch to extreme temperatures, both hot and cold, as this can affect battery life and display functionality.

Battery Replacement

The watch is powered by one CR2032 coin cell battery. When the display becomes dim or stops working, it's time to replace the battery.

- **Battery Type:** CR2032 (3V Lithium Coin Cell)
- **Procedure:** Battery replacement typically requires opening the watch's back casing. Due to the delicate nature of watch components, it is recommended to have the battery replaced by a qualified watch technician or a professional jeweler to avoid damaging the watch. If attempting yourself, use appropriate watch tools

and ensure the battery is inserted with the correct polarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Battery is low or depleted.	Replace the CR2032 battery (refer to Maintenance section).
Time displayed is incorrect.	Time needs to be reset.	Follow the "Setting the Time" instructions in the Setup section.
Button does not respond.	Button may be stuck or damaged.	Gently press the button multiple times. If it remains unresponsive, contact customer support.
Some LED segments are not lighting up.	Internal display fault.	This indicates a potential manufacturing defect. Contact customer support for assistance.

SPECIFICATIONS

- **Model Number:** POK4322
- **Display Type:** Digital LED
- **Movement:** Quartz
- **Strap Material:** Silicone
- **Battery Type:** 1 x CR2032 (included)
- **Dimensions (Package):** 27.6 x 5.6 x 1.8 cm
- **Weight:** 30 g
- **Manufacturer:** Pokémon
- **Country of Origin:** China

WARRANTY AND SUPPORT

This Pokémon Digital Quartz Watch comes with a **One Year Guarantee** from the date of purchase. This warranty covers manufacturing defects under normal use.

The warranty does not cover:

- Damage caused by improper use or neglect.
- Damage caused by unauthorized repairs or modifications.
- Normal wear and tear, including strap damage or scratches to the watch face.
- Battery replacement.

For warranty claims or technical support, please contact the retailer where the watch was purchased or visit the official Pokémon website for customer service information. Please retain your proof of purchase for warranty validation.

Online Resources: For additional information or updates, you may visit the official Pokémon store page on Amazon: [Pokémon Store](#)