

Russell Hobbs RST800PRO2

Russell Hobbs RST800PRO2 800W 2-Slice Contact Grill Sandwich Maker User Manual

Model: RST800PRO2

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Russell Hobbs RST800PRO2 Contact Grill Sandwich Maker. Keep this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- Do not use outdoors. This appliance is for household use only.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Always place the appliance on a stable, heat-resistant surface.
- **Caution:** Surfaces of the appliance may become hot during use. Use oven mitts or a cloth when handling hot parts.
- Do not use abrasive cleaning agents or sharp objects on the non-stick plates, as this may damage the surface.

2. PRODUCT OVERVIEW

The Russell Hobbs RST800PRO2 is an 800-watt contact grill sandwich maker designed for efficient grilling. It features non-stick plates and a floating hinge for versatile cooking.



Image: Russell Hobbs RST800PRO2 Contact Grill Sandwich Maker in its closed position, showcasing the sleek design and Russell Hobbs logo.



Image: The sandwich maker opened, revealing the ribbed non-stick grill plates on both the top and bottom sections, ready for use.

Key Components:

- **Non-Stick Grill Plates:** For easy food release and cleaning.
- **Floating Hinge:** Adjusts to accommodate various sandwich thicknesses.
- **Power Indicator Light:** Illuminates when the appliance is powered on.
- **Ready Indicator Light:** Illuminates when the appliance has reached the optimal cooking temperature.
- **Cool-Touch Handle:** For safe opening and closing during operation.
- **Anti-Skid Feet:** Provides stability on countertops.



Image: A close-up view of the Russell Hobbs logo and the orange indicator light on the top cover of the sandwich maker, indicating power or readiness.

3. SETUP

1. **Unpacking:** Carefully remove the sandwich maker from its packaging. Retain the packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wipe the non-stick grill plates with a damp cloth or sponge. Dry thoroughly. Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
3. **Placement:** Place the appliance on a flat, stable, and heat-resistant surface, away from walls or cabinets to allow for adequate ventilation. Ensure there is sufficient space around the appliance.
4. **Power Connection:** Ensure your power outlet voltage matches the appliance's rating (230 Volts).

4. OPERATING INSTRUCTIONS

Pre-heating:

1. Close the sandwich maker and plug the power cord into a suitable electrical outlet. The power indicator light will illuminate.

2. Allow the appliance to pre-heat for approximately 3-5 minutes. The ready indicator light will illuminate when the grill plates have reached the optimal cooking temperature.

Cooking:

- 1. Once the ready indicator light illuminates, carefully open the sandwich maker using the cool-touch handle.
- 2. Place your food (e.g., sandwiches, vegetables) onto the bottom grill plate. Do not overfill the appliance.
- 3. Gently close the top grill plate. The floating hinge will adjust to the thickness of your food.
- 4. Cook for 3-8 minutes, or until your food is golden brown and cooked to your preference. Cooking time may vary depending on the type and thickness of the food.
- 5. Periodically check the food by carefully opening the lid.
- 6. When cooking is complete, use a heat-resistant plastic or wooden spatula to remove the food. Do not use metal utensils, as they can damage the non-stick coating.
- 7. Unplug the appliance from the power outlet and allow it to cool completely before cleaning.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your sandwich maker.

- 1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
- 2. **Cleaning Grill Plates:** Wipe the non-stick grill plates with a damp cloth or sponge. For stubborn residue, dampen a cloth with a small amount of cooking oil and wipe the plates, then wipe clean with a damp cloth. Do not use abrasive pads, steel wool, or harsh detergents.
- 3. **Cleaning Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not immerse the appliance in water.
- 4. **Storage:** Once clean and dry, the appliance can be stored in a cool, dry place. The compact design allows for upright storage to save space.

6. TROUBLESHOOTING

If you encounter issues with your sandwich maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in or power outlet issue.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker.
Food is not cooking evenly.	Insufficient pre-heating time or uneven food placement.	Allow the appliance to fully pre-heat until the ready indicator light illuminates. Ensure food is spread evenly on the grill plates.
Smoke or unusual odor during first use.	Protective coatings burning off.	This is normal for first use. Ensure adequate ventilation. If smoke persists, unplug and contact customer service.
Food sticks to the plates.	Plates not properly cleaned or damaged non-stick coating.	Ensure plates are clean before use. Lightly brush plates with cooking oil if necessary. Avoid using metal utensils.

7. SPECIFICATIONS



Image: The sandwich maker opened, displaying its approximate dimensions: 24.69 cm width, 30 cm depth, and 10.49 cm height when closed.

- **Model:** RST800PRO2
- **Brand:** Russell Hobbs
- **Wattage:** 800 Watts
- **Voltage:** 230 Volts
- **Product Dimensions (D x W x H):** 10.5D x 30W x 24.7H Centimeters
- **Item Weight:** 1350 Grams
- **Material:** Plastic (BPA Free)
- **Special Features:** Cool Touch, Non-Stick Coating, Floating Hinge
- **Included Components:** 1 Unit 2 Slice Contact Grill, 1 Unit User Manual cum Warranty Card
- **Country of Origin:** China

8. WARRANTY AND SUPPORT

Your Russell Hobbs RST800PRO2 Contact Grill Sandwich Maker comes with a manufacturer's warranty.

- **Warranty Period:** 2 Years Manufacturer Warranty.
- **Serviceability:** Service centers are available PAN India.

- **Manufacturer/Importer:** Gryphon Appliances Limited
- **Address:** B1/A6, Mohan Co-operative Industrial Estate, New Delhi - 110044, India
- **Customer Care Number:** 18001020107
- **Email:** customercare@gryphonindia.net

Please retain your purchase receipt and warranty card for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question