

Valberg AS0043706

Instruction Manual

VALBERG WASHING MACHINE HOSE

Model: AS0043706

Introduction

This manual provides essential information for the proper installation, operation, and maintenance of your Valberg Washing Machine Hose, model AS0043706. Please read these instructions carefully before use to ensure optimal performance and longevity of the product.

The Valberg Washing Machine Hose is designed as a replacement part for washing machines, ensuring efficient water drainage. It is made of durable plastic material.

Compatibility

This hose is compatible with various washing machine models from brands such as **Valberg** and **Brandt**. Specifically, it is known to fit models like VAL12C47SSC - 349767944.

Before installation, please verify that the dimensions of this hose (Length 47 mm, Outer Diameter 43 mm, Inner Diameter 33 mm) match the requirements of your appliance. If you are unsure about compatibility, please contact customer service for assistance.

Specifications

Feature	Detail
Brand	Valberg
Model Number	AS0043706
Material	Plastic
Length	47 mm
Outer Diameter	43 mm
Inner Diameter	33 mm
Country of Origin	China

Setup and Installation

The Valberg Washing Machine Hose is designed for straightforward replacement. Follow these general

steps for installation:

1. **Safety First:** Before beginning, ensure your washing machine is unplugged from the power outlet and the water supply is turned off.
2. **Drain Residual Water:** Place a shallow pan or towels under the existing hose connection points to catch any residual water.
3. **Remove Old Hose:** Carefully disconnect the old hose from both the washing machine and the drain outlet. You may need a screwdriver or pliers to loosen clamps.
4. **Inspect Connections:** Check the connection points on your washing machine and drain for any debris or damage. Clean if necessary.
5. **Install New Hose:** Connect one end of the new Valberg hose to the washing machine's drain outlet and the other end to your household drain pipe. Ensure a secure fit.
6. **Secure Clamps:** If applicable, use hose clamps (not included) to firmly secure both ends of the hose to prevent leaks.
7. **Test for Leaks:** Turn on the water supply and plug in the washing machine. Run a short cycle and carefully inspect all connections for any signs of leaks.

If you encounter any difficulties or are unsure about the installation process, it is recommended to consult a qualified technician.



Image: Top view of the Valberg Washing Machine Hose, showing its circular opening and ribbed exterior.



Image: Side view of the Valberg Washing Machine Hose, highlighting its cylindrical shape and connection ridges.

Operating Instructions

Once correctly installed, the Valberg Washing Machine Hose operates passively as part of your washing machine's drainage system. It requires no direct user interaction during operation.

- Ensure the hose is not kinked or obstructed, which could impede water flow.
- Verify that the hose is securely connected to both the washing machine and the drain outlet before each use to prevent leaks.
- The hose is designed to withstand typical washing machine drainage pressures and temperatures.

Maintenance

Regular maintenance helps prolong the life of your washing machine hose and prevents potential issues:

- **Regular Inspection:** Periodically check the hose for any signs of wear, cracks, bulges, or leaks, especially near the connection points.
- **Cleanliness:** Ensure the hose and its connections are free from lint, soap residue, or other debris that could cause blockages.
- **Positioning:** Make sure the hose is not pinched, kinked, or bent sharply, as this can restrict water flow and put undue stress on the material.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on the hose, as they can degrade the plastic material.

- **Temperature:** Avoid exposing the hose to extreme temperatures outside of normal washing machine operation.

If any damage is observed, replace the hose immediately to prevent water damage to your property.

Troubleshooting

Here are some common issues and their potential solutions related to the washing machine hose:

- **Leakage at Connections:**

- Ensure hose clamps are tightened securely.
- Check if the hose is properly seated on the connection points.
- Inspect the hose ends for cracks or damage; replace if necessary.

- **Slow Drainage or No Drainage:**

- Check for kinks or sharp bends in the hose that might be obstructing flow.
- Inspect the hose for blockages (e.g., lint, small objects). Disconnect and clear if found.
- Ensure the drain outlet is not clogged.

- **Hose Appears Swollen or Damaged:**

- This indicates material fatigue or excessive pressure. Replace the hose immediately to prevent bursting.

If problems persist after attempting these solutions, it may indicate an issue with the washing machine itself or a need for professional assistance.

Warranty and Support

Information regarding specific warranty terms for the Valberg Washing Machine Hose AS0043706 is not provided in this manual. Please refer to your purchase documentation or contact the retailer/manufacturer directly for warranty details.

For technical support or further inquiries, please contact the customer service of the seller. This product is supplied by a French seller specializing in household appliance spare parts since 1984.

For customer service, please refer to the contact information provided at the point of purchase or on the product packaging.