

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Best Choice Products](#) /

› [Best Choice Products Farmhouse Play Kitchen Toy Instruction Manual, Model SKY6344](#)

## Best Choice Products SKY6344

# Best Choice Products Farmhouse Play Kitchen Toy Instruction Manual

Model: SKY6344

Brand: Best Choice Products

## WELCOME

Thank you for choosing the Best Choice Products Farmhouse Play Kitchen Toy. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Please read these instructions carefully before assembly and retain them for future reference.

## Important Safety Information

**WARNING:** Not for children under 3 years old. This product contains small parts and requires adult assembly. Always supervise children during play. Ensure all fasteners are securely tightened before use and periodically check for any loose components.

This playset is constructed from ASTM & CPSIA-certified materials, including engineered wood with metal components, designed for lasting durability and safe play.

## PRODUCT OVERVIEW

The Best Choice Products Farmhouse Play Kitchen Toy is a wooden pretend play set designed for children. It features a classic farmhouse design with custom 4-paned windows, a pretend stovetop, a spacious oven with realistic clicking knobs, a sink, and a chalkboard.



Image: Front view of the Best Choice Products Farmhouse Play Kitchen Toy, showcasing its white finish, stovetop, sink, oven, and chalkboard.

### **Included Accessories:**

- 3 pretend cooking utensils
- 1 pot
- 1 pan

## 5 Included Accessories

Cook up some fun with 3 pretend cooking utensils, as well as a pot and pan to stir play food in



Image: The five included accessories: a slotted spoon, a spatula, a ladle, a pot with a lid, and a pan with a lid.

### SETUP AND ASSEMBLY

Assembly of the Farmhouse Play Kitchen requires careful attention to the included instruction manual. The playset consists of numerous screws and fasteners to ensure a sturdy construction. It is recommended to have two adults for assembly, though one person can complete it with patience.

1. Unpack all components and verify against the parts list in the separate assembly guide.
2. Follow the step-by-step diagrams and instructions provided in the [Assembly Guide \(PDF\)](#).
3. Ensure all screws and fasteners are tightened securely at each step. Do not overtighten.
4. Once assembled, check the stability of the entire structure before allowing children to play.

# Unique Farmhouse Design

Children will love the detailed design that includes windows and a chalkboard, plus a pretend sink and stove & oven!



Image: A child interacting with the assembled play kitchen, demonstrating its unique farmhouse design with windows and a chalkboard.

For detailed assembly instructions, please refer to the dedicated Assembly Guide provided with your product or download it from the link above.

## OPERATING INSTRUCTIONS

The Farmhouse Play Kitchen is designed for imaginative play. Here's how to use its various features:

- **Stovetop and Oven:** The stovetop burners and oven feature realistic clicking knobs. Children can turn these knobs to simulate cooking and baking. The oven door opens to reveal storage space.
- **Sink:** The pretend sink area allows for imaginative washing of dishes and hands.
- **Chalkboard:** Use standard chalk (not included) on the integrated chalkboard to write menus, grocery lists, or draw pictures. Wipe clean with a damp cloth.
- **Storage Shelves:** Utilize the built-in shelves and the oven compartment for storing play food, accessories, and other toys, promoting an organized play area.

# Durable Build

Crafted with wood and metal accessories that allow your little one to play for years




Image: A close-up view of a child's hands interacting with the pretend sink and faucet, illustrating the durable build of the play kitchen.

# Ample Storage

Space-saving design includes a cabinet that clicks shut, providing room to store your accessories for an easy cleanup



Space  
Saving

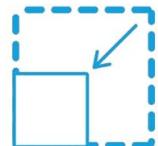

Easy  
Cleanup

Image: The play kitchen with the oven door open, revealing ample storage space inside for toys and accessories, highlighting the space-saving design.

## MAINTENANCE AND CARE

Proper care will extend the life of your play kitchen:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish. For the chalkboard, use a slightly damp cloth to clean chalk residue.
- **Moisture:** As this product is made of wood, avoid prolonged exposure to water or high humidity, which can cause swelling or damage. Promptly wipe up any spills.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary to maintain structural integrity.
- **Storage:** Store the play kitchen in a dry, indoor environment away from direct sunlight or extreme temperatures.

## TROUBLESHOOTING

If you encounter any issues with your play kitchen, please refer to the following common solutions:

Problem	Solution
Loose parts or wobbling structure	Check all screws and fasteners. Tighten any that are loose. Avoid overtightening.
Oven door or cabinet door not closing properly	Inspect hinges and magnetic latches for proper alignment. Adjust if necessary. Ensure no foreign objects are obstructing the closure.
Chalkboard not erasing cleanly	Use a slightly damp cloth to wipe the chalkboard surface. Ensure only standard chalk is used.

If the issue persists or if you encounter problems not listed here, please contact customer support for assistance.

## PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	SKY6344
Product Dimensions (L x W x H)	25" x 13.5" x 35.5"
Item Weight	20 pounds
Recommended Age	3 years and up
Materials	Engineered wood with metal components
Certifications	ASTM F963-17, CPSIA

## Product Dimensions



Image: A diagram illustrating the overall dimensions of the play kitchen for reference.



Image: A gold seal confirming the product meets U.S. Federal Safety Standards, ASTM F963-17, and CPSIA certifications.

## WARRANTY INFORMATION

Best Choice Products offers a limited warranty on its products. For specific details regarding the warranty period and coverage for your Farmhouse Play Kitchen Toy, please refer to the warranty card included with your purchase or visit the official Best Choice Products website.

## SUPPORT AND CONTACT

For further assistance, questions, or to report any issues, please contact Best Choice Products customer support:

- **Online Support:** Visit the [Best Choice Products Store on Amazon](#) for FAQs and contact options.
- **Seller Contact:** You can also contact the seller, Best Choice Products Inc, directly through your Amazon order history.

Please have your model number (SKY6344) and purchase date ready when contacting support.

## Related Documents - SKY6344

	<p><a href="#"><u>Best Choice Products Farmhouse Kitchen Set Instruction Manual</u></a> Instruction manual for the Best Choice Products Farmhouse Kitchen Set (Models SKY6344 + SKY6345), detailing assembly, parts, and safety information.</p>
	<p><a href="#"><u>Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set - SKY6910, 6911, 6912</u></a> Overview of parts and components for the Best Choice Products Pretend Play Corner Kitchen Wooden Toy Set, models SKY6910, SKY6911, and SKY6912. This document outlines the various numbered parts and lettered components that make up the toy kitchen.</p>
	<p><a href="#"><u>Best Choice Products Kitchen Playset Instruction Manual</u></a> Comprehensive instruction manual for assembling the Best Choice Products Kitchen Playset, including parts lists, hardware details, and step-by-step assembly instructions for models SKY5969, SKY6009, SKY6346, SKY6850, SKY6851, SKY6852, and SKY6853.</p>
	<p><a href="#"><u>Best Choice Products Kids Electric Guitar Play Set Instruction Manual</u></a> Official instruction manual for the Best Choice Products Kids Electric Guitar Play Set (SKY3017, SKY3018, SKY7142, SKY7143). Learn how to set up, operate, and maintain your toy guitar, amplifier, and microphone.</p>
	<p><a href="#"><u>Best Choice Products Kids Kitchen Playset Instruction Manual SKY4954</u></a> Detailed instruction manual for assembling the Best Choice Products Kids Kitchen Playset (Model SKY4954). Includes a list of parts, required tools, hardware, step-by-step assembly instructions, and product warranty information.</p>
	<p><a href="#"><u>Best Choice Products 110-Piece Magnetic Building Tiles - Building Examples</u></a> Explore creative building possibilities with the Best Choice Products 110-Piece Multicolor Magnetic Building Tiles. This guide showcases various examples of structures that can be created, encouraging imagination and skill development in children aged 3-8.</p>

