

USARMT AKB76037601

USARMT Universal Remote Control AKB76037601 Instruction Manual

Model: AKB76037601

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your USARMT Universal Remote Control, model AKB76037601. This remote is designed for compatibility with a wide range of LG Smart TVs, including LED, OLED, NanoCell, QNED, LCD, 4K, and 8K UHD HDTV models. It features dedicated buttons for popular streaming services and LG Channels.

2. PRODUCT OVERVIEW

The USARMT AKB76037601 remote control is a pre-programmed device, eliminating the need for complex setup procedures. It is ready for use immediately after battery installation. The remote features a standard layout with numerical keys, navigation controls, volume and channel adjustments, and quick access buttons for Netflix, Prime Video, Disney+, and LG Channels.



Image 2.1: Front view of the USARMT AKB76037601 Universal Remote Control, showing all buttons including power, number pad, navigation, volume, channel, and dedicated app keys.

2.1 Compatible LG TV Models

This remote control is compatible with various LG Smart TV series. A partial list of compatible models includes:

- 32LM577BPUA, 32LM577BZUA, 32LM627BPUA, 32LM637BPUB
- 43LM5770PUA, 43LM6370PUB, 43UP7000PUA, 43UP7670PUC, 43UP8000PUR
- 50UP7670PUC, 50UP8000PUR, 55UP7670PUC, 55UP8000PUR
- 60UP7670PUB, 60UP8000PUR, 65UP7670PUC, 65UP8000PUR

- 70UP7670PUB, 70UP8070PUR, 75UP7670PUB, 75UP8070PUR
- 43UM6950DUB, 49UM7300PUA, 50UN7000PUC, 55UP7000PUA
- 60UM6900PUA, 65UN7000PUD, 65UP7000PUA, 70UM6970PUA, 75UM6970PUB

This remote is designed to work with all LG Smart LED, LCD, OLED, 4K, and 8K TVs.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 3.1: Back view of the remote control, illustrating the battery compartment for AAA batteries.

3.2 Initial Use

This remote control is pre-programmed and does not require any additional setup or pairing. Once batteries are installed, it is ready for immediate use with your compatible LG Smart TV.

4. OPERATING INSTRUCTIONS

Point the remote control directly at your LG TV's infrared receiver for optimal performance. Ensure there are no obstructions between the remote and the TV.

4.1 Basic Functions

- **Power Button (O):** Turns the TV on or off.
- **Number Pad (0-9):** Directly input channel numbers.
- **Volume Up/Down (+/-):** Adjusts the TV's volume level.

- **Channel Up/Down (^/v):** Changes the TV channel.
- **Mute Button (X):** Mutes or unmutes the TV's audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options on the TV screen.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (⬆):** Accesses the TV's Smart Home dashboard.
- **Settings Button (⚙):** Opens the TV's settings menu.

4.2 Dedicated App Keys

The remote includes dedicated buttons for quick access to popular streaming services and LG's native channel platform:

- **Netflix:** Launches the Netflix application.
- **Prime Video:** Launches the Amazon Prime Video application.
- **Disney+:** Launches the Disney+ application.
- **LG Channels:** Launches the LG Channels service.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and TV.	Check battery orientation and replace with fresh AAA batteries. Ensure clear line of sight to the TV's IR receiver.
Specific buttons not working	Dirt or debris under the button. Remote malfunction.	Clean the remote surface. If problem persists, consider replacing the remote.
Remote works intermittently	Low battery power. Interference.	Replace batteries. Move away from strong light sources or other electronic devices that might cause interference.

7. SPECIFICATIONS

- **Model Number:** AKB76037601
- **Brand:** USARMT
- **Dimensions:** 6 x 2 x 0.5 inches (approximately)

- **Item Weight:** 3 ounces (approximately)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatibility:** Universal for LG Smart LED, OLED, NanoCell, QNED, LCD, 4K, 8K UHD HDTVs

8. WARRANTY AND SUPPORT

This product is backed by a 30-Day Hassle-Free Return Policy. For any questions or support, customer inquiries are typically responded to within 1 business day. Please refer to your purchase documentation for specific return procedures or contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question