

SOKANY SK-855

SOKANY Wonder Lint Remover SK-855 User Manual

Model: SK-855

1. INTRODUCTION

Thank you for purchasing the SOKANY Wonder Lint Remover SK-855. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your device. Please read these instructions carefully before first use and retain them for future reference.

2. SAFETY INSTRUCTIONS

- Keep the device out of reach of children.
- Do not use the device on clothing while it is being worn.
- Ensure the protective cap is securely in place when not in use or during cleaning.
- Do not press the blade against the fabric too hard, as this may damage the fabric or the device.
- Avoid using the device on delicate fabrics that may snag easily.
- Do not immerse the device in water or any other liquid.
- Use only the charging cable provided with the device.
- If the device is damaged, do not attempt to repair it yourself. Contact customer support.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your SOKANY Wonder Lint Remover.



Figure 1: SOKANY Wonder Lint Remover SK-855 in its retail packaging, showcasing the product design and brand.



Figure 2: The SOKANY Wonder Lint Remover SK-855, illustrating its key features including a 2.5-hour charging time and both corded and cordless operation capabilities.



Figure 3: The SOKANY Wonder Lint Remover SK-855 with the protective mesh cap detached, revealing the internal stainless steel blades and the lint collection area.

4. SETUP

Before first use, ensure the device is fully charged.

1. **Charging:** Connect the charging cable to the device and a suitable power source. The indicator light will show charging status. A full charge takes approximately 2.5 hours.
2. **Check Components:** Ensure the blade cover is securely attached and the lint collection compartment is empty and properly closed.

5. OPERATION

Follow these steps to effectively remove lint and pilling from your fabrics.

1. **Prepare Fabric:** Lay the garment or fabric flat on a hard, smooth surface. Stretch the fabric taut to ensure a smooth working area.
2. **Power On:** Press the power button to turn on the lint remover.
3. **Remove Lint:** Gently glide the shaver head over the affected area in small, circular motions or straight

strokes. Do not apply excessive pressure.

4. **Monitor Lint Collector:** Periodically check the transparent lint collection compartment. Empty it when it becomes full to maintain optimal performance.
5. **Power Off:** Once finished, press the power button to turn off the device.

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly of the SOKANY Wonder Lint Remover, showing how to attach the blade cover, and then illustrates its use on fabric to remove lint. It also highlights the stainless steel blade material and rechargeable battery operation.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and efficiency of your lint remover.

1. **Power Off:** Always turn off and unplug the device before cleaning.
2. **Remove Lint Collector:** Detach the transparent lint collection compartment.
3. **Empty Lint:** Empty all accumulated lint into a waste bin.
4. **Clean Blades and Mesh:** Use the small cleaning brush provided to carefully remove any remaining lint or debris from the blades and the inner side of the mesh cover. Be cautious around the sharp blades.
5. **Reassemble:** Reattach the lint collection compartment and the blade cover securely.
6. **Storage:** Store the device in a dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your lint remover, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not charged.	Charge the device for 2.5 hours.
Poor lint removal performance.	Lint collector is full or blades are clogged.	Empty the lint collector and clean the blades and mesh.
Device stops during use.	Overheating or low battery.	Allow the device to cool down or recharge the battery.
Fabric damage.	Excessive pressure or unsuitable fabric.	Use gentle pressure and avoid delicate fabrics. Test on an inconspicuous area first.

8. SPECIFICATIONS

- **Model Number:** SK-855
- **Brand:** SOKANY
- **Material:** Plastic (Body), Stainless Steel (Blades)
- **Color:** Multi-color (as per product variant)
- **Product Dimensions (Depth x Width x Height):** 20 x 20 x 15 cm
- **Item Weight:** 350 grams
- **Operating Mode:** Rechargeable Electric (Cord & Cordless)
- **Charging Time:** Approximately 2.5 hours

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.