

[manuals.plus](#) /› [Deerma](#) /› [Deerma DX115C Handheld Vacuum Cleaner User Manual](#)

Deerma DX115C

Deerma DX115C Handheld Vacuum Cleaner User Manual

MODEL: DX115C

1. Introduction

Thank you for purchasing the Deerma DX115C Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient use, assembly, operation, and maintenance of your vacuum cleaner. Please read these instructions thoroughly before first use and retain them for future reference.

2. Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance:

- Ensure the power supply voltage matches the voltage specified on the vacuum cleaner.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Unplug from the electrical outlet when not in use and before cleaning or servicing.
- Do not handle the plug or vacuum cleaner with wet hands.
- Do not vacuum flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filter properly in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent to avoid a hazard.

3. Package Contents

Carefully unpack your Deerma DX115C and check that all items are present and in good condition. The package should include:

- Main Vacuum Unit
- Extension Tube (for stick mode)
- Floor Brush
- Crevice Tool
- Brush Nozzle
- Filter (pre-installed in dust cup)
- User Manual



Figure 3.1: All components of the Deerma DX115C vacuum cleaner, including various attachments.

4. Product Overview

The Deerma DX115C is a versatile vacuum cleaner designed for both handheld and stick operation. It features a powerful motor and a multi-layer filtration system.



Figure 4.1: The Deerma DX115C in its two primary configurations: handheld and stick mode.

Key Parts:

- **Main Unit:** Contains the motor, dust cup, and filter.
- **Power Button:** Located on the main unit for easy operation.
- **Dust Cup:** Transparent container for collecting dust and debris.
- **Filter System:** Multi-layer filtration, including a washable filter.
- **Extension Tube:** Connects the main unit to the floor brush for stick vacuuming.
- **Floor Brush:** For cleaning hard floors and carpets.

- **Crevice Tool:** For narrow spaces and corners.
- **Brush Nozzle:** For upholstery, curtains, and delicate surfaces.

5. Assembly and Setup

5.1 Handheld Mode Assembly

1. Ensure the dust cup and filter are securely attached to the main vacuum unit.
2. Select the desired attachment (crevice tool or brush nozzle) and firmly insert it into the suction opening of the main unit.

5.2 Stick Mode Assembly

1. Attach the extension tube to the main vacuum unit by aligning the connectors and pushing until it clicks into place.
2. Attach the floor brush to the other end of the extension tube, ensuring it is securely fastened.
3. Ensure the dust cup and filter are properly installed in the main unit.



Figure 5.1: Assembling the Deerma DX115C for stick vacuum operation.

6. Operating Instructions

6.1 Powering On/Off

Plug the power cord into a suitable electrical outlet (220V). Press the power button located on the main unit to turn the vacuum cleaner on. Press it again to turn it off.

6.2 Using in Handheld Mode

This mode is ideal for cleaning small spills, car interiors, upholstery, and hard-to-reach areas. Attach the crevice tool for tight spaces or the brush nozzle for delicate surfaces.



Figure 6.1: Handheld operation for cleaning kitchen surfaces.



Figure 6.2: Handheld operation with brush attachment for cleaning upholstery or beds.

6.3 Using in Stick Mode

For larger floor areas, assemble the vacuum in stick mode with the extension tube and floor brush. This configuration is suitable for both hard floors and low-pile carpets.



Figure 6.3: Stick mode operation for cleaning carpeted floors.

7. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

7.1 Emptying the Dust Cup

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Detach the dust cup from the main unit.
3. Open the dust cup and empty its contents into a waste bin.

7.2 Cleaning the Filter

The Deerma DX115C features a washable and reusable filter. Clean the filter regularly to maintain suction power.

1. With the dust cup detached, carefully remove the filter.
2. Rinse the filter under running water until clean. Do not use detergent.

3. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use the vacuum with a wet filter.
4. Reassemble the filter and dust cup onto the main unit.



Figure 7.1: The removable dust cup and filter for cleaning.

7.3 Cleaning Attachments

Wipe attachments with a damp cloth as needed. Ensure they are dry before storage.

8. Troubleshooting

If you encounter issues with your vacuum cleaner, refer to the following table:

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet fault; Power button not pressed	Check power cord connection; Test outlet with another device; Press power button firmly
Low suction power	Dust cup full; Filter clogged; Obstruction in nozzle/hose	Empty dust cup; Clean or replace filter; Remove obstruction
Unusual noise	Obstruction in fan/motor area; Loose parts	Unplug and check for obstructions; Ensure all parts are securely assembled
Overheating	Clogged filter or dust cup; Prolonged use	Clean dust cup and filter; Allow vacuum to cool down before resuming use

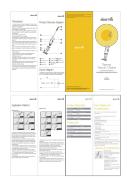
9. Specifications

Feature	Specification
Model	DX115C
Brand	Deerma
Power / Wattage	600 Watts
Voltage	220 Volts
Suction Power	12000 Pa (approx.)
Dust Cup Capacity	1.2 Liters
Noise Level	80 Decibels
Item Weight	1.4 Kilograms
Product Dimensions	20.65 x 12.8 x 101.96 cm
Filter Type	Cartridge (Washable)
Power Source	Corded Electric
Special Features	Lightweight, Portable, 2-in-1 Handheld/Stick

10. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your purchase or contact your local retailer. Keep your purchase receipt as proof of purchase.

Related Documents - DX115C

	<p>Deerma BY200 Suction Vacuum Cleaner & Fabric Scrubber User Manual</p> <p>Comprehensive user manual for the Deerma BY200 Water-suction Sweeper and Fabric Scrubber. Learn about product features, operation, maintenance, and troubleshooting for effective home fabric cleaning.</p>
	<p>Deerma DX115C Vacuum Cleaner User Manual and Guide</p> <p>Comprehensive guide for the Deerma DX115C vacuum cleaner, covering precautions, product structure, application methods, troubleshooting, and maintenance.</p>
	<p>Deerma Vacuum Cleaner DX118C User Manual</p> <p>User manual for the Deerma Vacuum Cleaner DX118C, providing instructions on product structure, application methods, product parameters, packing list, troubleshooting, and cleaning/maintenance.</p>
	<p>Deerma VC20 Plus Handheld Cordless Vacuum Cleaner User Manual</p> <p>Comprehensive user manual for the Deerma VC20 Plus handheld cordless vacuum cleaner. Includes instructions on operation, safety precautions, cleaning, maintenance, troubleshooting, and technical specifications.</p>
	<p>Deerma Spray Mop TB500 User Manual and Instructions</p> <p>Detailed guide for the Deerma Spray Mop TB500, covering structure, warm tips, installation, usage, parameters, and package contents for efficient floor cleaning.</p>
	<p>Deerma Double Roller Wireless Floor Cleaner Manual</p> <p>This manual provides comprehensive instructions for the Deerma Double Roller Wireless Floor Cleaner (DEM-VX96W), covering safety, setup, operation, maintenance, and troubleshooting.</p>