

Owigift FFSS2615TE0

Owigift Refrigerator Ice Maker Installation and Operation Manual

Model: FFSS2615TE0 and Compatible Models

1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before installation and operation. Failure to follow these instructions may result in property damage, personal injury, or death.

- Always disconnect power to the refrigerator before attempting any installation, repair, or maintenance.
- Wear appropriate personal protective equipment, such as gloves and safety glasses.
- Ensure all connections are secure and properly installed to prevent leaks or electrical hazards.
- If you are unsure about any part of the installation process, consult a qualified technician.

2. PRODUCT OVERVIEW

This Owigift Refrigerator Ice Maker is a replacement assembly designed for various Frigidaire, Kenmore, Electrolux, and Crosley refrigerator models. It is engineered to restore ice production functionality to your appliance.

Package Contents:

- 1x Refrigerator Ice Maker Assembly

Compatibility: This ice maker is compatible with a wide range of models. Please verify your refrigerator's model number against the list provided in the product description or contact customer support if you are unsure.



Figure 1: Owigift Refrigerator Ice Maker Assembly. This image shows the complete ice maker unit, including the ice mold, motor, and electrical connector.

3. SETUP AND INSTALLATION

Follow these steps carefully to install your new ice maker. Ensure the refrigerator is unplugged before beginning.

1. **Disconnect Power:** Unplug the refrigerator from the electrical outlet or turn off the circuit breaker supplying power to the refrigerator.
2. **Access Old Ice Maker:** Open the freezer door and locate the existing ice maker. Depending on your refrigerator model, you may need to remove shelves or the ice bucket to gain access.
3. **Remove Old Ice Maker:**
 - Disconnect the electrical harness from the old ice maker.
 - Unscrew any mounting screws holding the ice maker in place. Typically, there are 2-3 screws.
 - Carefully remove the old ice maker assembly.
4. **Inspect New Ice Maker:** Before installation, ensure all components of the new Owigift ice maker are present and undamaged. Verify the ice level arm (shut-off bar) is correctly attached.
5. **Install New Ice Maker:**
 - Position the new ice maker in the freezer compartment, aligning it with the mounting holes.
 - Secure the ice maker with the mounting screws. Do not overtighten.
 - Connect the electrical harness to the new ice maker. Ensure it clicks securely into place.
6. **Restore Power:** Plug the refrigerator back into the electrical outlet or turn on the circuit breaker.
7. **Initial Check:** Listen for the water valve to fill the ice maker. This may take a few minutes.

4. OPERATING INSTRUCTIONS

Once installed, the ice maker will begin its operation cycle. Initial ice production may take several hours.



Figure 2: Top view of the ice maker showing ON/OFF symbols. The switch allows manual control of ice production.

- **Turning On/Off:** The ice maker features a manual ON/OFF switch, typically located on the top or front of the unit. Ensure it is set to the "ON" position for ice production.
- **First Batch of Ice:** Discard the first 1-2 batches of ice to ensure any manufacturing residues are flushed out.
- **Ice Level Arm:** The metal arm (bail arm) controls ice production. When the ice bucket is full, the arm will be pushed up, stopping ice production. Lowering the arm will resume production.
- **Normal Operation:** The ice maker will automatically fill with water, freeze it, and eject the ice into the ice bucket. This cycle repeats as needed.

5. MAINTENANCE

Regular maintenance helps ensure optimal performance and longevity of your ice maker.

- **Cleaning:** Periodically clean the ice bucket with mild soap and warm water. Rinse thoroughly and dry completely before returning it to the freezer.
- **Water Filter:** Ensure your refrigerator's water filter is replaced regularly according to the manufacturer's recommendations. A clogged filter can reduce water flow to the ice maker.

- **Inspect for Ice Buildup:** Occasionally check for excessive ice buildup around the ice maker or in the ice chute, which can obstruct operation.

6. TROUBLESHOOTING

If your ice maker is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
No ice production	Refrigerator not plugged in or power off. Ice maker switch is OFF. Water supply valve closed or kinked. Clogged water filter. Ice level arm is in the UP position.	Check power connection and circuit breaker. Ensure ice maker switch is ON. Verify water supply is open and hose is not kinked. Replace water filter. Lower the ice level arm.
Slow ice production	Low water pressure. Partially clogged water filter. Freezer temperature too high.	Check household water pressure. Replace water filter. Adjust freezer temperature to 0°F (-18°C).
Ice has an unusual taste or odor	Old water filter. Food odors in freezer.	Replace water filter. Clean freezer interior and store food in airtight containers. Discard existing ice.
Ice maker did not include shut-off bar	Missing component.	Contact Owigift customer support for assistance.

If troubleshooting steps do not resolve the issue, please contact Owigift customer support for further assistance.

7. SPECIFICATIONS

- **Brand:** Owigift
- **Model Name:** Refrigerator Ice Maker
- **Part Number (Primary):** FFSS2615TE0
- **Material Type:** Stainless Steel (internal components, not entire housing)
- **Unit Count:** 1
- **UPC:** 718997252943
- **Compatibility:** Aftermarket replacement for select Frigidaire, Kenmore, Electrolux, Crosley models.

8. WARRANTY AND SUPPORT

Limited Warranty: Owigift provides a limited warranty for this product. Please refer to the product packaging or contact Owigift customer support for specific warranty terms and conditions.

Customer Support: If you have any questions regarding installation, operation, compatibility, or require technical assistance, please contact Owigift customer support. We aim to resolve your problem within 24 hours.

For the most up-to-date contact information, please visit the official Owigift website or refer to your purchase

documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question