

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [OWLENZ](#) /

› [OWLENZ 120" Projector Screen User Manual](#)

OWLENZ 120 inch

OWLENZ 120" Projector Screen User Manual

Model: 120 inch

PRODUCT OVERVIEW

The OWLENZ new upgraded projector screen is designed for a superior viewing experience. It features a lightweight and foldable design, making it highly portable. The screen incorporates a soft black material on the back to prevent light transmission, ensuring a clearer projection picture compared to standard double-sided white projection cloths. This design enhances your home theater experience, perfect for sharing movies and sports matches with family and friends.

PACKAGE CONTENTS

- 1 x 120" Projector Screen
- 16 x Hooks
- 16 x Adhesive Strips

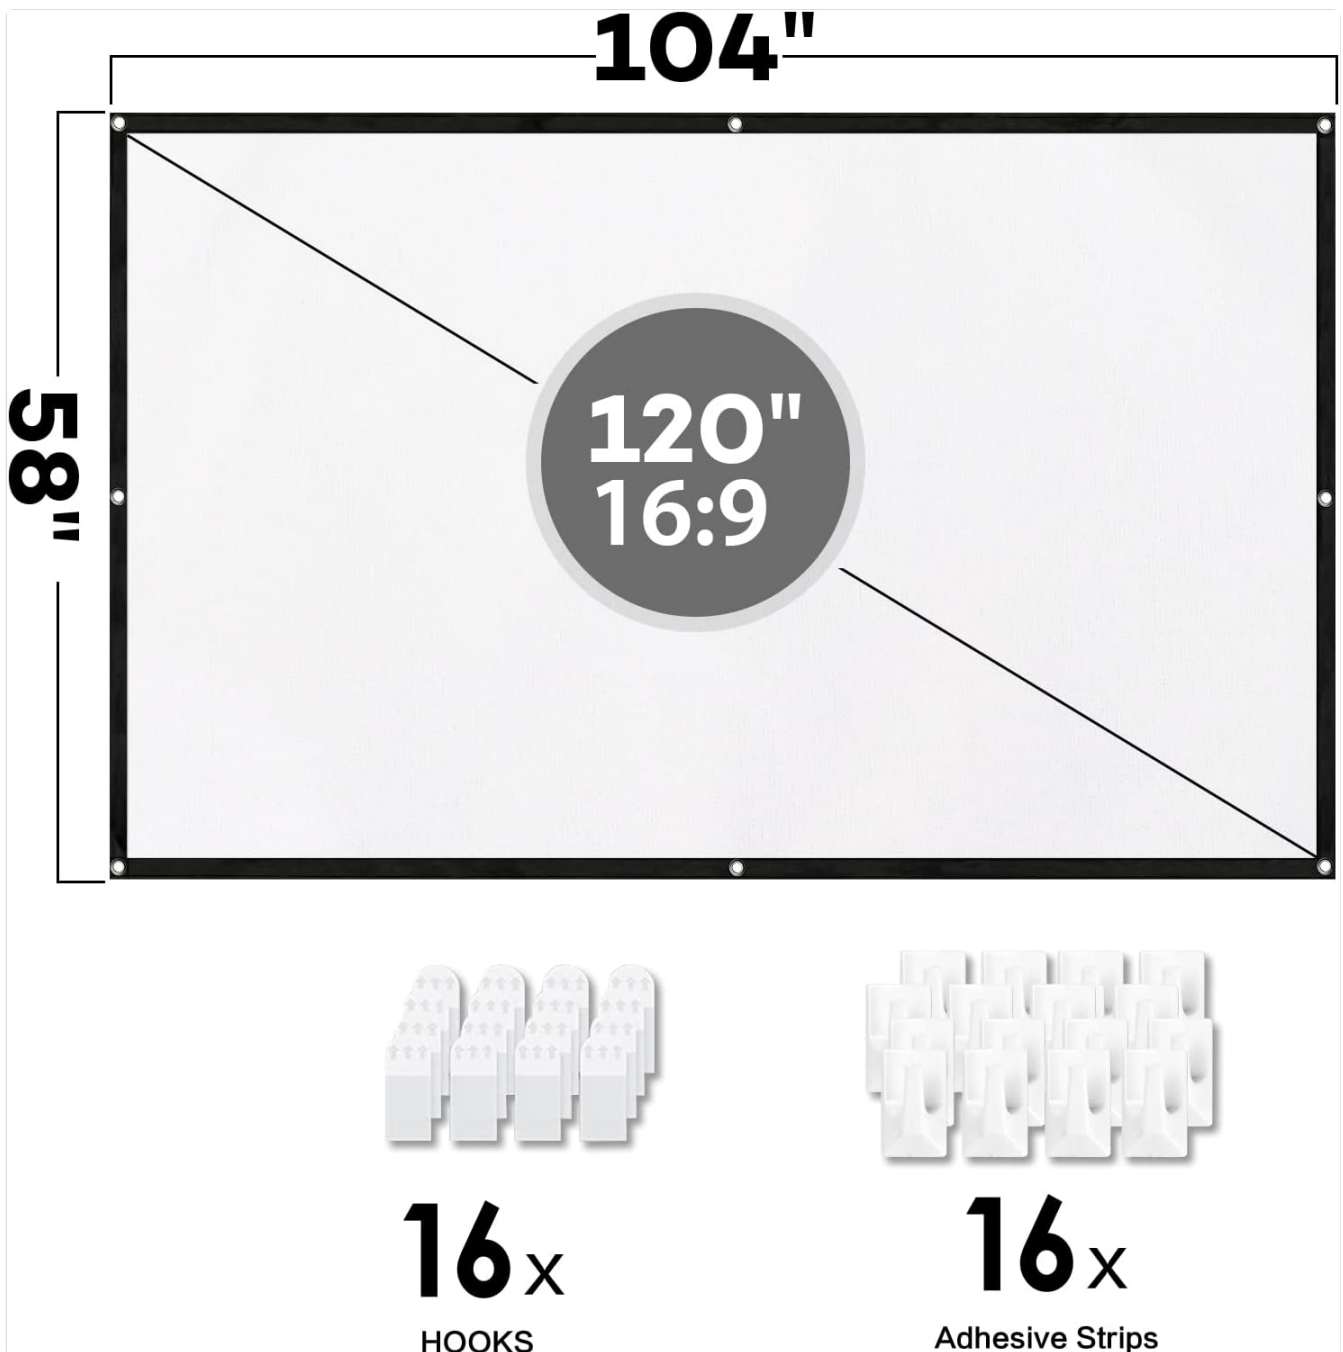


Figure 1: Package contents including the 120-inch screen, 16 hooks, and 16 adhesive strips, along with screen dimensions (104"W x 58"H).

SETUP INSTRUCTIONS

The projector screen is designed for easy installation. Follow these steps to set up your screen:

1. **Unpack the Screen:** Carefully remove the projector screen from its packaging. Note that some wrinkles may be present due to the screen's foldable design and manual sewing. These will lessen with use.
2. **Choose a Flat Surface:** Select a flat wall or suitable surface for installation.
3. **Mark Positions:** Mark the positions for the hooks on your chosen surface. Ensure the marks correspond to the grommets on the screen for proper tension.
4. **Install Hooks:** Use the provided hooks and adhesive strips to secure the screen. The screen can be fastened easily with hooks, ropes, brackets, nails, or double-sided tape on the wall/mount or between trees outdoors.
5. **Hang the Screen:** Begin by hanging the screen using a few hooks. Gently tighten the screen and stick the remaining hooks to the wall, then hang all remaining grommets to flatten the screen.

Install Quickly and Easily

Can use hooks,nails,ropes,double sided tap

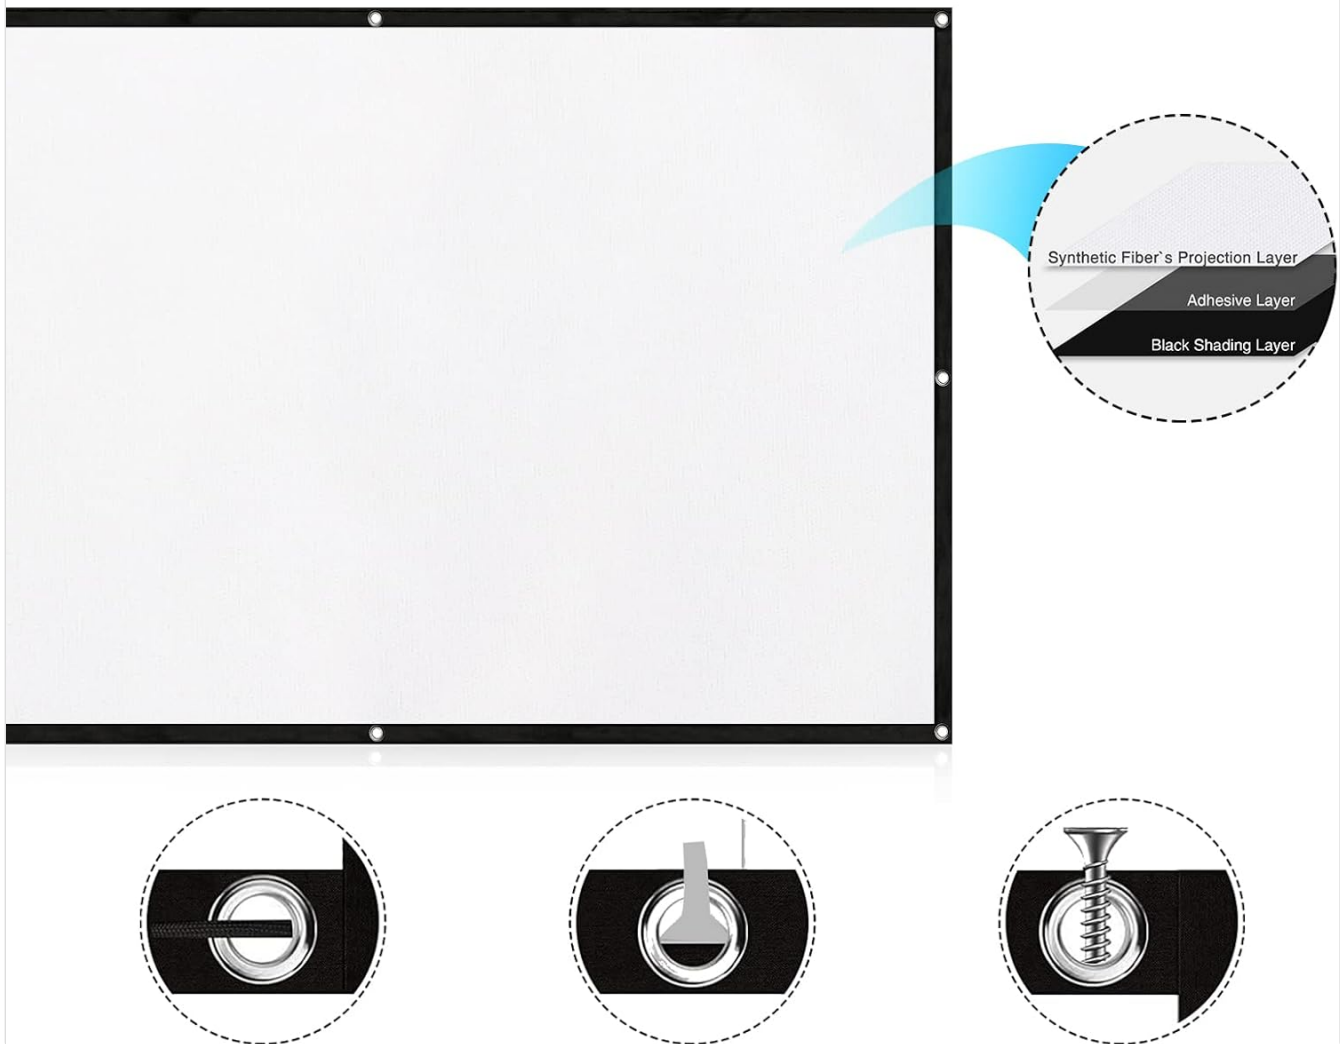 


Figure 2: Various installation methods for the projector screen, showing how hooks, nails, ropes, and double-sided tape can be used.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the portability, wrinkle-free fabric, light-blocking features, and easy installation of the OWLENZ projector screen. It also shows various usage scenarios.

OPERATING THE PROJECTOR SCREEN

The OWLENZ projector screen is designed to provide an optimal viewing experience for various activities. Its 16:9 format and 120-inch diagonal size offer a 104 x 58 inch viewing area, supporting 1080P and 4K HD projection. The screen supports front projection only.


- **Optimal Viewing Angle:** The screen supports a 160-degree viewing angle, allowing for clear images from a wide range of positions.
- **Enhanced Picture Quality:** The black backing material prevents light transmission, significantly improving picture clarity and contrast compared to thinner, transparent screens.
- **Wrinkle-Free Fabric:** Made from 100% natural polyester fabric, the screen is designed to be wrinkle-free after folding or compression, ensuring a smooth projection surface.

OWLENZ Projector Screen

✓ Superb Color



✓ Nothing Gets Through

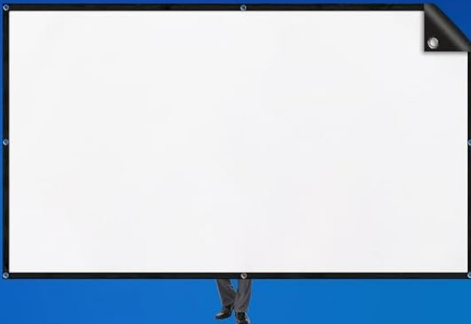

✓ 2x thicker than Other Screens No crease



VS

Other scree

Blurry Image



Thin and Transparent



Thin, wrinkly & easy to rip/material

VS

VS



Figure 3: Comparison highlighting the OWLENZ screen's superior color reproduction and light-blocking capabilities against a typical transparent screen.

ANTI-WRINKLE FABRIC

NO Crease Left When Screen is Compressed or Folded

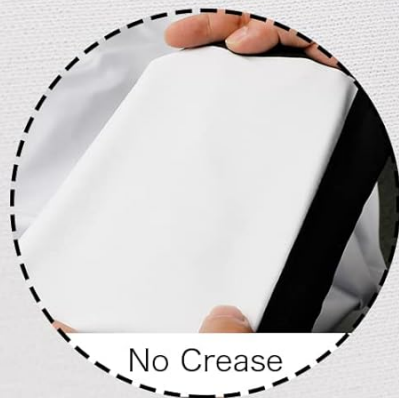 


Figure 4: The anti-wrinkle fabric ensures a smooth surface even after folding or compression.

160° Viewing Angle

you can enjoy the images displayed

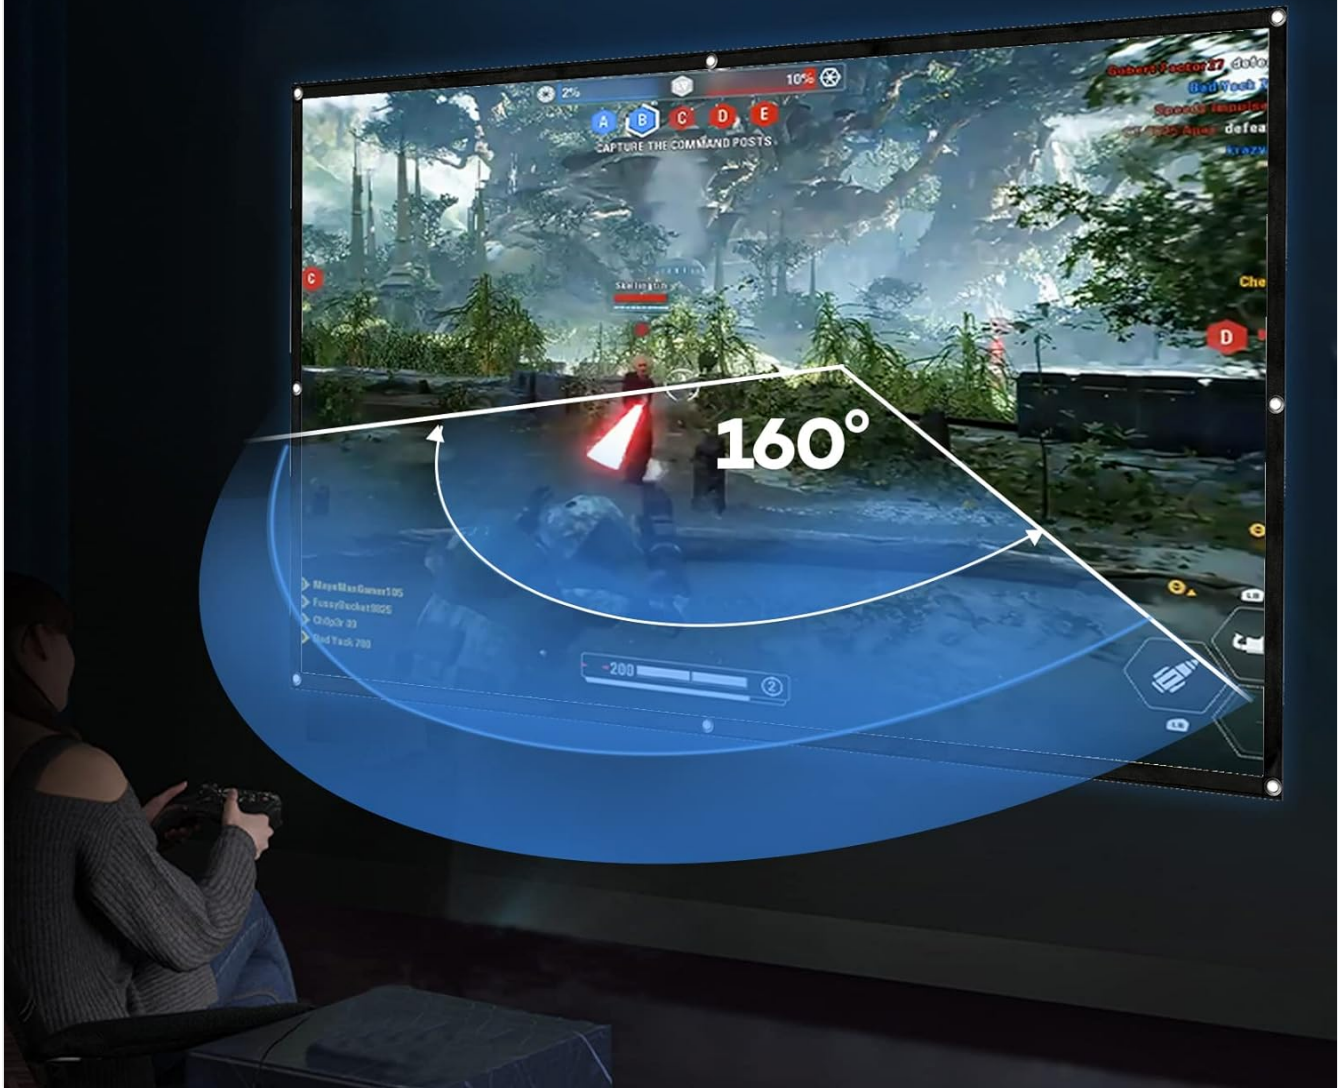 


Figure 5: The 160-degree viewing angle allows for clear images from various positions.

MAINTENANCE

To ensure the longevity and optimal performance of your OWLENZ projector screen, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the screen surface with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or stiff brushes, as these can damage the screen material.
- **Storage:** When not in use, fold the screen carefully and store it in its original packaging or a protective bag to prevent dust accumulation and minimize creasing.
- **Handling:** Always handle the screen by its edges to avoid leaving fingerprints or marks on the viewing surface.

TROUBLESHOOTING

Here are some common issues and their solutions:

- **Wrinkles/Creases:**

Upon first unpacking, some wrinkles may be present. This is normal due to the screen's design and folding. To minimize

wrinkles, install the screen on a flat wall and stretch it tightly using all the provided hooks and adhesive strips. Over time and with proper tension, most wrinkles will become less noticeable.

• **Poor Picture Quality:**

Ensure your projector is properly aligned with the screen and focused. Verify that you are using front projection only, as this screen is not designed for rear projection. Check for any external light sources that might be interfering with the projection, as the black backing is designed to prevent light transmission from behind, not from the front.

• **Hooks Not Sticking:**

Ensure the wall surface is clean, dry, and smooth before applying the adhesive strips. For a more permanent or secure installation, consider using alternative methods like nails or ropes as suggested in the setup instructions.



SPECIFICATIONS





Feature	Detail
Brand	OWLENZ
Model Number	120 inch
Format	16:9 HD
Diagonal Size	120 inches
Viewing Size	104"W x 58"H
Material	Polyester
Viewing Angle	160 degrees
Projection Support	1080P 4K HD Projector (Front Projection ONLY)
Item Weight	2.2 pounds
Mounting Type	Wall Mount

WARRANTY AND SUPPORT

For any questions or concerns regarding your OWLENZ projector screen, please do not hesitate to contact us. We are committed to providing satisfactory customer service within 12 hours of receiving your inquiry. Please refer to your purchase documentation or the retailer's website for specific warranty details and contact information.

Related Documents - 120 inch

	Towond 100-Inch Portable Projector Screen Installation Manual Step-by-step guide for setting up the Towond 100-inch portable projector screen, including accessory identification and assembly instructions.
	Towond 120-Inch Portable Projector Screen Installation Manual Step-by-step guide for installing the Towond 120-inch portable projector screen, including accessory list and assembly instructions.

	<p>TOWOND 180-Inch Outdoor Projector Screen: Installation Manual</p> <p>This document provides a detailed installation manual for the TOWOND 180-inch outdoor projector screen, covering accessory lists, step-by-step setup procedures, and support contact information.</p>
	<p>Fixed Frame Projector Screen Installation and Assembly Manual</p> <p>Comprehensive guide for installing and assembling your fixed frame projector screen. Includes parts list, precautions, and step-by-step instructions for a perfect setup.</p>
	<p>TOWOND 100 Inch Outdoor Projector Screen Installation Guide</p> <p>Step-by-step instructions for assembling and setting up the TOWOND 100-inch portable outdoor projector screen. Includes accessory list and installation tips for home theater and outdoor use.</p>
	<p>Aveli Projection Screen User Manual - Setup and Operation</p> <p>This document provides instructions for setting up and operating Aveli manual and electric projection screens, including important safety information.</p>