

[Manuals.plus](#) /

› [ROADOM](#) /

› Portable CD Player with Speakers, ROADOM CD Players for Home, Bluetooth CD Player with Stereo Sound, Remote Control, Supports CD/Bluetooth/FM Radio/USB Drive/AUX/Timer/Repeat Desktop cd player

ROADOM KC-806

ROADOM Portable CD Player with Speakers

Instruction Manual - Model KC-806

INTRODUCTION

Thank you for choosing the ROADOM Portable CD Player with Speakers. This versatile device offers multiple audio playback options, including CD, Bluetooth, FM Radio, USB, and AUX. Designed for ease of use and high-quality sound, this manual will guide you through its setup, operation, and maintenance.



Figure 1: ROADOM Portable CD Player with Speakers, showcasing its compact design and integrated speakers.

WHAT'S IN THE BOX

- ROADOM CD Player × 1
- USB - Type C Power Cable × 1
- Remote Control × 1
- 5V/2A Power Adapter × 1
- 3.5 mm Male to Male AUX Cable × 1



Figure 2: All components included in the product packaging.

SETUP

1. Power Connection

1. Connect the USB-Type C Power Cable to the CD player's Type-C port.
2. Plug the 5V/2A Power Adapter into a standard wall outlet.
3. Slide the "ON/OFF POWER" switch to the "ON" position to power on the device.

2. Remote Control Setup

- Insert two AAA batteries (not included) into the remote control.

3. Placement

- Place the CD player on a stable, flat surface such as a desktop. Ensure adequate ventilation.



Figure 3: Side panel of the CD player with power switch, USB, and AUX ports clearly labeled.

OPERATING MODES

The ROADOM CD Player supports 8 versatile functions. Use the "MODE" button on the device or remote to switch between modes.

1. CD Mode

Compatible with CD, CD-R, CD-RW, MP3, and WMA formats.

1. Gently open the dust cover.
2. Insert a CD into the player, ensuring it clicks into place.
3. Close the dust cover. The player will automatically begin reading and playing the CD.
4. Use the Play/Pause, Previous, and Next buttons to control playback.



Figure 4: The CD player supports various CD formats for broad compatibility.

2. Bluetooth Transmitting Mode

Connect the CD player to your Bluetooth earphones or speakers to enjoy CD audio wirelessly.

1. Switch the CD player to Bluetooth Transmitting mode.
2. Ensure your Bluetooth earphones or speakers are in pairing mode.
3. The CD player will automatically search and connect to nearby Bluetooth devices.

Bluetooth Transmitting



Figure 5: The CD player can transmit audio to external Bluetooth devices like headphones or speakers.

3. Bluetooth Receiving Mode

Use the CD player as a Bluetooth speaker for your phone, tablet, or computer.

1. Switch the CD player to Bluetooth Receiving mode.
2. On your mobile device, search for "ROADOM CD Player" in the Bluetooth settings and connect.
3. Once connected, audio from your device will play through the CD player's speakers.

Bluetooth Receiving

Act as A Bluetooth Speaker



Figure 6: The CD player can act as a Bluetooth speaker for various smart devices.

4. FM Radio Mode

Tune into your favorite FM radio stations (76.0-108.0MHZ).

1. Switch the CD player to FM Radio mode.
2. Use the "SCAN" button on the remote or device to auto-scan for available stations.
3. Use the Previous/Next buttons to navigate between saved stations.



Figure 7: Enjoy full-band FM radio with the built-in tuner.

5. USB Playback Mode

Play music directly from a USB flash drive.

1. Insert a USB flash drive into the USB port on the side of the player.
2. Switch the CD player to USB mode.
3. The player will automatically detect and play audio files from the USB drive.



Figure 8: The USB port allows for direct playback of music from a U-Disk.

6. AUX Function

Connect external audio devices via the 3.5mm AUX cable.

- **AUX Input:** Connect your phone, computer, or other audio source to the AUX port on the CD player using the provided 3.5mm AUX cable. The CD player will act as a wired speaker.
- **AUX Output:** Connect headphones or external speakers to the AUX port for private listening or enhanced sound.



Figure 9: The AUX port provides both input and output capabilities for wired connections.

7. Timer Function

Set a sleep timer for automatic shutdown.

- Press the "TIMER" button on the remote to cycle through preset timer options (e.g., 30, 60, 90 minutes).
- The player will automatically turn off after the selected time.



Figure 10: The timer function allows for automatic shutdown after a set period.

8. Repeat Function

Control playback repetition for CDs or USB audio.

- Press the "REPEAT" button on the remote to cycle through options:
 - **ONE:** Repeat current track.
 - **ALL:** Repeat all tracks.
 - **SFL (Shuffle):** Play tracks in random order.
 - **A-B:** Repeat a specific segment of a track.



Figure 11: Utilize various repeat modes for customized listening experiences.

MAINTENANCE

- Keep the CD player clean by wiping it with a soft, dry cloth.
- Ensure the dust cover is closed when not in use to prevent dust accumulation on the laser lens.
- Do not touch the laser lens directly.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Player does not power on.	Check if the power cable is securely connected and the power switch is ON. Ensure the power adapter is working.
CD skipping or not reading.	Ensure the CD is clean and free of scratches. Make sure the protection paper is removed from new CDs. Do not touch the laser lens.
Bluetooth pairing fails.	Ensure the CD player is in the correct Bluetooth mode (Transmitting or Receiving). Keep devices within 10 meters. Turn off and on both devices to reset.
No sound from speakers.	Check volume level. Ensure correct mode is selected. If using AUX, check cable connection.

SPECIFICATIONS

- **Model:** KC-806
- **Product Dimensions:** 7.4 x 7.4 x 2.7 inches
- **Item Weight:** 1.32 pounds
- **CD Format Support:** CD, CD-R, CD-RW, MP3, WMA
- **FM Radio Range:** 76.0-108.0MHZ
- **Speaker Type:** Surround, Stereo
- **Speaker Output:** 3W x 2
- **Connectivity Technology:** Bluetooth, Auxiliary, USB

- **Power Supply:** AC100-240V, 50Hz/60Hz
- **Color:** Desktop cd player

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video 1: A detailed overview of the ROADOM Portable CD Player, highlighting its features and functionality.

WARRANTY & SUPPORT

ROADOM products come with a **12-month product warranty**. We also offer **30-day free returns** and **24-hour after-sale service** for any questions or concerns.

For support, please refer to the contact information provided in your purchase documentation or visit the official ROADOM store on Amazon.



Figure 12: ROADOM's commitment to customer satisfaction with warranty and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question