

TECLAST X11

TECLAST X11 2-in-1 Laptop/Tablet User Manual

Model: X11

Brand: TECLAST

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your TECLAST X11 2-in-1 Laptop/Tablet. The TECLAST X11 is a versatile device designed to function as both a portable tablet and a compact laptop, running on Windows 10 Home. It features a 10.1-inch Full HD display, an Intel N4020 processor, 6GB RAM, and 128GB of internal storage.

2. WHAT'S IN THE BOX

- TECLAST X11 Tablet
- Power Adapter
- USB Cable
- User Manual (this document)

Note: The keyboard and stylus pen are sold separately and are not included in the standard package.

3. PRODUCT OVERVIEW

3.1 Key Features

- **2-in-1 Design:** Seamlessly switch between tablet and laptop modes.
- **Display:** 10.1-inch IPS Full HD (1920x1200) touchscreen.
- **Processor:** Intel Gemini Lake Refresh N4020 CPU (up to 2.8GHz).
- **Memory & Storage:** 6GB RAM, 128GB eMMC ROM (expandable up to 256GB via TF card).
- **Operating System:** Pre-installed Windows 10 Home.

- **Connectivity:** Dual-band 2.4G/5G WiFi, Bluetooth 4.2.
- **Cameras:** 5MP rear camera, 2MP front camera.
- **Ports:** USB 3.0, Mini-HDMI, Headphone Jack, DC Port.
- **Kickstand:** Adjustable U-shaped kickstand (0° to 145°).

3.2 Device Layout

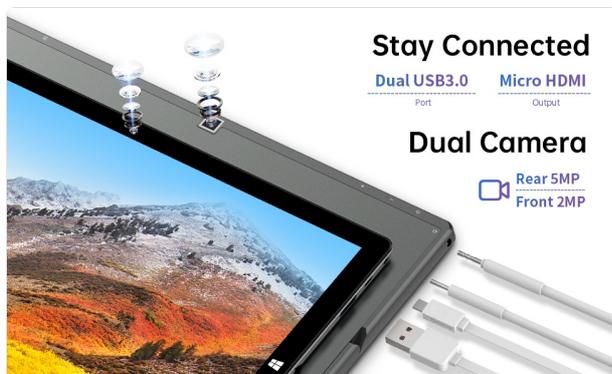


Image: Side view of the TECLAST X11 tablet highlighting the USB 3.0 port, Micro HDMI output, and front/rear cameras.

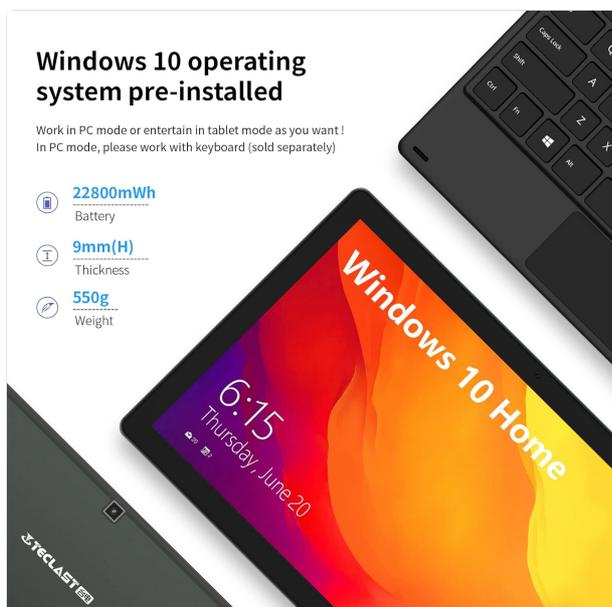


Image: Detailed view of the TECLAST X11's side ports, including USB 3.0, Mini-HDMI, DC power input, and headphone jack.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your TECLAST X11 tablet. Connect the provided power adapter to the DC port on the device and plug it into a power outlet. The charging indicator will illuminate.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.

- **To Power Off:** Press and hold the Power button, then select "Shut down" from the on-screen options. Alternatively, go to Start Menu > Power > Shut down.
- **Sleep Mode:** Briefly press the Power button to put the device into sleep mode or wake it up.

4.3 Initial Windows Setup

Upon first power-on, follow the on-screen instructions to complete the Windows 10 setup process. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.

5. OPERATING INSTRUCTIONS

5.1 Switching Between Modes

The TECLAST X11 is designed for flexibility, allowing you to switch between tablet and laptop modes.

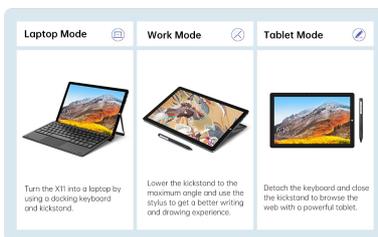


Image: The TECLAST X11 in laptop mode with the keyboard attached and kickstand deployed.

Laptop Mode: Attach the magnetic docking keyboard and deploy the integrated kickstand. The device will automatically detect the keyboard and switch to laptop interface.

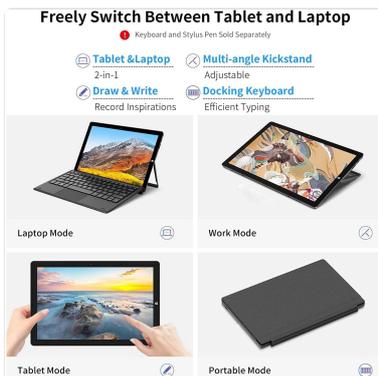


Image: A user holding the TECLAST X11 in tablet mode, interacting with the touchscreen.

Tablet Mode: Detach the keyboard. The device will automatically switch to tablet mode, optimizing the interface for touch input.



Image: Rear view of the TECLAST X11 showing the adjustable kickstand extended.

Kickstand Use: The integrated U-shaped kickstand can be adjusted from 0° to 145° for comfortable viewing or typing angles.

5.2 Using the Touchscreen

The 10.1-inch IPS display supports 10-point multi-touch. Use standard touch gestures for navigation, zooming, and interaction with applications.

5.3 External Connectivity

- **USB 3.0:** Connect external devices such as USB drives, mice, or printers.
- **Mini-HDMI:** Connect to an external monitor or TV for a larger display.
- **Bluetooth 4.2:** Pair with Bluetooth-enabled accessories like headphones or speakers.
- **Wi-Fi:** Connect to wireless networks for internet access. Supports 2.4G and 5G bands.

5.4 Video Demonstration

Your browser does not support the video tag.

Video: An official TECLAST video demonstrating the features and versatility of the X11 Windows tablet with its detachable keyboard and various usage scenarios.

6. MAINTENANCE

6.1 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and exterior surfaces.
- For stubborn marks, slightly dampen the cloth with water or a screen-safe cleaning solution.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

6.2 Battery Care

- To prolong battery life, avoid extreme temperatures.
- Do not leave the device fully charged or fully discharged for extended periods.
- Use only the original or certified compatible charger.

6.3 Software Updates

Regularly check for and install Windows updates to ensure optimal performance, security, and access to the latest features. Go to Start Menu > Settings > Update & Security > Windows Update.

7. TROUBLESHOOTING

Issue	Possible Solution
Device does not power on	Ensure the device is charged. Connect the power adapter and try again. If unresponsive, press and hold the Power button for 10-15 seconds to perform a hard reset.
Wi-Fi connection issues	Check if Wi-Fi is enabled in Windows settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
Keyboard not responding	Ensure the keyboard is securely attached to the magnetic docking port. Restart the tablet. Verify that the keyboard was purchased separately and is compatible.
Slow performance	Close unnecessary applications. Check for Windows updates. Ensure sufficient free storage space. Run a disk cleanup.
Screen rotation not working	Check if auto-rotate is enabled in Windows Action Center (swipe in from the right edge of the screen or click the icon in the taskbar).

8. SPECIFICATIONS

Feature	Detail
Model Name	X11 2-in-1 Tablet
Screen Size	10.1 Inches
Screen Resolution	1920 x 1200 pixels (FHD IPS)
Processor	Intel Gemini Lake Refresh N4020 (1.1GHz - 2.8GHz)
RAM	6 GB DDR4 SDRAM
Hard Drive	128 GB eMMC (expandable up to 256GB via TF card)
Graphics Card	Integrated Intel UHD Graphics 600
Operating System	Windows 10 Home
Wireless Type	Bluetooth 4.2, Dual-band WiFi (2.4G + 5G)
Rear Webcam Resolution	5 MP

Feature	Detail
Front Webcam Resolution	2 MP
Ports	USB 3.0, Mini-HDMI, Headphone Jack, DC Port
Item Weight	2.31 pounds (approximately 1.05 kg)
Batteries	1 Lithium Polymer battery (included)

9. WARRANTY AND SUPPORT

TECLAST provides a **12-month warranty service** for the X11 2-in-1 Laptop/Tablet. If you encounter any issues or have questions regarding your device, please contact TECLAST customer support. Refer to the contact information provided with your product packaging or visit the official TECLAST website for support details.