

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ciciglow](#) /

› [ciciglow Corded Retro Landline Phone with LCD Display \(Model: ciciglowq7pyg8aimf6292\) - User Manual](#)

ciciglow ciciglowq7pyg8aimf6292

ciciglow Corded Retro Landline Phone with LCD Display

Model: ciciglowq7pyg8aimf6292

INTRODUCTION

This manual provides detailed instructions for the ciciglow Corded Retro Landline Phone, Model ciciglowq7pyg8aimf6292. This phone combines a classic aesthetic with modern functionality, offering reliable communication and decorative appeal. Please read this manual thoroughly before operating the device.

PRODUCT FEATURES

- **European Style Design:** A beautifully designed electrical machine that functions as a real basic phone for making and receiving clear voice calls.
- **Telephone Line Power Supply:** Operates without the need for batteries, drawing power directly from the telephone line.
- **Powerful Storage Function:** Stores multiple caller ID records and the last 5 dialed numbers for easy review and redialing.
- **Digital LCD Display:** Shows incoming call numbers, dialed numbers, year, month, day, and current time.
- **One-Key Redial:** Convenient function to redial the last number with a single button press.
- **Adjustable Ringer Volume:** Allows users to set the ringer volume to their preference.

Product Features

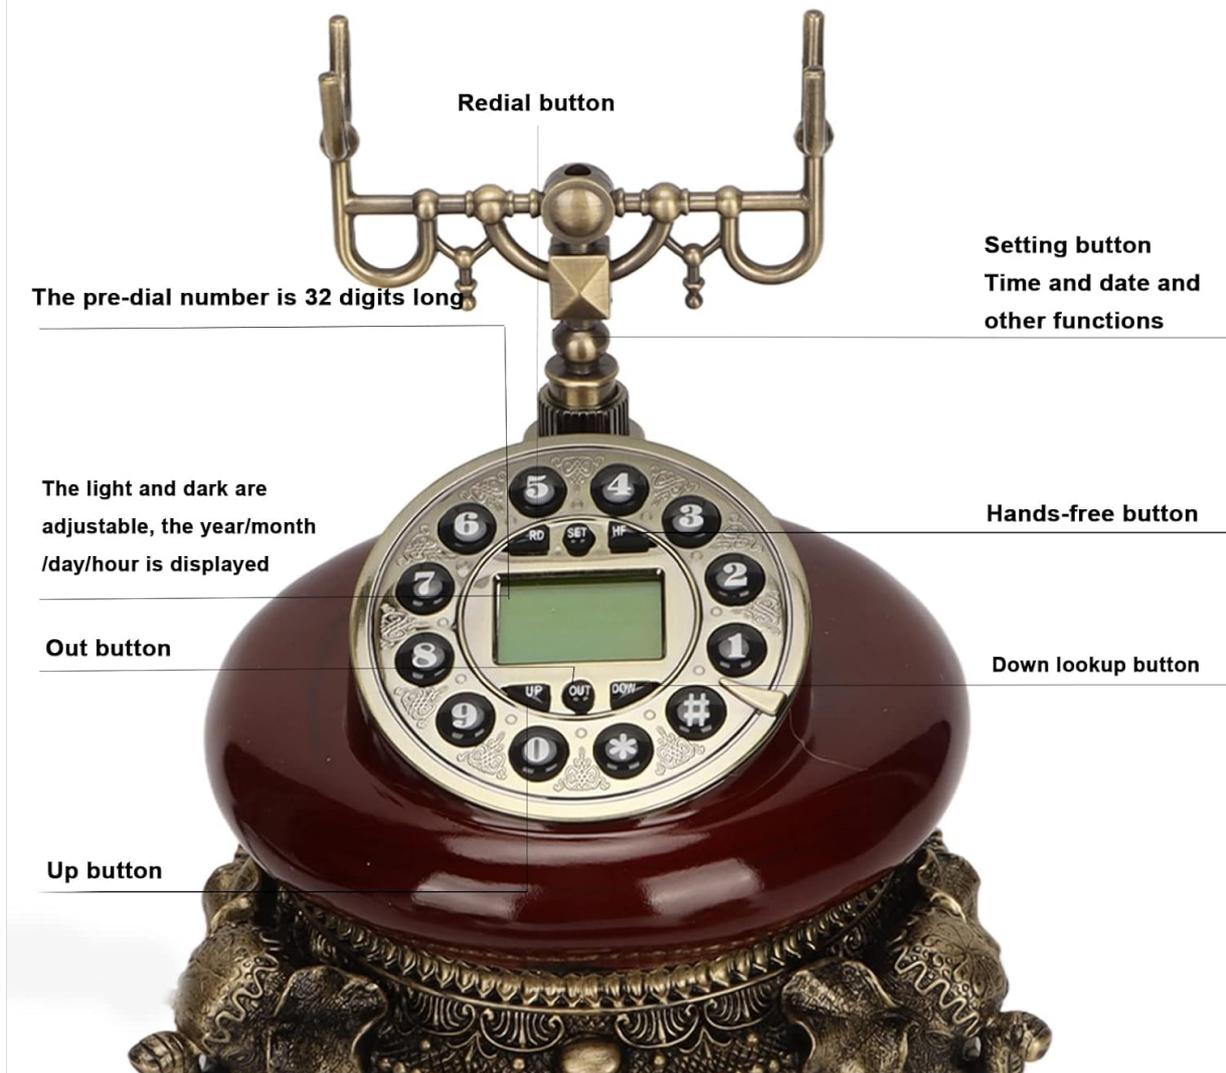


Figure 1: Product Features Overview. This diagram highlights key buttons and display functions on the phone.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Retro Landline Phone Unit
- 1 x Handset
- 1 x Coiled Handset Cord
- 1 x Telephone Line Cord
- 1 x User Manual



Figure 2: Telephone Line Cord. This image shows the standard telephone line cord included for connection.

SETUP INSTRUCTIONS

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the 'HANDSET JACK' port on the back of the phone base.
2. **Connect to Telephone Line:** Plug one end of the telephone line cord into the 'LINE JACK' port on the back of the phone base and the other end into your wall telephone jack.
3. **Adjust Ringer Volume:** Locate the 'RINGER' switch on the back of the phone base. Slide it to 'HI' for high volume or 'LOW' for low volume according to your preference.

Your browser does not support the video tag.

Video 1: Setup and Ringer Volume Adjustment. This video demonstrates how to connect the phone and adjust the ringer volume using the switch on the base.

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset.
2. Wait for the dial tone.
3. Dial the desired phone number using the push buttons on the rotary dial. The number will appear on the LCD screen.
4. Once the call is connected, speak into the mouthpiece and listen through the earpiece.
5. To end the call, place the handset back on the cradle.

Receiving a Call

1. When the phone rings, the LCD display will show the caller ID (if available).
2. Lift the handset to answer the call.
3. To end the call, place the handset back on the cradle.

Redial Function

To redial the last number called:

1. Lift the handset.
2. Press the 'RD' (Redial) button located on the dial pad. The phone will automatically dial the last number.

Your browser does not support the video tag.

Video 2: Redial Function Demonstration. This video illustrates how to use the redial feature on the phone.

Hands-Free Function

To use the hands-free function:

1. Press the 'HF' (Hands-Free) button to activate the speakerphone.
2. You can dial or answer calls without lifting the handset.
3. To adjust the speaker volume during a hands-free call, use the volume buttons (UP/DOWN) on the dial pad.
4. Press the 'HF' button again to end the hands-free call.

Setting Time and Date

The phone's LCD display can show the current year, month, day, and clock. Refer to the 'SET' button on the dial pad and the 'UP'/'DOWN' buttons for navigation and adjustment. Specific steps for setting time and date are typically detailed in the quick start guide included with the product.

Viewing Caller ID and Dialed Numbers

Use the 'UP' and 'DOWN' buttons on the dial pad to scroll through stored caller ID records and the last 5 dialed numbers displayed on the LCD screen.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line not connected properly.	Ensure the telephone line cord is securely plugged into both the phone's 'LINE JACK' and the wall jack.
Cannot hear caller / Caller cannot hear me	Handset cord loose or damaged.	Check that the handset cord is firmly connected to both the handset and the 'HANDSET JACK' on the phone base.
Ringer is too quiet or too loud	Ringer volume switch set incorrectly.	Adjust the 'RINGER' switch on the back of the phone base to 'HI' or 'LOW'.
LCD display is blank	No power from telephone line.	Verify the telephone line connection. The phone is powered by the line and does not require batteries.

SPECIFICATIONS

- **Brand:** ciciglow
- **Model:** ciciglowq7pyg8aimf6292
- **Telephone Type:** Corded
- **Display Type:** LCD
- **Power Source:** Corded Electric (Telephone Line Powered)
- **Batteries Required:** No
- **Caller Identification:** Yes
- **Multiline Operation:** Single-Line Operation
- **Dialer Type:** Single Keypad (Push Button on Rotary Style)
- **Compatible Devices:** Standard telephone devices
- **Material:** Default (as per manufacturer)
- **Parcel Dimensions:** 30.48 x 27.3 x 25.4 cm
- **Item Weight:** 2.29 kg

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or contact ciciglow customer service. Keep your purchase receipt as proof of purchase.

© 2026 ciciglow. All rights reserved.