

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ricokids](#) /

› [Ricokids LOCO 3-Wheel LED Scooter for Children - User Manual](#)

Ricokids LOCO

Ricokids LOCO 3-Wheel LED Scooter for Children - User Manual

Model: LOCO

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Ricokids LOCO 3-Wheel LED Scooter. This manual provides essential information for the safe assembly, operation, and maintenance of your scooter. Please read it carefully before first use and keep it for future reference.

Important Safety Warnings:

- **Adult Supervision Required:** Always ensure children are supervised by an adult while using the scooter.
- **Protective Gear:** Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- **Weight Limit:** Do not exceed the maximum weight capacity of 25 kg (55 lbs).
- **Age Recommendation:** Suitable for children (older child age group).
- **Safe Environment:** Use the scooter on smooth, dry, and level surfaces away from traffic, steep hills, and water. Avoid uneven terrain, sand, gravel, or wet surfaces.
- **Braking:** Familiarize yourself with the rear brake mechanism before riding.
- **Regular Checks:** Before each use, check that all components are securely fastened and in good working order.



Image 1.1: The Ricokids LOCO 3-Wheel LED Scooter, showcasing its light blue design and three-wheel stability.

2. PRODUCT OVERVIEW AND FEATURES

The Ricokids LOCO scooter is designed for stability and fun, featuring a three-wheel design and integrated LED lights in the wheels.

Key Features:

- **LED Light-Up Wheels:** Integrated colorful LED lights in the wheels activate during motion, adding a fun visual element.
- **Adjustable Handlebar:** The aluminum handlebar can be adjusted to 3 different height levels to accommodate

growing children.

- **Durable Construction:** Made with an aluminum frame and durable rubber wheels (front: 120mm, rear: 80mm).
- **Wide, Anti-Slip Deck:** Provides a secure and stable platform for the rider.
- **Comfortable Grips:** Practical, shock-absorbing, and anti-slip handles for better control and comfort.
- **Rear Brake:** Equipped with a rear brake for effective stopping.
- **Foldable Design:** For easy storage and transport.



Image 2.1: Detail of the scooter's front wheels with integrated LED lights.



Image 2.2: Ergonomic and anti-slip handlebar grips for comfortable handling.



Image 2.3: The wide, anti-slip deck featuring the Ricokids brand logo.

3. SETUP AND ASSEMBLY

The Ricokids LOCO scooter comes partially assembled. Follow these steps to prepare it for use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Unfold (if applicable):** If the scooter is in a folded state, release the folding mechanism (usually a lever or button near the base of the handlebar stem) and extend the handlebar stem until it locks into place. Ensure it is fully locked before proceeding.
3. **Adjust Handlebar Height:** Locate the height adjustment clamp on the handlebar stem. Open the clamp, adjust the handlebar to one of the three desired height levels, ensuring the locking pin engages, then securely close the clamp. The handlebar should be at hip level for the rider.
4. **Check Connections:** Verify that all screws, bolts, and quick-release mechanisms are tight and secure.
5. **Inspect Wheels:** Ensure wheels spin freely and are properly attached.

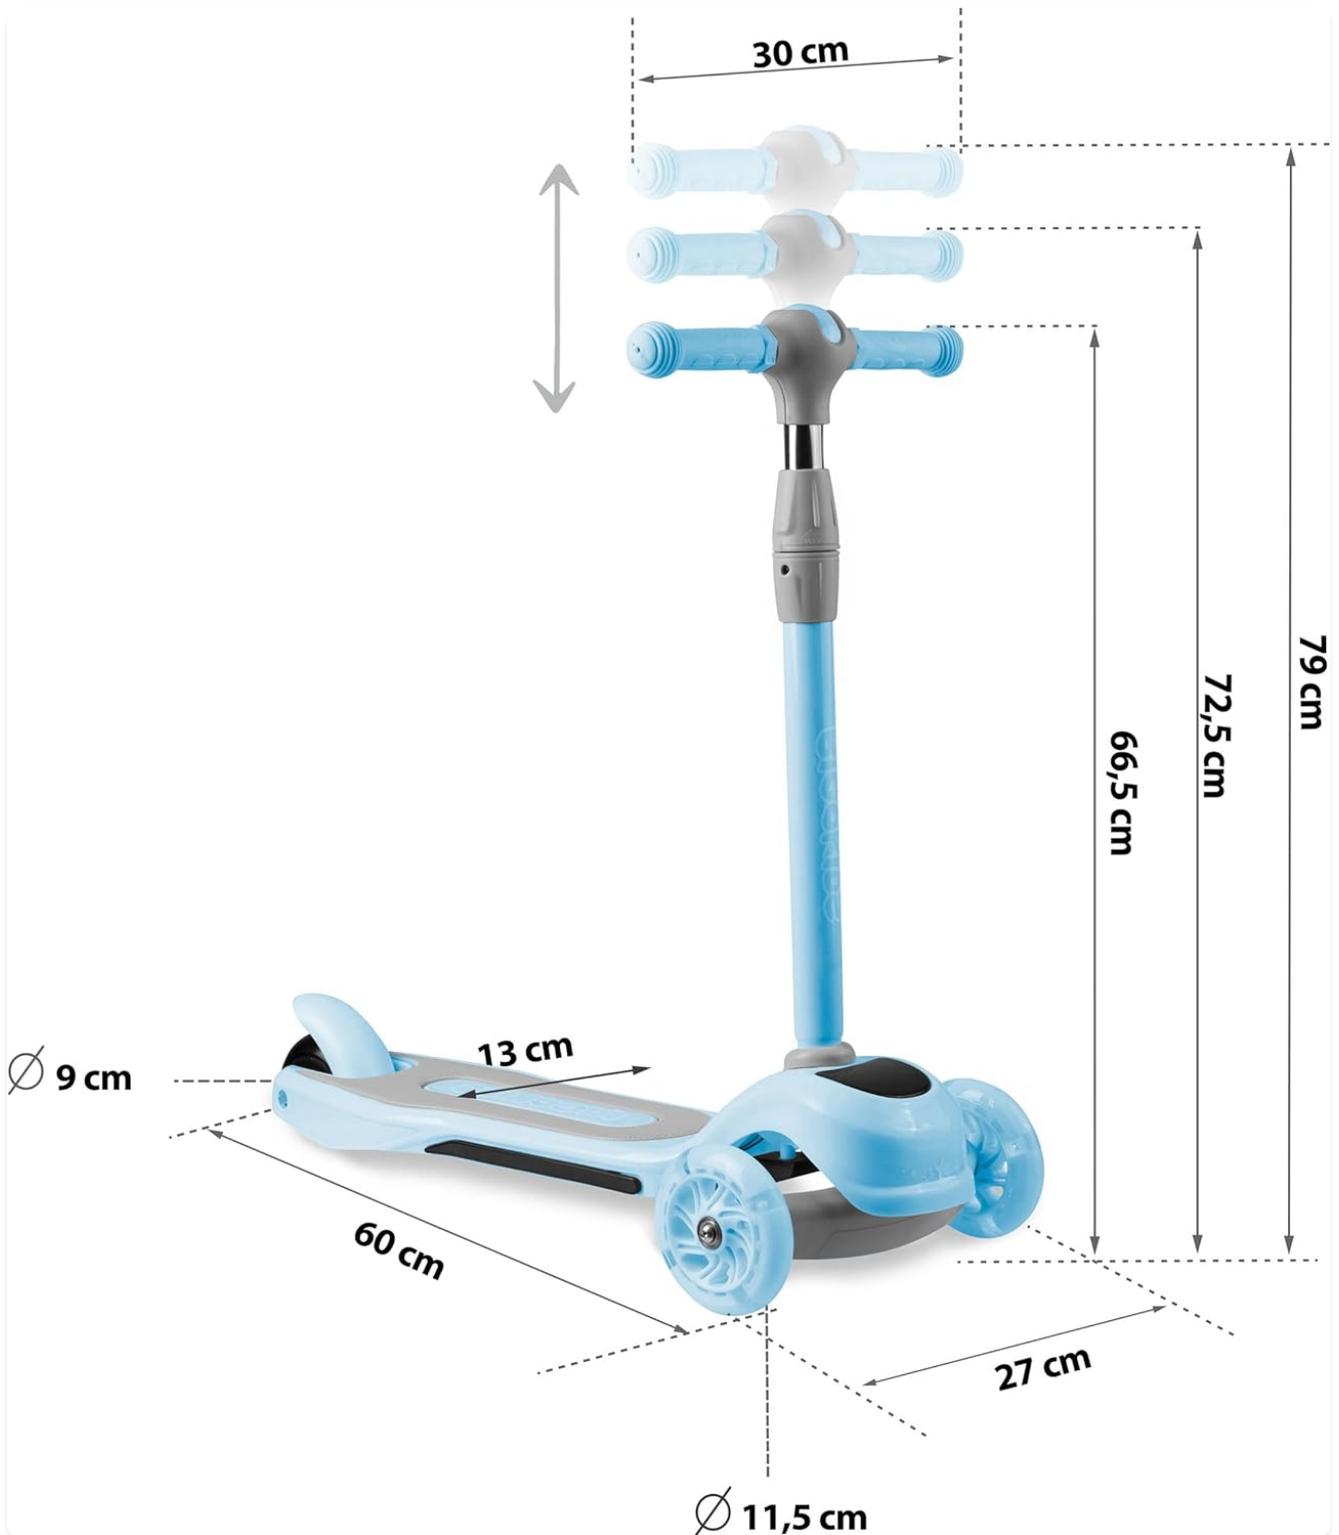


Image 3.1: Scooter dimensions and handlebar height adjustment range (66.5 cm, 72.5 cm, 79 cm).

4. OPERATING INSTRUCTIONS

Once assembled and checked, the Ricokids LOCO scooter is ready for use. Always ensure the rider is wearing appropriate safety gear.

Riding the Scooter:

- **Starting:** Place one foot firmly on the anti-slip deck. Use the other foot to push off the ground to gain momentum.

- **Steering:** The Ricokids LOCO scooter uses a lean-to-steer mechanism. To turn, lean your body in the desired direction (left or right) while gently turning the handlebar. This design enhances stability and balance.
- **Braking:** To slow down or stop, press down firmly on the rear brake pedal with your foot. Practice braking at low speeds first.
- **LED Wheels:** The LED lights in the wheels will illuminate automatically when the wheels are in motion, powered by kinetic energy.



Image 4.1: A child riding the Ricokids scooter with adult supervision.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe the scooter clean with a damp cloth. Avoid using harsh chemicals or abrasive cleaners. Do not hose down or immerse the scooter in water.
- **Wheel Inspection:** Periodically check the wheels for wear and tear. Ensure they spin freely and are free from debris. The LED lights are powered by wheel rotation and do not require batteries.
- **Fastener Checks:** Regularly inspect all bolts, nuts, and screws to ensure they are tight. Tighten any loose fasteners.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.
- **Brake Check:** Ensure the rear brake is functioning correctly and provides adequate stopping power.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Wheels not lighting up:** Ensure the wheels are spinning fast enough. The LEDs are kinetic-powered and require sufficient rotation to light up. Check for any debris obstructing wheel movement.
- **Scooter difficult to steer:** Check that the handlebar is securely fastened and not loose. Ensure the steering mechanism is free from obstructions. The scooter steers by leaning, so encourage the rider to lean into turns.
- **Squeaking noises:** This may indicate loose parts or a need for cleaning. Check all fasteners and clean the wheel axles if necessary.
- **Brake not effective:** Inspect the rear brake for wear. Ensure it is clean and free from dirt or debris that might reduce friction.

7. SPECIFICATIONS

Feature	Detail
Brand	Ricokids
Model Name	LOCO
Color	Light Blue
Number of Wheels	3
Frame Material	Aluminum
Wheel Material	Rubber
Front Wheel Diameter	120 mm
Rear Wheel Diameter	80 mm
Handlebar Type	Adjustable (3 levels)
Adjustable Handlebar Heights	66.5 cm, 72.5 cm, 79 cm
Brakes	Rear braking
Special Feature	Anti-slip surface, LED light-up wheels
Maximum Weight Capacity	25 Kilograms (55 lbs)
Product Dimensions (L x W x H)	60 x 30 x 79 cm (23.6 x 11.8 x 31.1 inches)
Product Weight	2.58 Kilograms (5.69 lbs)
Compliance	Conforms to EN 71 standard

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Ricokids customer service through your original point of purchase or visit the official Ricokids website. Please retain your proof of purchase for any warranty claims.