

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Power Zone](#) /

> [Power Zone PowerZone DF1015 Oscillating Parabolic Heater User Manual](#)

Power Zone DF1015

Power Zone DF1015 Oscillating Parabolic Heater User Manual

Model: DF1015 | Brand: Power Zone

1. INTRODUCTION

Thank you for choosing the Power Zone DF1015 Oscillating Parabolic Heater. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new heater. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Front view of the Power Zone DF1015 Oscillating Parabolic Heater.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an automatic overheat protection system and a safety tip-over switch for enhanced safety.

3. PRODUCT FEATURES

- 400/800W Heat settings
- Infrared halogen element heating technology warms space quickly, evenly & efficiently
- Parabolic head for greater heat deflection
- 75-degree Full room oscillation
- 2-Prong polarized plug
- 2 Hour timer
- Automatic overheat protection system & safety tip-over switch



Figure 2: Packaging highlighting key features of the heater.

4. SETUP

1. Unpack the heater from its packaging. Ensure all components are present and undamaged.
2. Place the heater on a firm, level surface. Avoid placing it on soft surfaces like carpets or rugs that could block air intakes.
3. Ensure the heater is at least 3 feet (0.9 m) away from any combustible materials.
4. Plug the 2-prong polarized plug directly into a 120V AC wall outlet. Do not use extension cords or power strips.

5. OPERATING INSTRUCTIONS

Your Power Zone DF1015 heater features simple manual controls for heat settings, oscillation, and a timer.

Your browser does not support the video tag.

Video 1: Demonstration of the Power Zone Space Heater's operation, including heat settings and oscillation.

5.1. Power and Heat Settings

- Locate the power/heat setting knob on the front of the heater.
- Turn the knob to 'LOW' for 400W heat output.
- Turn the knob to 'HIGH' for 800W heat output.
- To turn off the heater, turn the knob to 'OFF'.

5.2. Oscillation Function

- The heater features a 75-degree full room oscillation to distribute heat evenly.
- Locate the oscillation control knob.
- Turn the knob to 'OSC' to activate the oscillating function.
- Turn the knob to 'STILL' to stop oscillation and direct heat in a fixed direction.

5.3. Timer Function

- The heater includes a 2-hour timer.
- Turn the timer knob to set the desired operating duration up to 2 hours. The heater will automatically shut off once the set time expires.

Your browser does not support the video tag.

Video 2: Overview of the Power Zone Oscillating Parabolic Heater's quick heating and control features.

6. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your heater.

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or any other liquid.
- Clean the air intake and exhaust openings regularly with a vacuum cleaner attachment to remove dust and lint.
- Store the heater in a cool, dry place when not in use.

7. TROUBLESHOOTING

If your heater is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; Power outlet malfunction; Overheat protection activated; Tip-over switch activated.	Ensure plug is firmly in outlet; Check circuit breaker; Allow heater to cool down; Place heater on a stable, level surface.
No heat output.	Heat setting is too low; Heating element malfunction.	Increase heat setting to HIGH; Contact customer support if issue persists.
Oscillation not working.	Oscillation function is off.	Turn the oscillation knob to 'OSC'.

8. SPECIFICATIONS

- **Brand:** Power Zone
- **Model Number:** DF1015
- **Power:** 400W / 800W
- **Voltage:** 120V
- **Amperage:** 6.7 Amps
- **Special Features:** Oscillating, Overheat Protection, Tip-Over Protection
- **Color:** Black
- **Form Factor:** Dish
- **Indoor/Outdoor Usage:** Indoor
- **Product Dimensions:** 12.5"D x 16"W x 19.25"H
- **Mounting Type:** Floor Mount
- **Room Type:** Bedroom, Home Office, Study Room
- **Fuel Type:** Electric

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Power Zone DF1015 heater, please refer to the contact details provided on the product packaging or visit the official Power Zone website. Keep your

purchase receipt for warranty claims.