

## Inscabin D7 (Model 054114452491)

# Inscabin D7 Internet DAB/DAB+ Radio User Manual

Model: D7 (054114452491)

## 1. INTRODUCTION

Thank you for choosing the Inscabin D7 Internet DAB/DAB+ Radio. This device offers a comprehensive audio experience, combining Internet Radio, DAB/DAB+, FM radio, Bluetooth connectivity, and Spotify Connect functionality. This manual provides essential information for setting up, operating, and maintaining your radio to ensure optimal performance and longevity.

## 2. PRODUCT OVERVIEW

### 2.1 Front Panel Controls and Display

The front panel features a clear color display, a speaker, and intuitive controls for navigation and audio adjustment.



Image: Front view of the Inscabin D7 Internet Radio, highlighting the speaker, color display, and control interface.

- **Display:** 2.4-inch TFT color screen for program information, track details, album art, and weather.
- **Speaker:** Integrated speaker for audio output.
- **Volume Knob:** Adjusts audio volume.
- **Mute Button:** Toggles audio mute.
- **Navigation/Enter Knob:** Used for menu navigation and selection.
- **Preset Buttons (1-3):** Quick access to favorite stations.
- **Tune Buttons:** For manual tuning or navigating lists.
- **Skip Buttons:** For skipping tracks or navigating.
- **Power Button:** Turns the device on/off.

## 2.2 Rear Panel Connections

The rear panel provides essential ports for power and external connections.



Image: Rear panel connections (black model shown for illustrative purposes of port layout). Features include a power switch, USB port, AUX input, DC 9V power input, and a telescopic antenna.

- **Power Switch (OFF/ON):** Main power control.
- **USB Port:** For firmware updates or media playback (check specific model capabilities).
- **AUX Input:** Connect external audio devices.
- **DC 9V Input:** Connect the provided power adapter.
- **Telescopic Antenna:** For DAB/DAB+ and FM reception.

## 3. SETUP

---

### 3.1 Package Contents

Ensure all items are present in the package:



Image: The Inscabin D7 radio and its accessories, including the remote control, power adapter, and user manual.

- Inscabin D7 Internet Radio Unit
- Remote Control
- Power Adapter (DC 9V)
- User Manual

### 3.2 Power Connection

1. Extend the telescopic antenna for optimal reception.
2. Connect the provided power adapter to the DC 9V input on the rear of the radio.
3. Plug the power adapter into a wall outlet.
4. Flip the Power Switch on the rear panel to the 'ON' position.
5. Press the Power Button on the front panel or remote control to turn on the radio.

### 3.3 Initial Setup Wizard

Upon first power-on, the radio will guide you through an initial setup process:

1. **Language Selection:** Use the navigation knob to select your preferred language and press 'Enter'.
2. **Network Configuration:** The radio will prompt you to connect to a Wi-Fi network. This is essential for Internet Radio and Spotify Connect functionality.
  - Select 'Scan' to find available networks.
  - Choose your Wi-Fi network from the list.
  - Enter the Wi-Fi password using the navigation knob and 'Enter' button.

- Confirm the connection.
3. **Time/Date Settings:** The radio can usually synchronize time and date automatically via the internet or DAB signal. Confirm your time zone if prompted.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Mode Selection

Press the 'Mode' button on the radio or remote control to cycle through available modes: Internet Radio, DAB/DAB+, FM, Bluetooth, AUX.

### 4.2 Internet Radio

Access thousands of radio stations from around the world via your Wi-Fi connection.

- Select 'Internet Radio' mode.
- Browse stations by location, genre, or search for specific stations.
- Use the navigation knob to select a station and press 'Enter' to play.
- To save a station as a preset, press and hold one of the 'FAV' buttons (1-3).

### 4.3 DAB/DAB+ Radio

Enjoy high-quality digital radio broadcasts.

- Select 'DAB/DAB+' mode.
- The radio will automatically scan for available DAB/DAB+ stations on first use or if prompted.
- Use the navigation knob to scroll through the list of stations and press 'Enter' to select.
- Ensure the telescopic antenna is fully extended for best reception.

### 4.4 FM Radio

Tune into traditional analog FM broadcasts.

- Select 'FM' mode.
- Press 'Scan' (if available) to automatically find stations, or use the 'Tune' buttons for manual frequency adjustment.
- Extend the telescopic antenna for improved signal strength.

### 4.5 Bluetooth Connectivity

Stream audio wirelessly from your smartphone, tablet, or other Bluetooth-enabled devices.

1. Select 'Bluetooth' mode on the radio. The radio will enter pairing mode.
2. On your external device, enable Bluetooth and search for 'Inscabin D7'.
3. Select 'Inscabin D7' to pair. Once connected, you can play audio from your device through the radio.

### 4.6 Spotify Connect

Control your Spotify music directly from the Spotify app on your smartphone or tablet.

1. Ensure your Inscabin D7 radio and your smartphone/tablet are connected to the same Wi-Fi network.
2. Open the Spotify app on your device.
3. Play a song and tap the 'Devices Available' icon (usually a speaker or computer icon).

4. Select 'Inscabin D7' from the list of available devices. The audio will now play through your radio.

## 4.7 System Settings

Access the system menu to configure various settings such as network, time, display brightness, and software updates.

- Press the 'Menu' button (if available) or navigate to 'System Settings' via the main menu.
- Follow on-screen prompts to adjust settings.

## 5. MAINTENANCE

### 5.1 Cleaning

- Always disconnect the power adapter before cleaning.
- Use a soft, dry cloth to wipe the exterior of the radio.
- For stubborn marks, a slightly damp cloth can be used, followed by a dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

### 5.2 Software Updates

Periodically check for software updates via the system settings menu to ensure your radio has the latest features and performance enhancements. A stable internet connection is required for updates.

## 6. TROUBLESHOOTING

If you encounter issues with your Inscabin D7 radio, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power switch off; Wall outlet faulty.	Ensure power adapter is securely connected. Check rear power switch. Try a different wall outlet.
No sound	Volume too low; Mute activated; Incorrect source selected.	Increase volume. Press Mute button. Select the correct audio source (Internet Radio, DAB, FM, Bluetooth).
Cannot connect to Wi-Fi	Incorrect password; Router too far; Network issues.	Verify Wi-Fi password. Move radio closer to router. Restart router. Check network status.
Poor DAB/FM reception	Antenna not extended; Weak signal area.	Fully extend the telescopic antenna. Reposition the radio to improve signal.
Bluetooth pairing issues	Radio not in pairing mode; Device already paired; Interference.	Ensure radio is in Bluetooth pairing mode. Forget device on your phone and re-pair. Move closer to the radio.

## 7. SPECIFICATIONS

Detailed technical specifications for the Inscabin D7 Internet Radio:



Image: Dimensions of the Inscabin D7 radio (210mm width, 114mm depth, 105mm height).

- **Brand:** Inscabin
- **Model Number:** 054114452491
- **Color:** White
- **Connectivity Technology:** Wi-Fi, Bluetooth
- **Special Features:** Internet Radio, Spotify Connect, DAB/DAB+, FM Radio
- **Compatible Devices:** Smartphone, Tablet
- **Tuning Technology:** DAB+
- **Supported Radio Bands:** FM, DAB, DAB+, Internet Radio
- **Power Source:** Corded Electric (DC 9V)
- **Product Dimensions (approx.):** 210mm (Width) x 114mm (Depth) x 105mm (Height)
- **Recommended Uses:** Music, News, Talk Shows

## 8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Inscabin customer support directly. Details can typically be found on the manufacturer's official website or through your retailer.

- **Manufacturer:** Inscabin
- **Customer Service:** Refer to product packaging or manufacturer's website for contact details.

