

[manuals.plus](#) /

› [Fossil](#) /

› [Fossil FS5889 Retro Analogue-Digital Watch User Manual](#)

Fossil FS5889

Fossil FS5889 Retro Analogue-Digital Watch User Manual

Comprehensive instructions for your Fossil FS5889 Analogue-Digital Watch.

1. PRODUCT OVERVIEW

This manual provides detailed instructions for the Fossil FS5889 Retro Analogue-Digital Watch. This timepiece combines classic analog hands with a modern digital display, offering versatile timekeeping and additional functions. It features a durable stainless steel case and strap, a gold-toned finish, and is water-resistant up to 5 ATM.

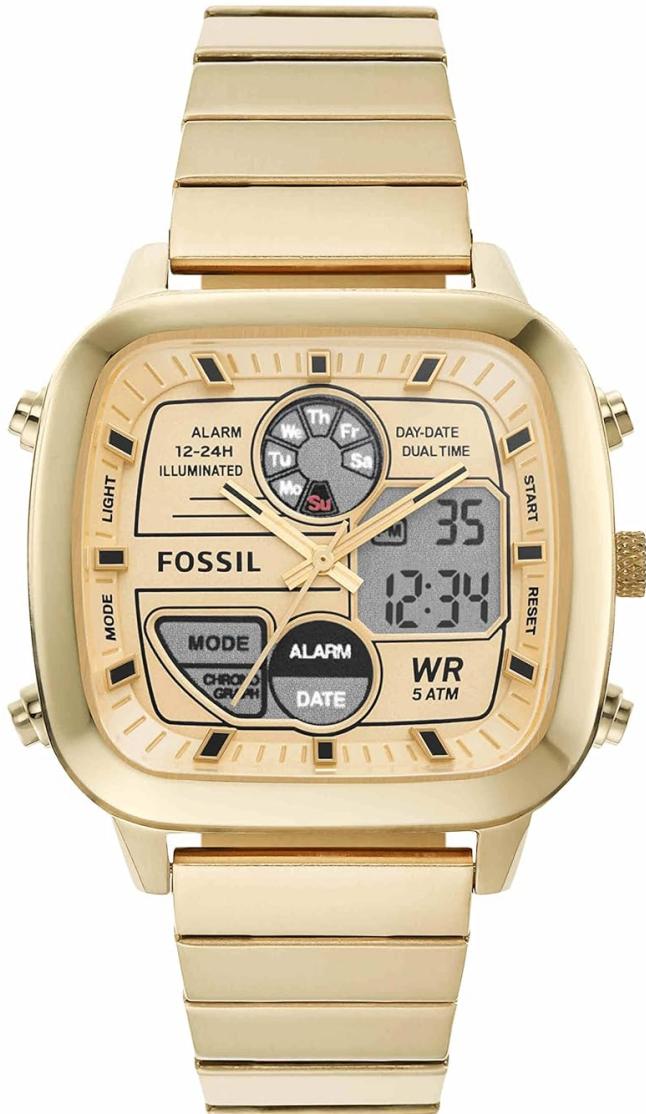


Image 1.1: Front view of the Fossil FS5889 Retro Analogue-Digital Watch. This image displays the watch face with both analog hands and the digital display, along with the various buttons on the side of the case.

2. SETUP

2.1 Initial Time Setting

Your watch comes with a pre-installed battery. Upon first use, you may need to set the time and date. Refer to the 'Operating Instructions' section for detailed steps on setting both the analog and digital displays.

2.2 Strap Adjustment and Replacement

The watch features a metal strap that may require adjustment for a comfortable fit. If you wish to replace the strap, follow these steps:

1. Push the button on the spring bar to the center position.
2. Carefully remove the strap from the watch case.
3. Align the new strap at the junction points on the watch case.
4. Push the button on the new strap's spring bar to insert it into the connection point on the watch case. Ensure it clicks securely into place.



Image 2.1: Visual guide for changing the watch strap. The image illustrates four steps: pushing the button on the spring bar, removing the old strap, aligning the new strap, and inserting the new strap.

3. OPERATING INSTRUCTIONS

The Fossil FS5889 watch features multiple buttons for various functions. Familiarize yourself with their locations and purposes.



Image 3.1: Side view of the watch, highlighting the control buttons. These buttons are used to navigate modes, set time, activate the light, and control chronograph functions.

3.1 Button Functions

- **MODE Button:** Cycles through digital display modes (Time, Alarm, Chronograph, Date).
- **LIGHT Button:** Activates the backlight for the digital display.
- **START Button:** Used to start/stop the chronograph or adjust settings in setting mode.
- **RESET Button:** Used to reset the chronograph or confirm settings in setting mode.
- **Crown:** Adjusts the analog time. Pull out to set, push in to engage.

3.2 Setting Analog Time

1. Pull the crown out to the first position.
2. Turn the crown to move the analog hands to the desired time.
3. Push the crown back in to its normal position to start the analog movement.

3.3 Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display flashes or enters setting mode.
2. Use the **START** button to adjust the flashing digit (hours, minutes, seconds).
3. Use the **RESET** button to move to the next setting (e.g., from hours to minutes).
4. Repeat steps 2 and 3 for setting the date (month, day, year) and day of the week.
5. Once all settings are complete, press the **MODE** button to exit setting mode.

3.4 Using the Alarm Function

1. Press the **MODE** button until 'ALARM' is displayed.
2. To set the alarm time, press and hold the **START** button until the alarm time flashes.
3. Use the **START** button to adjust the hours and the **RESET** button to move to minutes.
4. Press **MODE** to confirm the alarm time.
5. To activate/deactivate the alarm, press the **START** button while in alarm mode. An alarm icon will appear/disappear.

3.5 Using the Chronograph (Stopwatch)

1. Press the **MODE** button until 'CHRONO' or 'STOPWATCH' is displayed.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the timed measurement.

3.6 Light Function

Press the **LIGHT** button to illuminate the digital display for a few seconds, improving visibility in low-light conditions.

3.7 Water Resistance

This watch is water-resistant up to 5 ATM (50 meters). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid pressing buttons or operating the crown while the watch is wet or submerged, as this can compromise the water resistance.

4. MAINTENANCE

4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For stainless steel components, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

4.2 Water Resistance Care

To preserve the water resistance of your watch, ensure the crown is always pushed in completely. Avoid exposing the watch to extreme temperature changes (e.g., hot showers followed by cold water), as this can cause seals to expand and contract, potentially leading to water intrusion. Do not operate buttons or the crown while the watch is submerged or wet.

4.3 Battery Replacement

The watch is powered by a Lithium battery. When the digital display becomes dim or stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and damage the watch.

5. TROUBLESHOOTING

If you encounter issues with your Fossil FS5889 watch, refer to the following common problems and solutions:

- Digital Display is Blank or Dim:** This usually indicates a low battery. Arrange for professional battery replacement.
- Analog Hands Not Moving or Incorrect Time:** Check if the crown is pushed in completely. If the issue persists, the battery may be low, or the movement may require service.
- Buttons Not Responding:** Ensure the watch is dry. If buttons are stuck, gently clean around them. If they remain unresponsive, professional inspection is recommended.
- Water Inside the Watch:** If condensation or water droplets appear under the crystal, immediately take the watch to a service center. This indicates a breach in water resistance.

For problems not listed here, or if solutions do not resolve the issue, contact Fossil customer support or an authorized service center.

6. SPECIFICATIONS

Key technical specifications for the Fossil FS5889 Retro Analogue-Digital Watch:

Feature	Specification
Model Number	FS5889
Case Material	Stainless Steel
Strap Material	Stainless Steel
Dial Colour	Gold
Band Colour	Gold
Display Type	Analogue-Digital

Feature	Specification
Water Resistance	5 ATM (50 meters)
Product Dimensions	10 x 10 x 10 cm
Item Weight	430 g
UPC	796483555037
Battery Type	Lithium

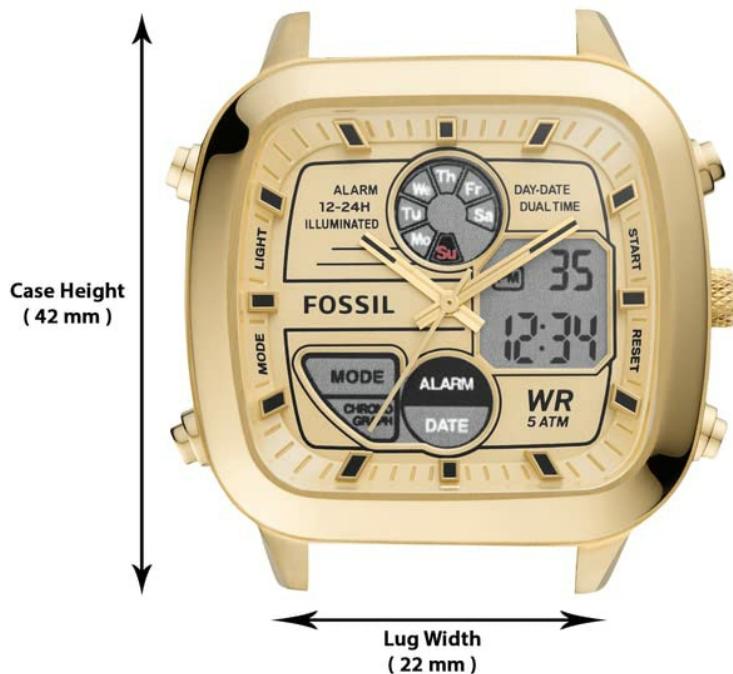


Image 6.1: Diagram illustrating the case height (42 mm) and lug width (22 mm) of the Fossil FS5889 watch.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Fossil FS5889 watch is covered by a manufacturer's warranty. Details regarding the warranty period and coverage can typically be found on the official Fossil website or within the warranty card included with your purchase. The warranty generally covers manufacturing defects but may not cover damage resulting from

improper use, accidents, or unauthorized repairs.

7.2 Customer Support

For any questions, service requests, or warranty claims, please contact Fossil customer service. You can usually find contact information, including phone numbers and email addresses, on the official Fossil website or through your point of purchase. When contacting support, please have your watch model number (FS5889) and proof of purchase readily available.

For more information, you may visit the official Fossil Store:[Fossil Store on Amazon](#)

© 2024 Fossil. All rights reserved.