

Majority EVS-SPR-BLK AL

Majority Everest Right Satellite Speaker User Manual

Model: **EVS-SPR-BLK AL** | Brand: **Majority**

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Majority Everest Right Satellite Speaker. This speaker is designed as a spare or replacement unit for the Majority Everest surround sound system, ensuring seamless integration and continued audio performance.

2. PRODUCT OVERVIEW

2.1 Key Features

- Designed as a spare or replacement right satellite speaker for the Majority Everest system.
- Rechargeable via Micro USB for convenient power management.
- Compact and minimalist design to blend with your home decor.
- Provides surround sound audio output when integrated with the main system.

2.2 Package Contents

Please check the box for the following items:

- Majority Everest Right Satellite Speaker
- Micro USB Charging Cable (may be included with original system)
- User Manual (this document)

2.3 Product Views



Figure 1: Front view of the satellite speaker, showing the perforated grille.



Figure 2: Rear view of the speaker, highlighting the Micro USB charging port and power button.



Figure 3: Side profile of the speaker,

showing its sleek design.



Figure 4: Speaker in a typical home environment, demonstrating its compact size.



Figure 5: Satellite speaker positioned alongside the main Majority Everest soundbar.



Figure 6: Illustration of the speaker's base assembly.

3. SETUP

3.1 Initial Charging

Before first use, ensure the satellite speaker is fully charged. Connect the Micro USB charging cable to the speaker's charging port (refer to Figure 2) and the other end to a compatible USB power adapter (not included) or a USB port on your computer. The charging indicator light (if present) will typically show red during charging and turn off or green when fully charged. A full charge provides approximately 8 hours of battery life.

3.2 Placement

For optimal surround sound experience, place the right satellite speaker to the right of your listening position, ideally slightly behind or to the side, at ear level. Ensure there are no major obstructions between the satellite speaker and the main soundbar unit to maintain a stable wireless connection.

3.3 Pairing with Main Unit

The Majority Everest satellite speakers are designed to automatically pair with the Majority Everest soundbar. Follow these steps:

1. Ensure the main Majority Everest soundbar is powered on and in pairing mode (refer to the soundbar's manual for specific instructions).
2. Power on the satellite speaker by pressing and holding the power button (refer to Figure 2) until the indicator light illuminates.
3. The satellite speaker will automatically search for and connect to the main soundbar. A solid blue or green light on the speaker typically indicates a successful connection.
4. If pairing fails, try restarting both the soundbar and the satellite speaker, then repeat the steps.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the power button on the rear of the speaker until the indicator light turns on.
- **To Power Off:** Press and hold the power button again until the indicator light turns off. The speaker may also power off automatically if disconnected from the main unit for an extended period.

4.2 Volume Control

Volume for the satellite speaker is controlled directly through the main Majority Everest soundbar unit. Adjust the master volume on the soundbar, and the satellite speaker's output will adjust accordingly.

4.3 Battery Status

The speaker's indicator light may change color or flash to indicate low battery. Recharge the speaker promptly when the low battery warning appears to ensure uninterrupted performance.

5. MAINTENANCE

5.1 Cleaning

To clean the speaker, use a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents, as these may damage the speaker's finish or internal components. Avoid getting moisture into any openings.

5.2 Battery Care

- To prolong battery life, avoid fully discharging the speaker frequently.
- If storing the speaker for an extended period, charge it to approximately 50% before storage and recharge every few months.
- Do not expose the speaker to extreme temperatures, as this can degrade battery performance.

5.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and excessive heat or humidity. Keep it away from strong magnetic fields.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source using the Micro USB cable and allow it to charge.
No sound from the satellite speaker.	Speaker is not paired with the main soundbar.	Ensure the main soundbar is on and in pairing mode. Power cycle the satellite speaker to re-initiate pairing.
	Volume on the main soundbar is too low or muted.	Increase the volume on the main Majority Everest soundbar.
Sound is intermittent or distorted.	Interference or distance from main unit.	Move the satellite speaker closer to the main soundbar. Remove any large metallic objects or other wireless devices that may cause interference.
Speaker not charging.	Faulty cable or power adapter.	Try a different Micro USB cable or a different USB power adapter. Ensure the power source is active.

7. SPECIFICATIONS

Feature	Detail
Model Name	EVS-SPR-BLK
Speaker Type	Satellite
Connectivity Protocol	USB (for charging)
Power Source	Corded Electric (via USB charging)
Battery Life	8 Hours
Color	Black
Surround Sound Channel Configuration	2.0 (as part of a larger system)
Product Dimensions	2.58 x 3.87 x 6.61 inches
Item Weight	1.43 pounds
Manufacturer	Majority
Speaker Maximum Output Power	100 Watts

8. WARRANTY AND SUPPORT

8.1 Product Warranty

Your Majority Everest Right Satellite Speaker comes with a manufacturer's warranty. For details regarding the warranty period and terms, please refer to the warranty card included with your original Majority Everest system or visit the official Majority website.

You can register your product for an extended warranty within 30 days of purchase. Register here:
<https://www.majority.co.uk/register>





8.2 Customer Support


If you encounter any issues or have questions not covered in this manual, please contact Majority customer support:

- **Email:** info@majority.co.uk
- For additional support and FAQs, visit the Majority website.

© 2024 Majority. All rights reserved.
This manual is subject to change without notice.

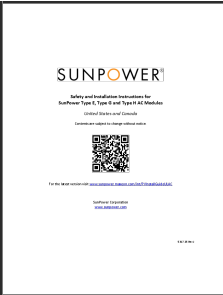
Related Documents - EVS-SPR-BLK AL

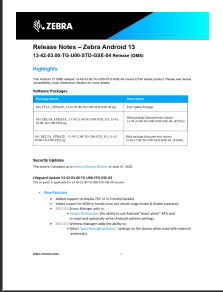	<p>SunPower AC Modules: Safety and Installation Instructions for Type E, G, and H</p> <p>Comprehensive guide for the safe installation and handling of SunPower Type E, Type G, and Type H AC Modules in the United States and Canada. Covers electrical connections, grounding, mounting configurations, site considerations, and maintenance procedures.</p>
	<p>SunPower Maxeon PV Modules Safety and Installation Instructions</p> <p>Comprehensive safety and installation guide for SunPower Maxeon photovoltaic (PV) modules, covering electrical connections, mounting, handling, and maintenance. Includes model series information and essential safety precautions.</p>
	<p>SunPower Photovoltaic (PV) Module Safety and Installation Instructions</p> <p>Official safety and installation guide for SunPower photovoltaic (PV) modules, covering electrical specifications, mounting procedures, grounding, handling, and maintenance for various series including X-Series, P-Series, A-Series, MAX2, MAX3, and NE modules.</p>
	<p>Zebra Android 13 Release Notes - Version 13-42-03.00-TG-U00-STD-GSE-04</p> <p>Detailed release notes for Zebra Android 13, version 13-42-03.00-TG-U00-STD-GSE-04, covering new features, resolved issues, and usage notes for ET4X series devices.</p>

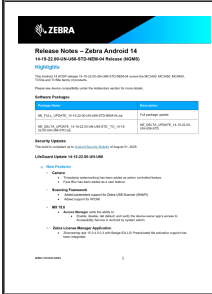

[Zebra Android 14 Release Notes \(14-15-22.00-UN-U66-STD-NEM-04\)](#)

Detailed release notes for Zebra Android 14, version 14-15-22.00-UN-U66-STD-NEM-04 (NGMS), covering highlights, software packages, security updates, LifeGuard updates, resolved issues, and device compatibility for Zebra mobile computers.

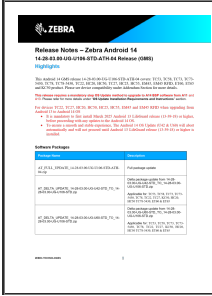

[Zebra Android 14 Release Notes \(GMS\) - Version 14-28-03.00-UG-U106-STD-ATH-04](#)

Detailed release notes for Zebra Android 14 (GMS) version 14-28-03.00-UG-U106-STD-ATH-04, covering highlights, software packages, security updates, resolved issues, and device compatibility for various Zebra devices.