

iPega PG-P4008

iPega PG-P4008 Wireless Game Controller User Manual

Model: PG-P4008

1. INTRODUCTION

Thank you for choosing the iPega PG-P4008 Wireless Game Controller. This manual provides detailed instructions on how to set up, operate, and maintain your controller. The PG-P4008 offers broad compatibility with PS4, PS3, Android (10.0+), iOS (13.0+), and Windows PC, connecting wirelessly via Bluetooth for an enhanced gaming experience.

2. PRODUCT OVERVIEW

The iPega PG-P4008 is designed for versatile gaming across multiple platforms. It features a comfortable ergonomic design, responsive controls, and several advanced functionalities to immerse you in your games.

Key Features:

- Wireless Bluetooth connectivity (BT2.1+EDR) with up to 8 meters range.
- No driver installation required for connection.
- Integrated colored LED light indicator for operational status.
- Dual motors for realistic vibration feedback during gameplay.
- Built-in three-dimensional acceleration sensor and gyroscope sensor with six-axis induction.
- Integrated speaker and 3.5mm earphone jack for game audio.
- Dual-point capacitive touchpad for enhanced control.
- Compatible with PS4, PS3, Android (10.0+), iOS (13.0+), and Windows PC.



Image 1: Front view of the iPega PG-P4008 Wireless Game Controller. This image displays the controller's ergonomic design, dual analog sticks, D-pad, action buttons, touchpad, and the central LED indicator.

3. SETUP AND CONNECTION

The PG-P4008 controller connects wirelessly via Bluetooth. Follow these steps to pair your controller with your device:

- 1. Power On:** Ensure the controller is charged. Press and hold the **PS button** (or equivalent power button) to turn on the controller.
- 2. Pairing Mode:**
 - For PS4/PS3: Connect the controller to the console using a USB cable. Once recognized, you can disconnect the cable for wireless play. The connection method is similar to the official P4 controller.
 - For Android/iOS: Activate Bluetooth on your mobile device. On the controller, press and hold the **SHARE button + PS button** simultaneously until the LED indicator flashes rapidly, indicating pairing mode. Select "PG-P4008" (or similar) from your device's Bluetooth list to connect.
 - For Windows PC: Ensure your PC has Bluetooth capability. On the controller, press and hold the **PS button + OPTIONS button** simultaneously until the LED indicator flashes rapidly. On your PC, go to Bluetooth settings, add a new device, and select "PG-P4008" (or similar) to pair.
- 3. Successful Connection:** Once connected, the LED indicator on the controller will change to a solid color, indicating a successful pairing.

Note: No additional driver software is required for operation. The controller supports a stable connection up to 8 meters.

4. OPERATING INSTRUCTIONS

LED Indicator:

The built-in colored LED light indicates the controller's operational status and player assignment, similar to the official PS4 controller. Different colors will signify different stages or player numbers.

Vibration Feedback:

The controller features dual motors embedded in the handles, providing tactile vibration feedback to enhance your gaming immersion. This feedback will vary based on in-game events.

Touchpad:

The dual-point capacitive touchpad allows for intuitive control in games that support touch input, offering an additional layer of interaction.

Audio Functionality:

Connect your 3.5mm earphones to the integrated jack on the controller to experience game audio directly, providing a private and immersive sound experience.

5. MAINTENANCE

- Keep the controller dry and away from moisture to prevent damage to internal components.
- Clean the controller regularly with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place when not in use.
- Avoid exposing the controller to extreme temperatures or direct sunlight.
- Do not attempt to disassemble or modify the controller, as this will void any potential warranty and may cause damage.

6. TROUBLESHOOTING

- **Controller not connecting:**
 - Ensure the controller is fully charged.
 - Verify Bluetooth is enabled on your device.
 - Make sure the controller is in the correct pairing mode for your device (refer to Section 3).
 - Try restarting both the controller and your device.
 - Remove previous pairings from your device's Bluetooth list and try pairing again.
- **Input lag or disconnection:**
 - Ensure you are within the 8-meter operating range.
 - Minimize interference from other wireless devices.
 - Check for any physical obstructions between the controller and the device.
- **Vibration not working:**
 - Ensure the game you are playing supports vibration feedback.
 - Check in-game settings to ensure vibration is enabled.
- **Audio not working via 3.5mm jack:**
 - Ensure your earphones are properly plugged in.
 - Check the volume settings on your device and in-game.
 - Test with another pair of earphones to rule out earphone issues.

7. SPECIFICATIONS

Model Number	PG-P4008
Brand	iPega

Connectivity	Bluetooth (BT2.1+EDR)
Wireless Range	Up to 8 meters
Compatible Devices	PS4, PS3, Android (10.0+), iOS (13.0+), Windows PC
Special Features	Wireless, Touchpad, Vibration, 6-axis Gyroscope, Built-in Speaker, 3.5mm Audio Jack
Button Quantity	17
Power Source	Battery Powered

8. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not provided within this manual. Please refer to the product packaging or the retailer's website for details on warranty coverage and how to contact customer support for assistance.