

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Select Sound](#) /

› [Select Sound Daewoo DW-2000 Portable Bluetooth Party Speaker Instruction Manual](#)

Select Sound DW-2000

Select Sound Daewoo DW-2000 Portable Bluetooth Party Speaker Instruction Manual

Model: DW-2000

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Select Sound Daewoo DW-2000 Portable Bluetooth Party Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The Daewoo DW-2000 is a portable Bluetooth speaker designed to deliver immersive, high-quality audio. It features wireless music streaming, adjustable bass and treble, LED illumination, and multiple input options including auxiliary, USB, TF card, microphone, and guitar.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the provided power adapter for charging.
- Ensure proper ventilation when operating the speaker.
- Keep out of reach of children.

PRODUCT OVERVIEW

Package Contents

- Daewoo DW-2000 Portable Bluetooth Party Speaker
- User Manual (this document)
- Warranty Card
- Power Adapter

Speaker Components

Familiarize yourself with the various parts of your DW-2000 speaker.



Image 1: Front View. A front view of the Daewoo DW-2000 portable speaker, showcasing its dual speaker grilles and vibrant LED illumination.

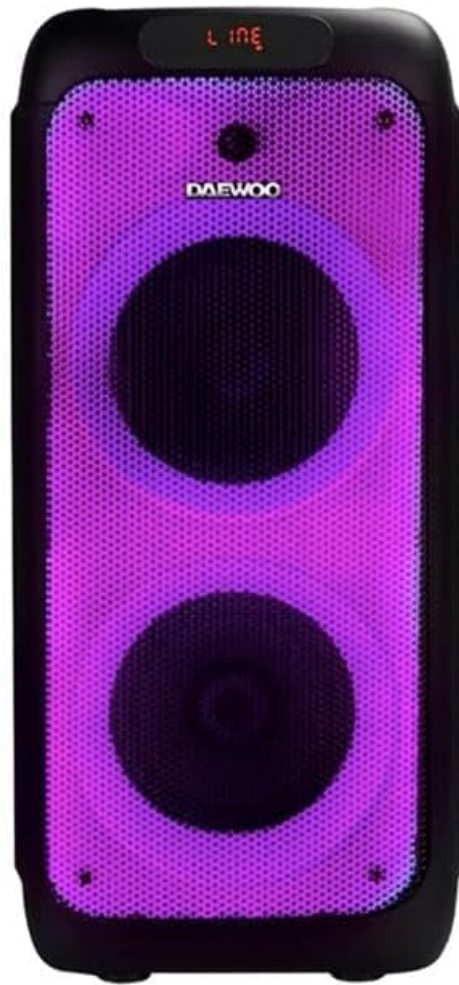


Image 2: Top Control Panel. This image displays the top control panel of the Daewoo DW-2000 speaker, showing various buttons and ports for operation, including volume knobs, input jacks, and control buttons.



Image 3: Speaker Dimensions. This image illustrates the physical dimensions of the Daewoo DW-2000 speaker, showing its height and width measurements.

DW-PARTY DW-2000



- Tecnología TWS
- Ajuste de graves y agudos
- Iluminación multicolor

Image 4: Key Features Overview. This image highlights the model name DW-PARTY DW-2000 and lists key features such as TWS technology, bass and treble adjustment, and multicolor illumination.

SETUP

Charging the Speaker

1. Connect the provided power adapter to the "DC IN" port on the speaker's control panel.
2. Plug the adapter into a standard wall outlet.
3. The charging indicator (if available) will illuminate. The speaker is fully charged when the indicator changes color or turns off.
4. A full charge provides approximately 5 hours of battery life.

Powering On/Off

- To power on, locate the "POWER ON/OFF" switch on the control panel and slide it to the "ON" position.
- To power off, slide the switch to the "OFF" position.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the "MODE" button until "Bluetooth" or a similar indicator appears on the display.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "DW-2000" from the list of devices.
4. Once paired, the speaker will emit a confirmation sound, and you can begin streaming audio.

True Wireless Stereo (TWS) Function

The TWS function allows you to connect two DW-2000 speakers wirelessly for a stereo sound experience.

1. Ensure both DW-2000 speakers are powered on and in Bluetooth mode, but not yet paired to any device.
2. On one of the speakers, press and hold the "TWS" button (often combined with Play/Pause).
3. The speakers will attempt to connect to each other. Once connected, you will hear a confirmation sound.
4. Now, pair your mobile device to one of the speakers as described in the "Bluetooth Pairing" section. Both speakers will play audio in stereo.

Auxiliary Input (3.5mm)

To play audio from devices without Bluetooth:

1. Connect a 3.5mm audio cable (not included) from your audio source's headphone jack to the "LINE IN" port on the speaker.
2. Press the "MODE" button on the speaker until "LINE" or "AUX" is indicated on the display.
3. Control playback and volume from your connected device.

USB and TF Card Playback

The speaker supports playback from USB flash drives and TF (microSD) cards.

1. Insert a USB flash drive into the "USB" port or a TF card into the "TF" slot.
2. The speaker should automatically switch to USB/TF mode and begin playing audio. If not, press the "MODE" button to select the correct input.
3. Use the playback controls (Play/Pause, Next/Previous Track) on the speaker to manage your music.

Microphone and Guitar Input

The speaker features inputs for microphones and guitars, suitable for karaoke or live performances.

- Connect your microphone to "MIC 1" or "MIC 2" input.
- Connect your guitar to the "GUITAR IN" input.
- Adjust the "MIC VOLUME" knob to control the microphone's volume.
- Use the "EC+" and "EC-" buttons for echo control, and "TR+" and "TR-" for treble adjustment for the microphone.
- Use the "BA+" and "BA-" buttons for bass adjustment for the microphone.

- Use the "GV+" and "GV-" buttons for guitar volume adjustment.

Adjusting Bass and Treble

Fine-tune your audio output using the dedicated bass and treble controls.

- Locate the "BASS" and "TREBLE" adjustment knobs on the control panel.
- Rotate the knobs clockwise to increase and counter-clockwise to decrease the respective audio frequencies.

LED Illumination

The speaker features multicolor LED illumination.

- Press the "LIGHT" button on the control panel to cycle through different lighting modes or to turn the lights off.

FM Radio

To use the built-in FM radio:

1. Press the "MODE" button until "FM" is indicated on the display.
2. Press the "Play/Pause" button to automatically scan and save available FM stations.
3. Use the "Next Track" and "Previous Track" buttons to navigate between saved stations.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is discharged; Power switch is off.	Charge the speaker; Slide the power switch to "ON".
No sound	Volume is too low; Incorrect input mode selected; Device not paired (Bluetooth).	Increase volume on speaker and source device; Press "MODE" to select correct input; Re-pair Bluetooth device.
Bluetooth connection unstable	Device is too far from speaker; Obstructions between devices.	Move device closer to speaker (within 10 meters); Remove obstructions.
Microphone/Guitar not working	Microphone/Guitar not properly connected; MIC VOLUME is too low.	Ensure cables are fully inserted; Adjust "MIC VOLUME" knob.

SPECIFICATIONS

Model Name	DW-2000
Brand	Select Sound (Daewoo)
Connectivity Technology	Bluetooth
Speaker Type	Component (Portable Party Speaker)
Speaker Size	6.5 Inches
Max Speaker Output Power	50 Watts
Frequency Response	50 GHz <i>(Note: This value is provided in the source data. Typically, speaker frequency response is measured in Hz or kHz.)</i>
Power Source	Battery
Average Battery Life	5 Hours
Control Method	Application (and physical controls)
Mounting Type	Floor
Product Dimensions	77 x 37 x 35 cm
Product Weight	14 Kilograms
Special Features	Bluetooth, TWS, Bass/Treble Adjustment, LED Illumination, Microphone/Guitar Inputs

WARRANTY AND SUPPORT

Warranty Information

This product comes with a Limited Warranty provided by Select Sound. Please refer to the included Warranty Card for specific terms, conditions, and duration of coverage.

Retain your proof of purchase for any warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Select Sound customer support. Contact information can typically be found on the manufacturer's website or on the warranty card included with your product.

