

Zippi Sweeper Standard

Zippi Sweeper Standard User Manual

Model: Sweeper Standard

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Zippi Sweeper Standard. Please read this manual thoroughly before initial use to ensure proper function and longevity of the product. Keep this manual for future reference.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Do not immerse the sweeper head or charging adapter in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the charging adapter supplied by the manufacturer.
- Do not operate the sweeper if it has been dropped, damaged, left outdoors, or dropped into water.
- Do not use the sweeper to pick up flammable or combustible liquids, or anything that is burning or smoking.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Zippi Sweeper Head (D)
- Handle Section A (Top with grip)
- Handle Section B (Middle)
- Handle Section C (Bottom)

- Charging Adapter

4. SETUP INSTRUCTIONS

Assemble the Zippi Sweeper Standard by connecting the handle sections to the sweeper head.

1. Connect Handle Section A (top with grip) to the top of Handle Section B.
2. Connect Handle Section B to the top of Handle Section C.
3. Connect the assembled Handle Section C to the Zippi Sweeper Head (D). Ensure all connections are secure.

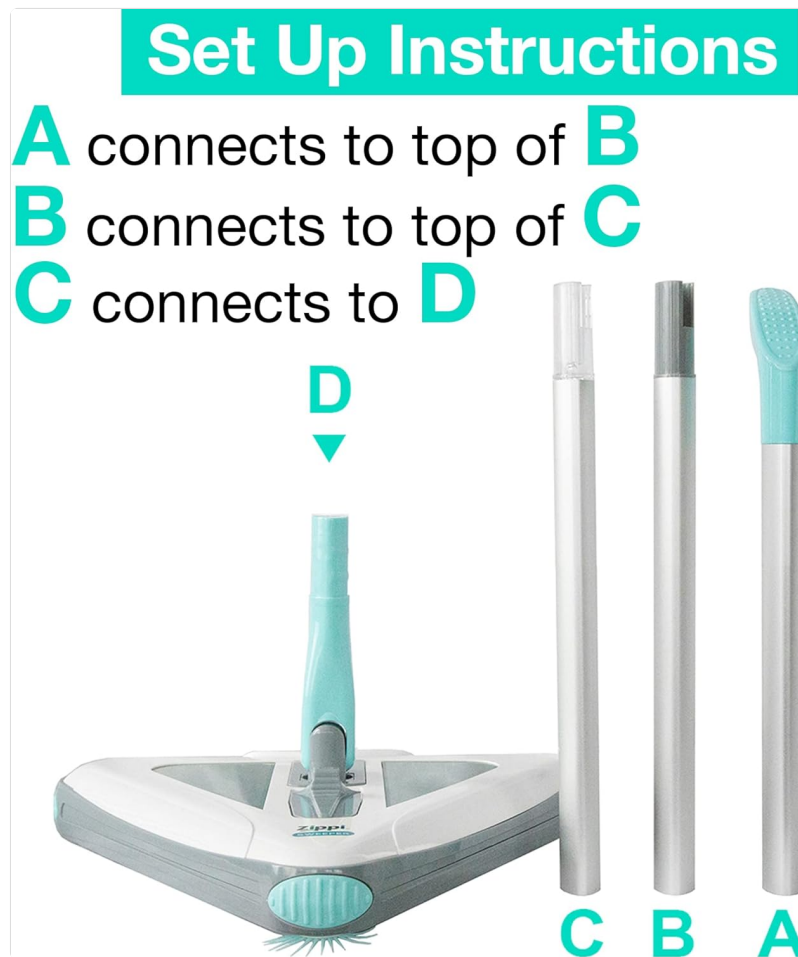


Figure 4.1: Handle Assembly Diagram. This image illustrates the step-by-step connection of the handle components (A, B, C) to the sweeper head (D).



Figure 4.2: Exploded View of Components.
This diagram shows the individual handle sections and the sweeper head, indicating how they fit together.

5. CHARGING THE BATTERY

The Zippi Sweeper Standard is equipped with a 22.2-volt rechargeable battery. Ensure the battery is fully charged before first use and whenever the power diminishes.

- Locate the charging port on the sweeper.
- Connect the supplied charging adapter to the sweeper's charging port and then plug it into a standard electrical outlet.
- A full charge takes approximately 10 hours.
- A fully charged battery provides up to 30 minutes of runtime.



Figure 5.1: Charging Port Location. This image highlights the charging port on the sweeper handle, indicating where to connect the adapter.

6. OPERATING INSTRUCTIONS

The Zippi Sweeper Standard is designed for efficient cleaning across various floor types.

- **Power On/Off:** Press the power button located on the handle to turn the sweeper on or off.
- **Surface Compatibility:** The powered brush is suitable for hardwood, tile, and short-pile rugs.
- **Maneuverability:** The lightweight, cordless design allows for easy movement around furniture and into tight spaces. The triangular head design facilitates cleaning in corners.
- **Cleaning Action:** The triple-rotating brush system effectively captures dust and dirt from various surfaces.



Figure 6.1: Zippi Sweeper Standard. A general view of the sweeper, illustrating its design.



UNIQUE TRIANGULAR HEAD

Navigates tight corners

Figure 6.2: Corner Cleaning. The triangular head design allows the sweeper to effectively reach and clean dust and debris in corners.



Low profile design helps clean under furniture without moving it

Figure 6.3: Under Furniture Access. The low-profile design enables the sweeper to clean under furniture without requiring it to be moved.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your Zippi Sweeper Standard.

- **Emptying the Dirt Compartment:** The sweeper features a quick-release dirt compartment for easy disposal. Press the release button and empty the collected debris into a waste bin.
- **Cleaning the Brushes:** Periodically inspect the triple-rotating brushes for tangled hair or debris. Remove any obstructions to maintain effective sweeping. The silicon rotating brush can be wiped clean.
- **Storage:** The collapsible handle allows for compact storage when not in use.



Figure 7.1: Quick-Release Dirt Tray. This image demonstrates the process of emptying the sweeper's dirt compartment for convenient disposal.



Figure 7.2: Silicon Rotating Brush. A detailed view of the sweeper's silicon brush, which should be kept clean for optimal performance.

8. TROUBLESHOOTING

If you encounter issues with your Zippi Sweeper Standard, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-------------------------------|---|---|
| Sweeper does not turn on. | Battery is not charged. | Charge the battery for approximately 10 hours. |
| Reduced sweeping performance. | Dirt compartment is full or brushes are obstructed. | Empty the dirt compartment. Clean any hair or debris from the rotating brushes. |
| Sweeper stops unexpectedly. | Battery is depleted. | Recharge the battery. |

9. SPECIFICATIONS

- **Brand:** Zippi
- **Model Name:** Zippi Sweeper Standard
- **Special Features:** 360-degree rotation, Lightweight, Rechargeable
- **Filter Type:** Cartridge
- **Included Components:** Adapter
- **Cordless:** Yes
- **Capacity:** 3 Pounds
- **Charging Time:** Approximately 10 hours
- **Battery Life:** Up to 30 minutes runtime
- **Recommended Uses:** Carpet (short-pile), Hardwood, Tile
- **Form Factor:** Handheld
- **Battery Type:** 22.2-volt Lithium Ion rechargeable battery
- **Amperage:** 36 Milliamps
- **Item Weight:** 3.01 pounds
- **Package Dimensions:** 13.43 x 11.81 x 4.09 inches
- **UPC:** 817889012921
- **ASIN:** B09MSMWMRH

10. WARRANTY AND SUPPORT

Zippi stands by its products. If you experience any issues with your Zippi Sweeper Standard, please contact Zippi customer support through the Amazon messaging system for assistance.

For more information and products, visit the [Official Zippi Store](#).