

## Crosley CR6252A-YS

# Crosley CR6252A-YS Portfolio 3-Speed Bluetooth Turntable User Manual

Model: CR6252A-YS

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Crosley CR6252A-YS Portfolio 3-Speed Bluetooth Turntable. Please read this manual thoroughly before using the product and retain it for future reference.

The Crosley Portfolio turntable is designed to play vinyl records at three speeds and features built-in speakers, Bluetooth connectivity for wireless audio streaming, and a moving magnetic cartridge for audio reproduction.



Figure 1.1: Crosley CR6252A-YS Portfolio Turntable (Open View)

## 2. SAFETY INSTRUCTIONS

- Read all instructions before use.
- Keep the product away from water or moisture.
- Do not place near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Clean only with a dry cloth.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Crosley CR6252A-YS Portfolio Turntable
- Power Adapter
- User Manual (this document)

### 4. PRODUCT FEATURES AND COMPONENTS

The Crosley CR6252A-YS Portfolio Turntable includes the following key features and components:

- **3-Speed Turntable:** Supports 33 1/3, 45, and 78 RPM records.
- **Built-in Bluetooth Receiver:** Allows wireless streaming from compatible devices.
- **Adjustable Pitch Control:** Fine-tune record speed.
- **Moving Magnetic Cartridge:** Pre-mounted for optimal sound.
- **Auxiliary Input:** Connect external audio sources.
- **USB Enabled:** For PC connection.
- **Built-in Speakers:** Integrated audio output.



Figure 4.1: Turntable Mechanism and Controls





Figure 4.2: Control Panel Detail



Figure 4.3: Rear Panel Connections

## 5. SETUP

---

### 5.1 Initial Placement

Place the turntable on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibrations.

### 5.2 Power Connection

1. Connect the power adapter to the DC 12V input jack on the rear of the turntable.
2. Plug the power adapter into a suitable wall outlet.

### 5.3 Turntable Preparation

1. Carefully remove any protective packaging materials from the turntable platter and tonearm.
2. Ensure the tonearm is unlocked from its rest.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Playing Records

1. Turn the **ON/OFF** knob clockwise to power on the unit.
2. Select the desired speed (33  $\frac{1}{3}$ , 45, or 78 RPM) using the speed selector switch. *Note: A 78 RPM stylus (not included) is required for 78 RPM records.*
3. Place a record on the turntable platter. If playing a 45 RPM single, place the 45 RPM adapter (if included) over the spindle.
4. Lift the tonearm using the cueing lever and position it over the desired track on the record.

5. Lower the tonearm slowly onto the record using the cueing lever. The record will begin to play.
6. Adjust the volume using the **VOLUME** knob.
7. Use the **PITCH** control knob to fine-tune the playback speed if necessary.
8. To stop playing, lift the tonearm, return it to its rest, and turn the **ON/OFF** knob counter-clockwise.



Figure 6.1: Stylus on Record

## 6.2 Bluetooth Operation

1. Turn the **ON/OFF** knob clockwise to power on the unit.
2. Slide the function switch to the **Bluetooth** position. The indicator light will flash, indicating pairing mode.
3. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for "Crosley Portfolio".
4. Select "Crosley Portfolio" from the list of available devices to pair. Once paired, the indicator light will stop flashing and remain solid.
5. You can now stream audio wirelessly from your device to the turntable's built-in speakers.
6. Adjust the volume using the **VOLUME** knob on the turntable and/or your external device.

## 6.3 Auxiliary Input (AUX IN)

1. Turn the **ON/OFF** knob clockwise to power on the unit.
2. Connect an external audio device (e.g., MP3 player, CD player) to the **AUX IN** port using a 3.5mm audio cable (not included).
3. The turntable will automatically switch to AUX IN mode.
4. Adjust the volume using the **VOLUME** knob on the turntable and/or your external device.

## 6.4 USB Connectivity

The turntable features a PC-USB port for connecting to a computer. This allows for digital conversion of your vinyl records using appropriate software (not included). Refer to your chosen software's instructions for recording procedures.

# 7. MAINTENANCE

## 7.1 Cleaning the Turntable

- Always unplug the turntable from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- Gently brush the stylus with a soft brush designed for stylus cleaning, moving from back to front.

## 7.2 Stylus Replacement

The stylus (needle) is a consumable part and will wear out over time. A worn stylus can damage your records and degrade sound quality. Replace the stylus after approximately 200-300 hours of playback. Consult your

retailer or Crosley support for compatible replacement styli.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected and the outlet is functional.
No sound from speakers	Volume too low; function switch in wrong position; Bluetooth not paired.	Increase volume; ensure function switch is set to PHONO or Bluetooth is correctly paired.
Record skipping	Record is dirty or damaged; stylus is worn; turntable not level.	Clean record; replace stylus; ensure turntable is on a level surface.
Bluetooth device won't pair	Turntable not in pairing mode; device too far; device already paired to another unit.	Ensure turntable is in Bluetooth pairing mode; move device closer; disconnect from other Bluetooth devices.

## 9. SPECIFICATIONS



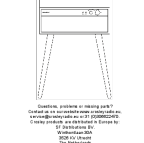



- **Product Dimensions:** 12.4 x 15.28 x 6.5 inches
- **Item Weight:** 13 pounds
- **Item Model Number:** CR6252A-YS
- **Brand:** Crosley
- **Included Components:** CR6252A-YS Portfolio Turntable
- **Style:** Vintage
- **Color:** Yellow Submarine
- **Signal Format:** Analog
- **Power Source:** Corded Electric
- **UPC:** 710244246569

## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Crosley website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** Crosley

**Date First Available:** November 30, 2021

<div><p><b>CROSLEY</b> CR6252A Portfolio USB Turntable Instruction Manual</p></div>	<p><a href="#">Crosley CR6252A Portfolio USB Turntable Instruction Manual</a></p> <p>Instruction manual for the Crosley CR6252A Portfolio USB Turntable, covering setup, operation, maintenance, and troubleshooting. Learn how to connect, play records, and use USB recording and Bluetooth features.</p>
<div><p><b>CROSLEY</b> CR8017B Voyager Turntable Instruction Manual</p></div>	<p><a href="#">Crosley CR8017B Voyager Turntable Instruction Manual</a></p> <p>This instruction manual provides detailed guidance on setting up, operating, and maintaining the Crosley CR8017B Voyager Turntable. Learn about its features, connections, and troubleshooting.</p>
<div><p><b>CROSLEY</b> CR6236A Jasper Turntable Instruction Manual</p></div>	<p><a href="#">Crosley CR6236A Jasper Turntable Instruction Manual</a></p> <p>This instruction manual provides comprehensive guidance for the Crosley CR6236A Jasper Turntable, covering setup, operation, safety, maintenance, and troubleshooting for optimal audio playback and Bluetooth connectivity.</p>
<div><p><b>CROSLEY</b> CR6253B Anthology Turntable Instruction Manual</p></div>	<p><a href="#">Crosley CR6253B Anthology Turntable: User Manual, Setup, and Operation Guide</a></p> <p>Get started with your Crosley CR6253B Anthology Turntable. This comprehensive guide covers setup, operation, Bluetooth connectivity, maintenance, troubleshooting, and safety instructions for your record player.</p>
<div><p><b>CROSLEY</b> C62A Turntable Instruction Manual</p></div>	<p><a href="#">Crosley C62A Turntable: Official Instruction Manual &amp; User Guide</a></p> <p>Download the official Crosley C62A turntable instruction manual. This guide provides detailed steps for setup, operation, needle replacement, maintenance, troubleshooting, and technical specifications for your Crosley C62A record player.</p>
<div><p><b>CROSLEY</b> C62B Turntable Instruction Manual</p></div>	<p><a href="#">Crosley C62B Turntable: Instruction Manual and User Guide</a></p> <p>Comprehensive instruction manual for the Crosley C62B turntable. Covers setup, operation, specifications, safety, and troubleshooting for this record player. Visit Crosley for support.</p>

