

Dragonwar GSPS4-R

Dragonwar Dragon Shock 4 Wireless Controller User Manual

Model: GSPS4-R

INTRODUCTION

Thank you for choosing the Dragonwar Dragon Shock 4 Wireless Controller. This manual provides detailed instructions for setting up, operating, and maintaining your controller. Designed for use with PlayStation 4 consoles, PC, and mobile devices, this controller offers a high-performance gaming experience with dual vibration and ergonomic design.



Image: Front view of the Dragonwar Dragon Shock 4 Wireless Controller in red.

PRODUCT FEATURES

- **Wireless Connectivity:** Utilizes high-performance Bluetooth 2.1 + EDR for stable, lag-free gameplay.
- **Extended Battery Life:** Equipped with a new generation 500mAh lithium battery, providing up to 6 hours of play time.
- **Ergonomic Design:** Approximately 5% larger than traditional PS4 controllers for enhanced comfort and grip, suitable for various hand sizes. Features a soft-touch rubber coating.
- **Precision Controls:** High-precision analog sticks and triggers for accurate input.
- **Dual Vibration:** Integrated dual motors provide immersive haptic feedback.
- **Illuminated Buttons:** Backlit buttons and joysticks, with 3D symbols for Cross, Circle, Triangle, and Square.
- **3.5mm Audio Jack:** For connecting headsets for in-game audio and chat.



Image: Diagram illustrating the wireless capabilities, LED indicator, sensitive buttons, dual motors, accurate thumb sticks, and soft-touch rubber coating of the controller.

PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- Dragonwar Dragon Shock 4 Wireless Controller (Red)
- USB Charging Cable

- User Manual (this document)



Image: The Dragonwar Dragon Shock 4 Wireless Controller shown within its retail packaging.

CONTROLLER LAYOUT



Image: Detailed diagram labeling all buttons, joysticks, and ports on the Dragonwar Dragon Shock 4 Wireless Controller.

1. Left Joystick / L3 Button
2. Home Button
3. 3.5mm Jack (Play & Chat)
4. Right Joystick / R3 Button
5. Button (Circle)
6. Button (Cross)
7. Button (Square)
8. Button (Triangle)
9. Options Button
10. Touch Pad
11. Share Button
12. Up Button (D-Pad)
13. Right Button (D-Pad)
14. Left Button (D-Pad)
15. Down Button (D-Pad)
16. R1 Button
17. R2 Button

18. L1 Button
19. L2 Button
20. Charging Port

SETUP

1. Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB charging cable to the controller's charging port (20) and the other end to a USB power source (e.g., PS4 console, PC, or USB wall adapter).

- Charging Time: Approximately 3-4 hours.
- Battery Life: Up to 6 hours of gameplay on a full charge.



Image: Visual representation of the controller's battery life (5-6 hours play time), charging time (3-4 hours), and 500mAh battery capacity.

2. Connecting to PlayStation 4 (PS4)

1. Ensure your PS4 console is powered on.
2. Connect the controller to the PS4 console using the USB charging cable.

3. Press the Home button (2) on the controller. The controller will pair with the console.
4. Once paired, you can disconnect the USB cable for wireless play.
5. For subsequent uses, simply press the Home button (2) to connect wirelessly.

3. Connecting to PC (Windows 7/8/10/11)

The controller can be connected to a PC via Bluetooth or USB cable.

Via Bluetooth:

1. Ensure your PC has Bluetooth enabled.
2. On the controller, press and hold the Share button (11) and the Home button (2) simultaneously until the light bar starts flashing rapidly. This indicates pairing mode.
3. On your PC, go to Bluetooth settings and search for new devices.
4. Select "Wireless Controller" or "Dragon Shock 4" from the list of available devices and click "Pair".
5. Once paired, the light bar will stop flashing and remain solid.

Via USB Cable:

1. Connect the controller to your PC using the USB charging cable.
2. The PC should automatically detect and install the necessary drivers.
3. The controller will function as a wired gamepad.

4. Connecting to Mobile Phone

1. Enable Bluetooth on your mobile phone.
2. On the controller, press and hold the Share button (11) and the Home button (2) simultaneously until the light bar starts flashing rapidly.
3. On your mobile phone, search for new Bluetooth devices.
4. Select "Wireless Controller" or "Dragon Shock 4" from the list and pair.
5. Compatibility may vary depending on the mobile device and game.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press the Home button (2).
- **To Power Off:** Hold the Home button (2) for approximately 10 seconds until the controller powers down. The controller will also automatically power off after a period of inactivity to conserve battery.

Using the Touch Pad (10)

The touch pad functions as an input device in compatible games and applications. It supports touch gestures and can also be pressed down as a button.

Vibration Function

The built-in dual vibration motors provide haptic feedback during gameplay, enhancing immersion. This function is automatically enabled in compatible games.

3.5mm Audio Jack (3)

Connect a compatible 3.5mm headset to the audio jack for in-game sound and voice chat (functionality may vary

by platform and game).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in use for extended periods.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Solution
Controller does not turn on.	Ensure the controller is charged. Connect it to a power source using the USB cable and allow it to charge for a few minutes before attempting to power on again.
Controller does not connect wirelessly.	<ul style="list-style-type: none">• Ensure the controller is in pairing mode (light bar flashing rapidly).• Delete previous pairings from your device's Bluetooth settings and try pairing again.• Try connecting via USB cable first to establish an initial connection.• Ensure your device's Bluetooth is enabled and functioning correctly.
Input lag or disconnections.	<ul style="list-style-type: none">• Ensure there are no obstructions between the controller and the device.• Move closer to the device.• Reduce interference from other wireless devices.• Ensure the controller is fully charged.
Vibration function not working.	Ensure the game you are playing supports vibration feedback. Check in-game settings to ensure vibration is enabled.

SPECIFICATIONS

Model Number	GSPS4-R
Brand	Dragonwar
Color	Red
Connectivity Technology	Bluetooth 2.1 + EDR
Compatible Devices	PlayStation 4, PC (Windows 7/8/10/11), Mobile
Special Features	Ergonomic, Wireless, Dual Vibration, Backlit Buttons
Battery Type	Lithium-ion





Battery Capacity	500mAh
Number of Buttons	12 (excluding joysticks and touch pad press)
Audio Jack	3.5mm


WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Dragonwar website. Keep your proof of purchase for warranty claims.

Manufacturer: DRAGONWAR

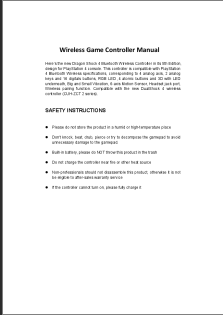
Related Documents - GSPS4-R

	<p>Dragon Shock 4 Wireless Controller Manual</p> <p>Comprehensive user manual for the Dragon Shock 4 Bluetooth Wireless Controller, detailing features, safety guidelines, pairing instructions, button functions, special features like RGB display, electrical specifications, and FCC compliance for PlayStation 4.</p>
	<p>Ariston Electric Water Heaters User Manual</p> <p>Comprehensive user manual for Ariston electric water heaters, covering installation, operation, maintenance, and safety guidelines. Includes warranty information and technical specifications.</p>
	<p>Руководство пользователя и гарантийный талон для электрических водонагревателей Ariston</p> <p>Подробное руководство пользователя и гарантийный талон для электрических водонагревателей Ariston. Содержит инструкции по установке, эксплуатации, технике безопасности и гарантийным условиям.</p>
	<p>Ariston Electric Water Heaters User Manual</p> <p>Comprehensive user manual for Ariston electric water heaters, covering installation, operation, maintenance, and safety guidelines. Includes warranty information and technical specifications.</p>

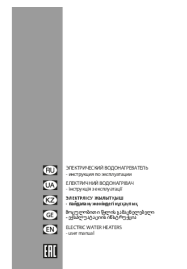

[Руководство пользователя электрического водонагревателя Ariston](#)

Данное руководство содержит подробные инструкции по установке, эксплуатации и обслуживанию электрических водонагревателей Ariston. Включает важные указания по безопасности, технические характеристики и информацию для устранения неполадок.

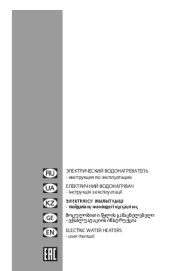

[Ariston Электрические Водонагреватели: Руководство пользователя и гарантийный талон](#)

Подробное руководство пользователя и гарантийный талон для электрических водонагревателей Ariston. Инструкции по установке, эксплуатации, обслуживанию и безопасности.