



[Manuals.plus](#) /

> [CyberpowerPC](#) /

> CyberpowerPC Gamer Xtreme Gaming Desktop User Manual

CyberpowerPC

CyberpowerPC Gamer Xtreme Gaming Desktop User Manual

Model: Intel Core i7-11700F | RTX 3060 Ti

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new CyberpowerPC Gamer Xtreme Gaming Desktop Computer. Please read this manual thoroughly before using your system to ensure optimal performance and longevity.

SETUP GUIDE

Follow these steps to set up your CyberpowerPC Gamer Xtreme desktop:

- Unpacking:** Carefully remove the computer and all accessories from the packaging. Ensure all components listed in the packing list are present.
- Placement:** Place the computer tower on a stable, flat surface with adequate ventilation. Avoid placing it directly against a wall or in an enclosed space that could restrict airflow.



Image: Side view of the CyberpowerPC Gamer Xtreme desktop tower, highlighting its design and internal components.

3. Connecting Peripherals:

- **Monitor:** Connect your monitor to the graphics card ports (HDMI, DisplayPort) located at the rear of the computer. Ensure it's connected to the dedicated graphics card (NVIDIA GeForce RTX 3060 Ti), not the motherboard's integrated graphics ports.
- **Keyboard and Mouse:** Connect the included keyboard and mouse to the available USB ports.



Image: The CyberpowerPC Gamer Xtreme desktop, accompanied by its bundled keyboard and mouse, ready for connection.

- **Network:** For wired internet, connect an Ethernet cable to the LAN port. For wireless, ensure Wi-Fi antennas are connected if applicable, or use the integrated Wi-Fi.
 - **Power:** Connect the power cable to the power supply unit (PSU) at the rear of the computer and then to a wall outlet or surge protector.
4. **First Boot:** Press the power button on the front of the computer. The system will boot into Windows 11. Follow the on-screen instructions to complete the initial setup of the operating system.



Image: Top panel of the desktop, featuring easily accessible USB ports and the power button for convenient connectivity.

OPERATING INSTRUCTIONS

Your CyberpowerPC Gamer Xtreme is designed for high performance. Here are some basic operating guidelines:

- **Power On/Off:** Use the power button on the front panel to turn the system on. To shut down, use the Windows Start menu options (Start > Power > Shut down). Avoid forced shutdowns unless necessary.
- **Software Installation:** Install games and applications from trusted sources. Ensure your operating system and drivers are up to date for optimal performance and security.
- **Gaming Performance:** For best gaming experience, ensure your graphics drivers are the latest version from NVIDIA's official website. Adjust in-game settings to balance visual quality and frame rate according to your preferences.
- **Storage Management:** Utilize both the 500GB SSD for the operating system and frequently used applications/games, and the 1TB HDD for larger files and less frequently accessed data. This optimizes load times and overall system responsiveness.

MAINTENANCE

Regular maintenance helps prolong the life and performance of your computer:

- **Dust Cleaning:** Periodically clean dust from the internal components, especially the fans and heatsinks, using compressed air. Ensure the system is powered off and unplugged before cleaning.



Image: Inside the CyberpowerPC Gamer Xtreme, revealing the organized components and vibrant RGB lighting of the cooling fans.

- **Software Updates:** Regularly update Windows 11, graphics drivers, and other essential software to ensure security and performance improvements.
- **Antivirus Protection:** Maintain up-to-date antivirus software to protect against malware and other security threats.
- **Cable Management:** Ensure cables inside and outside the case are neatly organized to improve airflow and prevent accidental disconnections.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
No display on monitor	Incorrect cable connection, monitor off, wrong input selected.	Ensure monitor cable is securely connected to the graphics card. Check monitor power and input source. Try a different cable or port.
System not powering on	Power cable loose, PSU switch off, faulty power outlet.	Verify power cable is firmly connected to both PC and outlet. Check if the PSU switch (at the back of the PC) is in the 'On' position. Test the outlet with another device.
Slow performance/lag in games	Outdated drivers, background applications, overheating.	Update graphics drivers. Close unnecessary background programs. Ensure proper ventilation and clean dust from fans.
Peripherals (keyboard/mouse) not responding	Loose connection, faulty USB port, driver issue.	Reconnect the peripheral. Try a different USB port. Check device manager for driver issues.

SPECIFICATIONS

Detailed technical specifications of your CyberpowerPC Gamer Xtreme Gaming Desktop:

Processor: Intel Core i7-11700F (2.5 GHz, 8 Cores, 16 Threads)

Graphics Card: NVIDIA GeForce RTX 3060 Ti with 8GB GDDR6X Dedicated Video Memory

RAM: 16GB DDR4 SDRAM

Storage: 500GB SSD + 1TB HDD

Operating System: Windows 11 Home

Network: Integrated 10/100/1000 GbE LAN, Ethernet, Wi-Fi (802.11ac)

Cooling System: Air Cooling System

Optical Drive: None

Dimensions (HxWxD): Approximately 19.5 x 9.1 x 18.1 inches

Weight: Approximately 36 lbs

Included Peripherals: Keyboard, Mouse, Mouse Pad

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official CyberpowerPC website. Keep your purchase receipt and product serial number handy for any support inquiries. Protection plans are available for extended coverage. Please refer to your purchase details for more information on available plans.

For additional assistance, you may contact CyberpowerPC customer service directly through their official channels.

