

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ninja](#) /
- › [Ninja Foodi 10-in-1 Multi-Function Oven DT200EU Instruction Manual](#)

## Ninja DT200EU

# Ninja Foodi 10-in-1 Multi-Function Oven DT200EU

Instruction Manual

[Overview](#)   [Setup](#)   [Operation](#)   [Important Safeguards](#)   [Product](#)  
[Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Ninja Foodi 10-in-1 Multi-Function Oven to ensure safe operation and prevent property damage. Keep this manual for future reference.

### General Safety

- Always ensure the appliance is properly assembled before use.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot materials.
- Do not immerse the cord, plugs, or main unit housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

### Electrical Safety

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.

### Usage and Placement

- Place the oven on a stable, level, heat-resistant surface.
- Ensure adequate space (at least 6 inches) on all sides for proper ventilation.
- Do not place anything on top of the oven while in operation.
- Do not cover the air vents while the oven is operating.

## PRODUCT OVERVIEW

The Ninja Foodi 10-in-1 Multi-Function Oven is designed for versatile cooking, offering 10 distinct functions in a compact

countertop design. It features two-tier cooking for preparing multiple dishes simultaneously.

## Key Features

- **10 Cooking Functions:** Air Fry, Roast, Whole Roast, Grill, Bake, Pizza, Dry, Reheat, Toast, and Bagel.
- **Two-Tier Cooking:** Cook a main dish and a side dish simultaneously.
- **Fast Preheating:** Achieves desired temperature quickly, often in 90 seconds.
- **All-Round Convection:** Ensures fast, crispy, and even results.
- **Digital Display & Touch Screen Controls:** Conveniently located on the oven door handle.

## Included Components

- Ninja Foodi 10-in-1 Multi-Function Oven (EU plug)
- Two Grid Racks
- Oven Tray
- Frying Tray
- Air Frying Basket



Image: The Ninja Foodi 10-in-1 Multi-Function Oven displayed on a kitchen counter, surrounded by a variety of dishes prepared using its functions, including pizza, air-fried chicken, fries, and baked cookies.

## SETUP

## Unpacking

1. Carefully remove all packaging materials and promotional labels from the oven and its accessories.
2. Inspect the oven and accessories for any damage. Do not use if damaged.

## Placement

1. Place the oven on a clean, dry, level, and heat-resistant surface, such as a countertop.
2. Ensure there is at least 6 inches (15 cm) of space on all sides of the oven to allow for proper air circulation. Do not place it directly against a wall or under cabinets.

## Initial Cleaning

1. Wipe the exterior of the oven with a damp cloth.
2. Wash all included accessories (grid racks, oven tray, frying tray, air frying basket) in warm, soapy water. Rinse thoroughly and dry completely.
3. Before first use, it is recommended to run the oven empty on the 'Bake' function at 200°C (390°F) for 15 minutes to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

The control panel is integrated into the oven door handle and features a digital display and touch screen buttons for selecting functions, adjusting time, and temperature.

- **Power Button:** Turns the oven on/off.
- **Function Dial/Buttons:** Selects desired cooking function (Air Fry, Roast, etc.).
- **Temp/Time Buttons:** Adjusts cooking temperature and time.
- **Start/Pause Button:** Begins or pauses the cooking cycle.
- **Light Button:** Turns the interior oven light on/off.

### Cooking Functions

The oven offers 10 versatile cooking functions:

1. **Air Fry:** For crispy results with little to no oil. Ideal for fries, chicken wings, and vegetables.
2. **Roast:** Perfect for tender meats, roasted vegetables, and casseroles.
3. **Whole Roast:** Optimized for larger items like whole chickens.
4. **Grill:** For searing and browning.
5. **Bake:** For cakes, cookies, bread, and other baked goods.
6. **Pizza:** Specifically designed for cooking pizzas to perfection.
7. **Dry:** For dehydrating fruits, vegetables, or making jerky.
8. **Reheat:** Gently warms leftovers without overcooking.
9. **Toast:** For even toasting of bread.
10. **Bagel:** Toasts the cut side of bagels while gently warming the outside.

### General Cooking Steps

1. **Prepare Food:** Place your food on the appropriate accessory (oven tray, air frying basket, or grid rack).
2. **Insert Accessories:** Slide the accessory into the desired rack position within the oven. For two-tier cooking, use both grid racks.
3. **Select Function:** Press the Power button, then use the function buttons to select your desired cooking mode.
4. **Set Temperature & Time:** Use the Temp/Time buttons to adjust the temperature and cooking duration. The oven will typically preheat automatically.
5. **Start Cooking:** Press the Start/Pause button to begin. The oven will beep when cooking is complete.

6. **Remove Food:** Carefully remove cooked food using oven mitts.



Image: A user demonstrates two-tier cooking by placing an air frying basket with fries on the upper rack and a tray with chicken wings on the lower rack into the oven.



Image: A user places a tray containing a whole roasted chicken into the lower section of the oven, while a basket of roasted vegetables cooks on the upper rack, showcasing the two-tier cooking capability.



Image: A person uses oven mitts to carefully remove a baking tray filled with freshly baked chocolate chip cookies from the oven, demonstrating the 'Bake' function.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your oven. Always unplug the oven and allow it to cool completely before cleaning.

### Exterior Cleaning

- Wipe the exterior with a clean, damp cloth. Do not use abrasive cleaners or scouring pads.
- For stubborn stains, use a mild liquid detergent.

### Interior Cleaning

- The interior walls are non-stick. Wipe with a damp cloth and mild liquid detergent. Do not use abrasive brushes or pads.
- For baked-on food, allow the oven to soak with warm, soapy water for a few minutes before cleaning.

### Accessory Cleaning

- All accessories (grid racks, oven tray, frying tray, air frying basket) are dishwasher safe or can be hand-washed in warm, soapy water.
- The removable crumb collector slides out from the bottom for easy cleaning. Empty and wash it after each use to

prevent grease buildup.

## TROUBLESHOOTING

If you encounter any issues with your Ninja Foodi 10-in-1 Multi-Function Oven, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Power cord not plugged in. No power at the outlet.	Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker.
Food is not cooking evenly.	Overcrowding the oven. Incorrect rack position. Uneven food distribution.	Avoid overcrowding; cook in smaller batches if necessary. Refer to recipe or function guidelines for recommended rack positions. Arrange food in a single layer for best results.
White smoke is coming from the oven.	Grease or food residue on heating elements or interior.	This is normal for fatty foods. Ensure the oven and accessories are clean before use. Remove any visible food debris.
Oven is taking too long to preheat.	Normal operation.	While preheating is fast, larger temperature changes or initial use may take slightly longer. Ensure the door is fully closed.

## SPECIFICATIONS

Detailed technical specifications for the Ninja Foodi 10-in-1 Multi-Function Oven DT200EU.

**Model Number:** DT200EU

**Brand:** Ninja

**Colour:** Silver, Black

**Capacity:** 29 litres

**Wattage:** 1600 Watts

**Temperature Range:** 40-230 Degrees Celsius

**Power Source:** Electric

**Control Type:** Knob, Touch Screen

**Door Style:** Dropdown Door

**Door Material:** Tempered Glass

**Item Weight:** 13.1 kg

**Item Dimensions (LxWxH):** 50.5 x 43.5 x 33.5 Centimeters



Image: A diagram illustrating the physical dimensions of the Ninja Foodi 10-in-1 Multi-Function Oven, with measurements for height (33.5cm), width (50cm), and depth (43.1cm).

## WARRANTY & SUPPORT

Your Ninja Foodi 10-in-1 Multi-Function Oven is covered by a limited warranty. For specific warranty details, including duration and terms, please refer to the warranty card included with your purchase or visit the official Ninja website.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact Ninja customer service. Contact information can typically be found on the official Ninja website or on your product registration materials.

- **Online Support:** Visit the official Ninja website for FAQs, product registration, and support resources.
- **Telephone Support:** Refer to your product packaging or the Ninja website for regional customer service phone numbers.