

[Manuals.plus](#) /

> [Owigift](#) /

> Owigift Refrigerator Ice Maker Instruction Manual for Frigidaire, Kenmore, Electrolux, and Crosley Models

Owigift refrigerator ice maker

Owigift Refrigerator Ice Maker Instruction Manual

Model: Refrigerator Ice Maker

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your new Owigift Refrigerator Ice Maker. This product is designed as an aftermarket replacement part compatible with various refrigerator models from brands such as Frigidaire, Kenmore, Electrolux, and Crosley. Please read this manual thoroughly before installation and use to ensure proper function and safety.

2. SAFETY INFORMATION

Always prioritize safety when working with electrical appliances. Failure to follow these safety instructions could result in electric shock, fire, or personal injury.

- **Disconnect Power:** Always unplug the refrigerator from the power outlet before attempting any installation, maintenance, or repair.
- **Qualified Personnel:** Installation and repairs should ideally be performed by a qualified technician. If you are unsure, consult a professional.
- **Water Connection:** Ensure all water connections are secure and leak-free to prevent water damage.
- **Original Parts:** Use only genuine replacement parts or approved aftermarket parts to ensure compatibility and safety.
- **Keep Clear:** Keep hands and tools clear of moving parts during operation.

3. PACKAGE CONTENTS

Verify that all items are present and undamaged upon opening the package.

- 1x Owigift Refrigerator Ice Maker Assembly



Figure 1: The complete Owigift Refrigerator Ice Maker assembly, showing the main unit with the ice mold and the wire shut-off arm.

4. COMPATIBILITY

This Owigift ice maker is an aftermarket replacement part designed to be compatible with a wide range of Frigidaire, Kenmore, Electrolux, and Crosley refrigerator models. It is crucial to verify your refrigerator's model number against the list of compatible models to ensure proper fit and function.

To find your model number: Typically, the model number is located on a label inside the refrigerator compartment (e.g., on the side wall, ceiling, or behind the crisper drawers) or on the back of the appliance.

Partial list of compatible models:

- Frigidaire: DGUS2645LF0, DGUS2645LF1, DGUS2645LF2, DGUS2645LF3, DGUS2645LF4, DGUS2645LF5, DGUS2645LF6A, PHS69EJSS0, PHS6KR5JSB0, PHS6LE6HSB1, PHSB37EHSB1, PHSB67EHSB3, and many more.
- Kenmore (various models)
- Electrolux (various models)
- Crosley (various models)

If your specific model number is not listed or you are uncertain about compatibility, please contact customer support for assistance.

5. SETUP AND INSTALLATION

Follow these steps carefully to install the ice maker. It is recommended to have a second person assist if needed.

1. Prepare the Refrigerator:

- Unplug the refrigerator from the electrical outlet.
- Turn off the water supply to the refrigerator.

- Remove any existing ice maker components or ice bucket from the freezer compartment.

2. Remove Old Ice Maker (if applicable):

- Locate the mounting screws or clips holding the old ice maker in place.
- Carefully disconnect the electrical harness by pressing the release tab and pulling it apart.
- Remove the old ice maker.

3. Install New Ice Maker:

- Align the new Owigift ice maker with the mounting brackets inside the freezer.
- Secure the ice maker using the appropriate screws or clips. Ensure it is firmly in place.
- Connect the electrical harness. Make sure it clicks into place securely.

4. Connect Water Line:

- Ensure the water fill tube is properly aligned with the ice maker's water inlet.
- If necessary, connect the water line to the ice maker according to your refrigerator's specific design.

5. Final Steps:

- Replace the ice bucket.
- Turn on the water supply to the refrigerator. Check for any leaks around the water connections.
- Plug the refrigerator back into the electrical outlet.



Figure 2: Side view of the ice maker, showing the mounting points and electrical connector. Ensure these align with your refrigerator's setup.

6. OPERATING INSTRUCTIONS

Once installed, the ice maker will begin producing ice automatically under normal operating conditions.

- **Initial Operation:** It may take 12 to 24 hours for the ice maker to produce its first batch of ice after installation or after being turned off. Discard the first few batches of ice to ensure cleanliness.
- **Ice Production Rate:** The ice maker typically produces 7-8 cubes per cycle. The production rate depends on freezer temperature and water pressure.
- **Shut-Off Arm:** The ice maker features a wire shut-off arm. When the ice bucket is full, the arm will rise, stopping ice production. Lowering the arm will resume production.



Figure 3: Top view of the ice maker, showing the ON/OFF switch. Ensure the switch is in the 'ON' position for operation.

Turning the Ice Maker ON/OFF: Some models may have a physical ON/OFF switch located on the ice maker unit itself (refer to Figure 3). Ensure this switch is in the 'ON' position for the ice maker to operate. To stop ice production, either raise the shut-off arm or move the switch to the 'OFF' position.

7. MAINTENANCE

Regular maintenance helps ensure optimal performance and longevity of your ice maker.

- **Cleaning the Ice Bucket:** Periodically empty and wash the ice bucket with mild soap and warm water. Rinse thoroughly and dry before returning it to the freezer.
- **Cleaning the Ice Maker:** If mineral deposits or debris accumulate on the ice maker, disconnect power and gently wipe the surfaces with a damp cloth. Do not use abrasive cleaners or sharp objects.

- **Water Filter:** If your refrigerator has a water filter, ensure it is replaced regularly according to the refrigerator manufacturer's recommendations to maintain water quality and ice production.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions. Always disconnect power before inspecting the ice maker.

| Problem | Possible Cause | Solution |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No ice production | Refrigerator not plugged in or power outage. Water supply turned off or low pressure. Ice maker ON/OFF switch is in 'OFF' position. Shut-off arm is in the 'UP' position. Freezer temperature is too high. Clogged water filter or water line. | Check power connection. Ensure water supply is on and pressure is adequate. Move switch to 'ON' position. Lower the shut-off arm. Adjust freezer temperature to 0°F (-18°C). Replace water filter or check water line for kinks/blockages. |
| Small or hollow ice cubes | Low water pressure. Partially clogged water filter. | Check water supply and pressure. Replace water filter. |
| Ice cubes frozen together | High humidity in freezer. Ice bucket overfilled. | Ensure freezer door seals properly. Do not overfill the ice bucket. |

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

| Feature | Detail |
|----------------------|-----------------------------------------------------------------------------------------------------|
| Product Type | Refrigerator Ice Maker Assembly |
| Brand | Owigift |
| Model Name | refrigerator ice maker |
| Compatibility | Aftermarket replacement for Frigidaire, Kenmore, Electrolux, Crosley refrigerators (various models) |
| UPC | 718997252196 |
| Date First Available | December 1, 2021 |

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact the seller directly. If you are unsure about compatibility or encounter any issues not covered in this manual, please reach out to customer service for assistance. We aim to resolve your problem within 24 hours.

Contact Information: Refer to your purchase documentation or the seller's storefront for contact details.

Protection Plans: Extended protection plans may be available for purchase. Please check with your retailer for details on

2-Year or 3-Year protection plans.

