

[Manuals.plus](#) /

> [Owgift](#) /

> Owgift Refrigerator Ice Maker Instruction Manual

## Owgift FGHT1844KF5

# Owgift Refrigerator Ice Maker Instruction Manual

MODEL: FGHT1844KF5

## 1. Introduction

---

Thank you for choosing the Owgift Refrigerator Ice Maker. This manual provides essential information for the proper installation, operation, and maintenance of your new ice maker. Please read this manual thoroughly before installation and keep it for future reference.

## 2. Product Overview

---

The Owgift Refrigerator Ice Maker is a replacement assembly designed to restore ice production in compatible refrigerator models. It is an aftermarket component engineered to meet the specifications of the original part.



Figure 2.1: Front view of the Owigift Refrigerator Ice Maker assembly.



Figure 2.2: Side view of the Owigift Refrigerator Ice Maker assembly, showing the ice mold and rake.



Figure 2.3: Top view of the Owigift Refrigerator Ice Maker, highlighting the ON/OFF switch.

### 3. Compatibility

---

This aftermarket ice maker is designed to replace units in various refrigerator models from the following brands:

- Frigidaire
- Kenmore
- Electrolux
- Crosley

Specifically, it is compatible with the following Frigidaire models:

- FGHT1844KF5
- LGHT1837NF4
- LFHT2117NF4
- LFHT1817LW8

- FFTR2021TW0
- FFTR1814QW4A

*Note: If you are unsure about compatibility, please contact the seller with your refrigerator's model number for assistance.*

## 4. Package Contents

---

Your package should contain the following item:

- 1x Refrigerator Ice Maker Assembly

## 5. Setup and Installation

---

**Important Safety Information:** Before beginning any installation or repair work, always disconnect power to your refrigerator by unplugging it from the wall outlet or turning off the circuit breaker. Failure to do so can result in serious injury or electrical shock.

1. **Disconnect Power:** Ensure the refrigerator is completely unplugged from the power source.
2. **Access Ice Maker Compartment:** Locate the existing ice maker in your freezer compartment. You may need to remove the ice bucket and any covers or shelves to gain full access.
3. **Remove Old Ice Maker:** Carefully disconnect the wiring harness from the old ice maker. Unscrew any mounting screws or release clips holding the old unit in place and remove it.
4. **Install New Ice Maker:** Align the new Owigift ice maker assembly with the mounting points. Secure it with the screws or clips previously removed.
5. **Connect Wiring:** Plug the wiring harness from the refrigerator into the new ice maker's connector. Ensure a secure connection.
6. **Restore Components:** Replace any covers, shelves, and the ice bucket that were removed.
7. **Restore Power:** Plug the refrigerator back into the wall outlet or turn on the circuit breaker.

*Note: If you are not comfortable performing this installation, it is recommended to seek assistance from a qualified appliance technician.*

## 6. Operating Instructions

---

Once installed and power is restored, the ice maker will begin its cycle automatically, provided the freezer temperature is sufficiently low and the water supply is connected and turned on.

- **First Ice Production:** It may take several hours for the first batch of ice to be produced after installation, as the unit needs to cool down and fill with water. Discard the first few batches of ice to ensure cleanliness.
- **Ice Level Arm:** The ice maker features a shut-off arm (also known as a bail arm or feeler arm). When the ice bucket is full, this arm will be pushed up by the accumulated ice, signaling the ice maker to temporarily stop production. Once ice is removed and the arm drops, production will resume.
- **ON/OFF Switch:** Refer to Figure 2.3. Your ice maker may have an ON/OFF switch located on the side or top of the unit. Ensure this switch is in the "ON" position for the ice maker to operate. To stop ice production, move the switch to the "OFF" position or raise the shut-off arm manually and secure it in the up position.

## 7. Maintenance

---

Regular maintenance helps ensure optimal performance and longevity of your ice maker.

- **Cleaning:** Periodically clean the ice bucket with mild soap and warm water. Rinse thoroughly and dry completely before returning it to the freezer.
- **Water Filter:** If your refrigerator has a water filter, ensure it is replaced regularly according to your refrigerator's manufacturer recommendations. A clogged water filter can reduce water flow to the ice maker, affecting ice production.
- **Inspect Water Line:** Occasionally check the water supply line for any kinks or leaks.

## 8. Troubleshooting

If your ice maker is not functioning as expected, consider the following common issues before seeking professional assistance:

Problem	Possible Cause	Solution
No ice production	<ul style="list-style-type: none"><li>◦ Ice maker ON/OFF switch is OFF</li><li>◦ Water supply turned off or kinked</li><li>◦ Freezer temperature too high</li><li>◦ Ice level arm is in the "up" position</li><li>◦ Clogged water filter</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure switch is ON</li><li>◦ Check water supply valve and line</li><li>◦ Set freezer to 0°F (-18°C) or lower</li><li>◦ Lower the ice level arm</li><li>◦ Replace water filter</li></ul>
Small or hollow ice cubes	<ul style="list-style-type: none"><li>◦ Low water pressure</li><li>◦ Partially clogged water line/filter</li></ul>	<ul style="list-style-type: none"><li>◦ Check household water pressure</li><li>◦ Inspect water line for kinks; replace filter</li></ul>
Ice cubes frozen together	<ul style="list-style-type: none"><li>◦ Freezer temperature too warm</li><li>◦ Infrequent ice usage</li></ul>	<ul style="list-style-type: none"><li>◦ Lower freezer temperature</li><li>◦ Use ice more frequently or empty ice bin</li></ul>

*If the problem persists after trying these solutions, please contact customer support.*

## 9. Specifications

Attribute	Detail
Brand	Owigift
Model Name	refrigerator ice maker
Part Number	FGHT1844KF5
UPC	718997252226
Compatibility	Aftermarket replacement for Frigidaire, Kenmore, Electrolux, Crosley refrigerators

## 10. Warranty and Support

For any questions regarding installation, operation, or troubleshooting that are not covered in this manual,

please contact the seller directly. They are committed to resolving your issues within 24 hours.

Please refer to your purchase documentation for specific warranty terms and conditions.

*Seller: TRAN XUAN LAM SHOP*