

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crosley](#) /

› [Crosley CR8017B-BK Voyager Portable Vinyl Record Player Turntable Instruction Manual](#)

Crosley CR8017B-BK

Crosley CR8017B-BK Voyager Portable Vinyl Record Player Turntable Instruction Manual

Model: CR8017B-BK

INTRODUCTION

The Crosley Voyager Record Player is designed to combine classic vinyl listening with modern audio technology. This portable turntable supports multiple record speeds and features built-in speakers, Bluetooth connectivity for both input and output, and various audio ports for versatile use. This manual provides essential information for setting up, operating, and maintaining your record player.

WHAT'S IN THE BOX

- CR8017B-BK Turntable Unit
- 45 RPM Adapter
- Power Adaptor

PRODUCT FEATURES

- **Three-Speed Belt-Drive Turntable:** Plays 33 1/3, 45, and 78 RPM records.
- **Adjustable Pitch Control:** Fine-tune playback speed.
- **Cueing Lever:** Gently lowers and raises the needle.
- **Bluetooth In:** Stream digital music from your device to the turntable's built-in speakers.
- **Bluetooth Out:** Connect the turntable wirelessly to external Bluetooth speakers.
- **Built-in Dynamic Full-Range Stereo Speakers:** Integrated audio output.
- **Auxiliary Input:** Connect external audio sources via a 3.5mm audio cable.
- **RCA Output:** Connect to an external stereo system for enhanced audio.
- **Headphone Jack:** For private listening.
- **Portable Suitcase Design:** Compact and easy to transport with a carry handle.

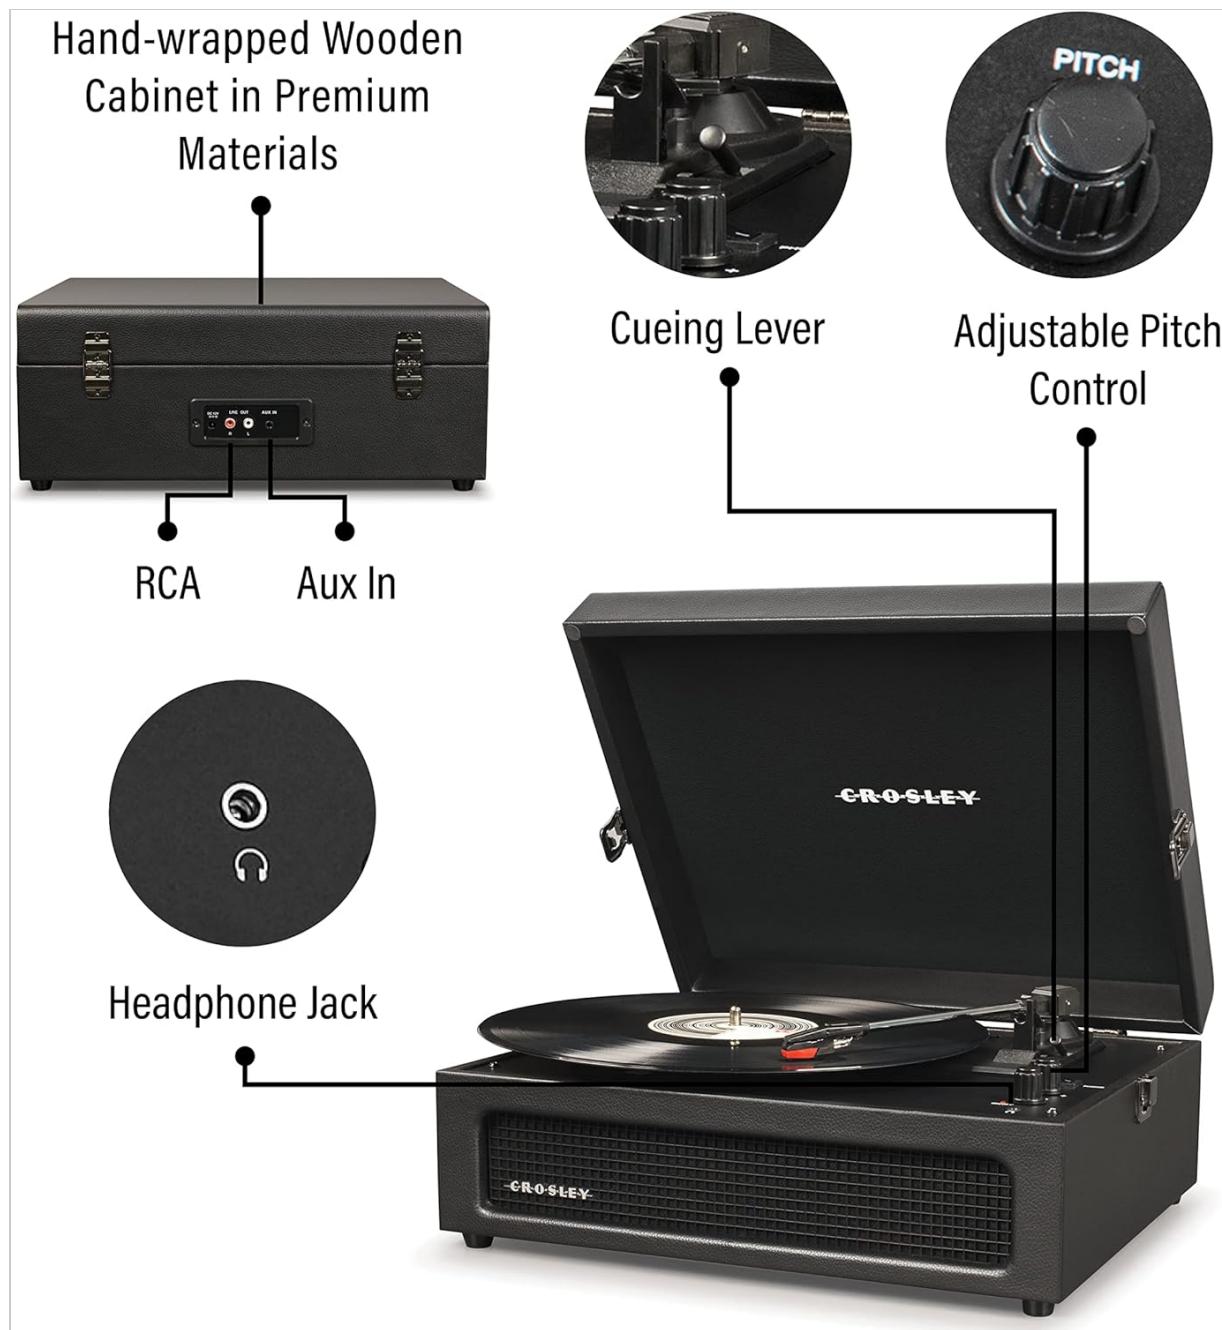


Image: Key features of the Crosley Voyager turntable, highlighting the 3-speed selector, compact and portable design, and built-in stereo speakers.

SETUP

- 1. Unpack the Turntable:** Carefully remove all components from the packaging. Ensure all packing materials are removed from the turntable platter and tonearm.
- 2. Place the Turntable:** Position the turntable on a flat, stable surface away from direct sunlight, heat sources, or excessive vibration.
- 3. Connect Power:** Insert the power adaptor into the DC 12V input jack on the back of the turntable, then plug the adaptor into a wall outlet.
- 4. Remove Stylus Protector:** Gently remove the white plastic stylus protector from the needle.
- 5. Initial Power On:** Turn the POWER/VOLUME knob clockwise to turn on the unit. The power indicator light will illuminate.



Image: Rear panel of the turntable, displaying the DC 12V power input, RCA Line Out, and Aux In ports for external connections.

OPERATING INSTRUCTIONS

Playing Records

1. **Select Speed:** Set the speed selector switch (33, 45, or 78 RPM) to match the record you are playing. Use the included 45 RPM adapter for 7-inch records with large center holes.
2. **Place Record:** Place a record on the turntable platter.
3. **Unlock Tonearm:** Release the tonearm clip.
4. **Raise Tonearm:** Lift the cueing lever to raise the tonearm.
5. **Position Tonearm:** Manually move the tonearm over the desired track of the record.
6. **Lower Tonearm:** Gently lower the cueing lever to place the stylus on the record. The platter will begin to spin.
7. **Adjust Volume:** Rotate the POWER/VOLUME knob to adjust the sound level.
8. **Adjust Pitch:** Use the PITCH control knob to fine-tune the playback speed if needed.
9. **End of Playback:** When the record finishes, the tonearm will automatically return to its rest position (if auto-stop is enabled). Lift the tonearm, return it to the rest, and secure the clip.



Image: Top-down view of the turntable with a record spinning, illustrating the tonearm in position and the control panel.

Bluetooth Input (Streaming to Turntable)

- Select Bluetooth Mode:** Slide the PHONO/BT switch to the BT position. The Bluetooth indicator light will flash blue.
- Pair Device:** On your Bluetooth-enabled device (e.g., smartphone, tablet), search for "Crosley Voyager" in the Bluetooth settings and pair. Once connected, the indicator light will glow solid blue.
- Play Music:** Start playing music on your device. The audio will stream through the turntable's built-in speakers.
- Adjust Volume:** Control the volume using both your device and the turntable's POWER/VOLUME knob.



Image: The turntable with a smartphone icon and Bluetooth logo, indicating the ability to stream digital music through its built-in speakers.

Bluetooth Output (Streaming from Turntable)

- Enable Pairing on External Speaker:** Put your external Bluetooth speaker into pairing mode.
- Select Bluetooth Output Mode:** Slide the PHONO/BT switch to the BT position. The Bluetooth indicator light will flash blue.
- Initiate Pairing:** The turntable will automatically search for and connect to the nearest Bluetooth speaker in pairing mode. Once connected, the indicator light will glow solid blue.
- Play Record:** Place a record and begin playback as described above. The audio will now stream to your external Bluetooth speaker.



Image: The turntable with a Bluetooth logo, illustrating its capability to stream vinyl audio to external Bluetooth speakers (speaker not included).

Using Aux Input or Headphone Jack

- **Auxiliary Input:** Connect an external audio device (e.g., MP3 player) to the AUX IN port on the back of the turntable using a 3.5mm audio cable. The audio will play through the turntable's speakers.
- **Headphone Jack:** For private listening, plug headphones into the headphone jack on the front panel. The built-in speakers will be muted.

MAINTENANCE

- **Cleaning the Stylus:** Use a soft brush to gently clean the stylus (needle) from back to front. Avoid touching the stylus with your fingers.
- **Cleaning the Turntable:** Wipe the turntable cabinet with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Record Care:** Keep records clean and free of dust. Store them vertically in their sleeves to prevent warping.
- **Stylus Replacement:** The stylus has a limited lifespan. If sound quality deteriorates, replace the stylus. Consult Crosley support for compatible replacement styli.

TROUBLESHOOTING

If you experience issues with your Crosley Voyager turntable, please refer to the following common solutions:

- **No Power:** Ensure the power adaptor is securely connected to both the turntable and a working wall outlet. Check if the POWER/VOLUME knob is turned on.
- **No Sound:**
 - Check the POWER/VOLUME knob and turn it up.
 - If using Bluetooth output, ensure the external speaker is powered on and paired correctly.
 - If using RCA output, verify connections to your stereo system and its input selection.

- If using headphones, ensure they are fully plugged in.
- Ensure the stylus protector has been removed.

- **Skipping or Distorted Sound:**

- Clean the record and stylus.
- Ensure the turntable is on a stable, level surface.
- Check if the record is warped or damaged.
- Verify the correct speed setting (33 1/3, 45, or 78 RPM) is selected.

- **Bluetooth Pairing Issues:**

- Ensure the turntable is in the correct Bluetooth mode (input or output).
- Make sure your device or external speaker is in pairing mode and within range.
- Try restarting both the turntable and the Bluetooth device.

SPECIFICATIONS

Product Dimensions:	12 x 14.5 x 6 inches
Item Weight:	7.25 pounds
Maximum Rotational Speed:	78 RPM
Material:	Plastic
Style:	Bluetooth In/Out
Color:	Black
Model Name:	Voyager
Compatible Devices:	Speaker, Headphone

OVERALL DIMENSIONS: 14.5" W x 6" H x 12" D

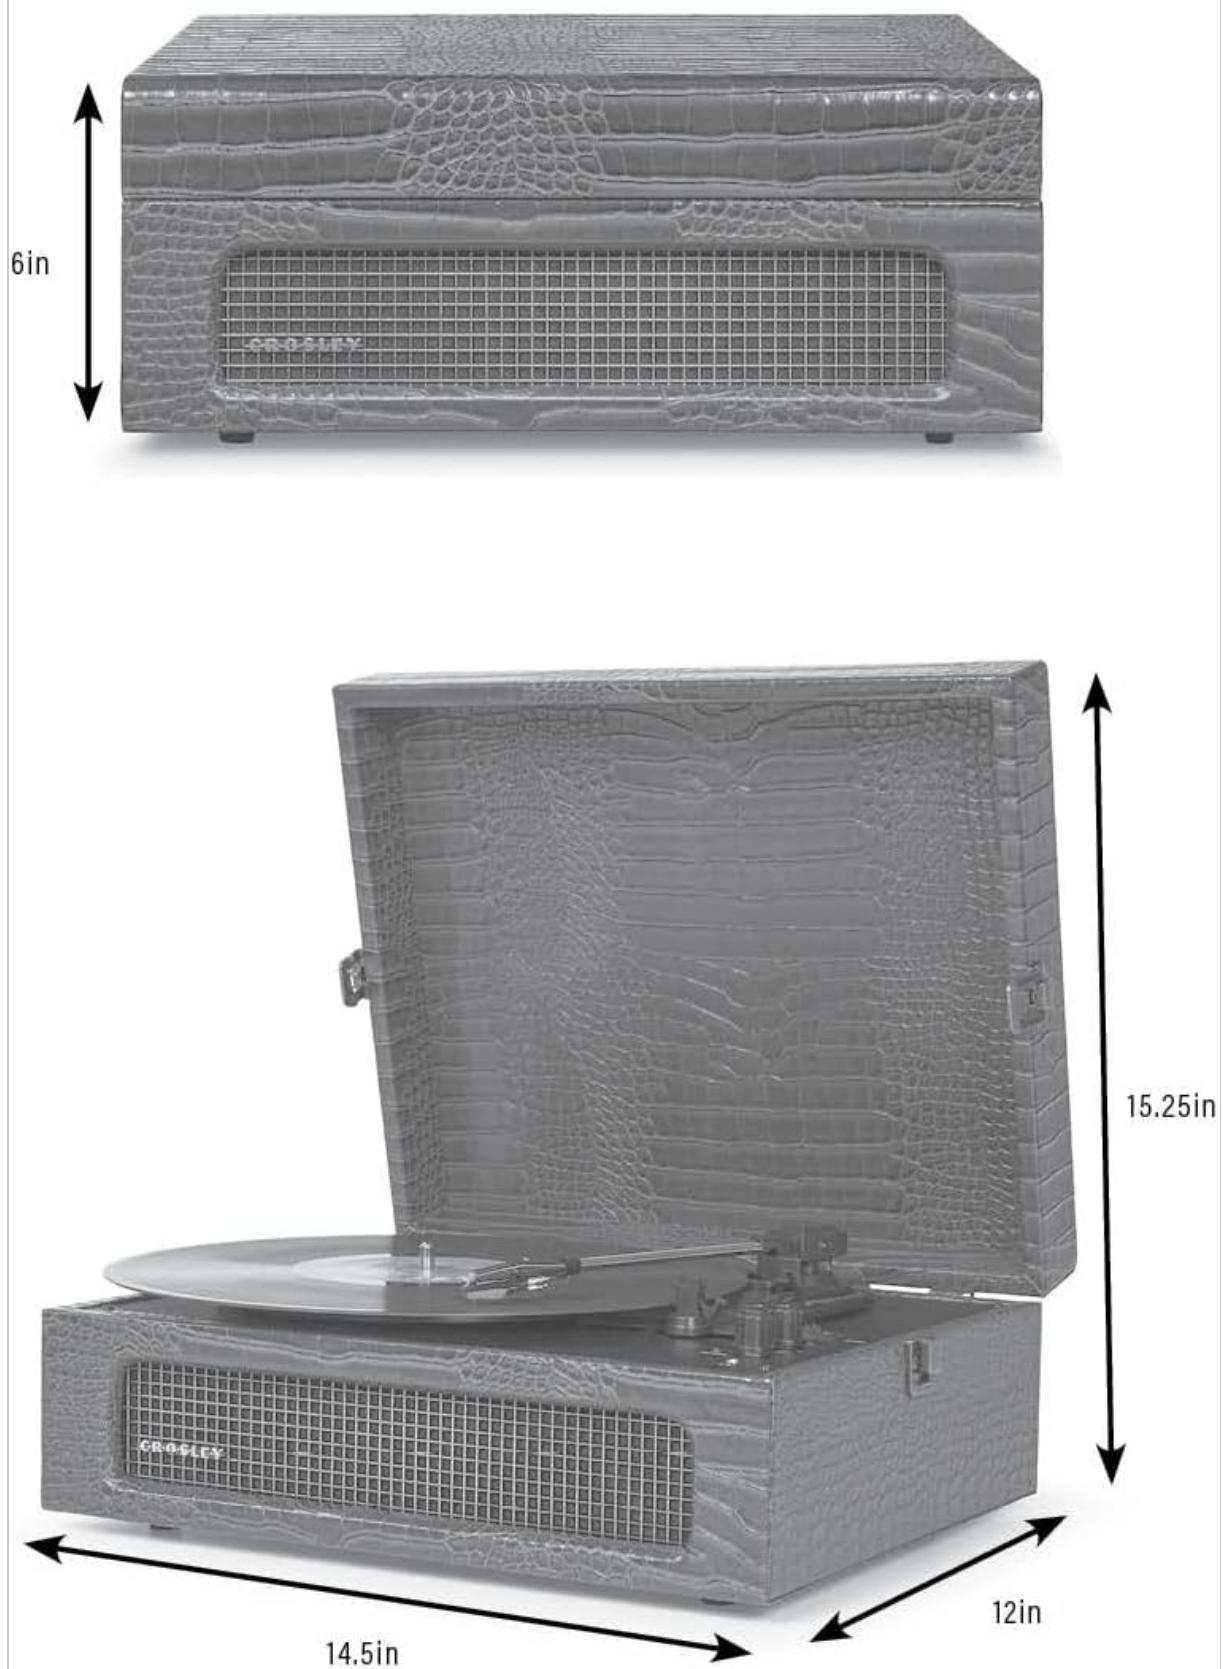


Image: Detailed diagram illustrating the overall dimensions of the Crosley Voyager turntable.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the Crosley CR8017B-BK Voyager Record Player, highlighting its design and features.

WARRANTY AND SUPPORT

Crosley products are proudly designed in the USA and come with USA-based customer support. For warranty information, technical assistance, or replacement parts, please visit the official Crosley website or contact their customer service department. Keep your purchase receipt for warranty claims.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.