

RUIZU X31

RUIZU X31 MP3 Player with Speaker

User Manual

INTRODUCTION

This manual provides detailed instructions for the RUIZU X31 MP3 Player with Speaker. Please read this manual carefully before using the device to ensure proper operation and to maximize its features. Keep this manual for future reference.

PRODUCT OVERVIEW

The RUIZU X31 is a portable MP3 player designed for ease of use, featuring a built-in speaker and a 1.5-inch TFT screen. It supports various audio formats, Bluetooth 5.0 connectivity, FM radio, voice recording, alarm clock, and pedometer functions. Its compact design makes it suitable for children and on-the-go entertainment.



Figure 1: Front and side view of the RUIZU X31 MP3 Player, showing the screen, control buttons, speaker grille, and side ports.

Package Contents:

- RUIZU X31 MP3 Player
- USB Cable
- Earphones
- User Manual (this document)

SETUP

1. Initial Charging

Before first use, fully charge the device. Connect the provided USB cable to the player's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show progress on the screen.



Figure 2: The MP3 player connected via USB cable, displaying a charging screen.

2. Inserting a Micro SD Card (Optional)

The device has 64GB of internal storage. To expand storage, insert a Micro SD card (up to 128GB, not included) into the designated slot on the side of the player. Ensure the card is inserted correctly until it clicks into place.

3. Connecting to a Computer

Connect the player to your computer using the USB cable. The device will be recognized as an external drive, allowing you to transfer music, videos, and other files to its internal storage or the inserted Micro SD card.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on: Press and hold the Power button (usually located on the side or top) until the screen lights up.
- To power off: Press and hold the Power button until the "Power Off" option appears, then confirm.

2. Navigation

Use the directional buttons (left/right arrows) to navigate through menu options on the 1.5-inch TFT screen. Press the central button (often labeled "OK" or Play/Pause) to select an option. The "Return" button (often a curved arrow) takes you back to the previous screen.

3. Music Playback

1. From the main menu, select "Music".
2. Browse your music library by artist, album, genre, or folder.
3. Select a song to begin playback.
4. Use the Play/Pause button to control playback.
5. Use the forward/backward buttons to skip tracks.
6. Adjust volume using the dedicated volume buttons (if present) or through the menu.

Cartoon Panda MP3 Music Player for kids



Music



Bluetooth



Stopwatch



Voice Recorder



Folder



FM radio



Alarm Clock



Micro SD Card Slot

Figure 3: The MP3 player screen showing the "Music" menu option, indicating readiness for music playback.

4. Bluetooth Connectivity

The RUIZU X31 features Bluetooth 5.0 for wireless audio streaming.

1. Go to the "Bluetooth" menu from the main screen.
2. Turn on Bluetooth.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. The player will scan for available devices. Select your device from the list to pair.
5. Once paired, audio will be routed wirelessly to your connected device.

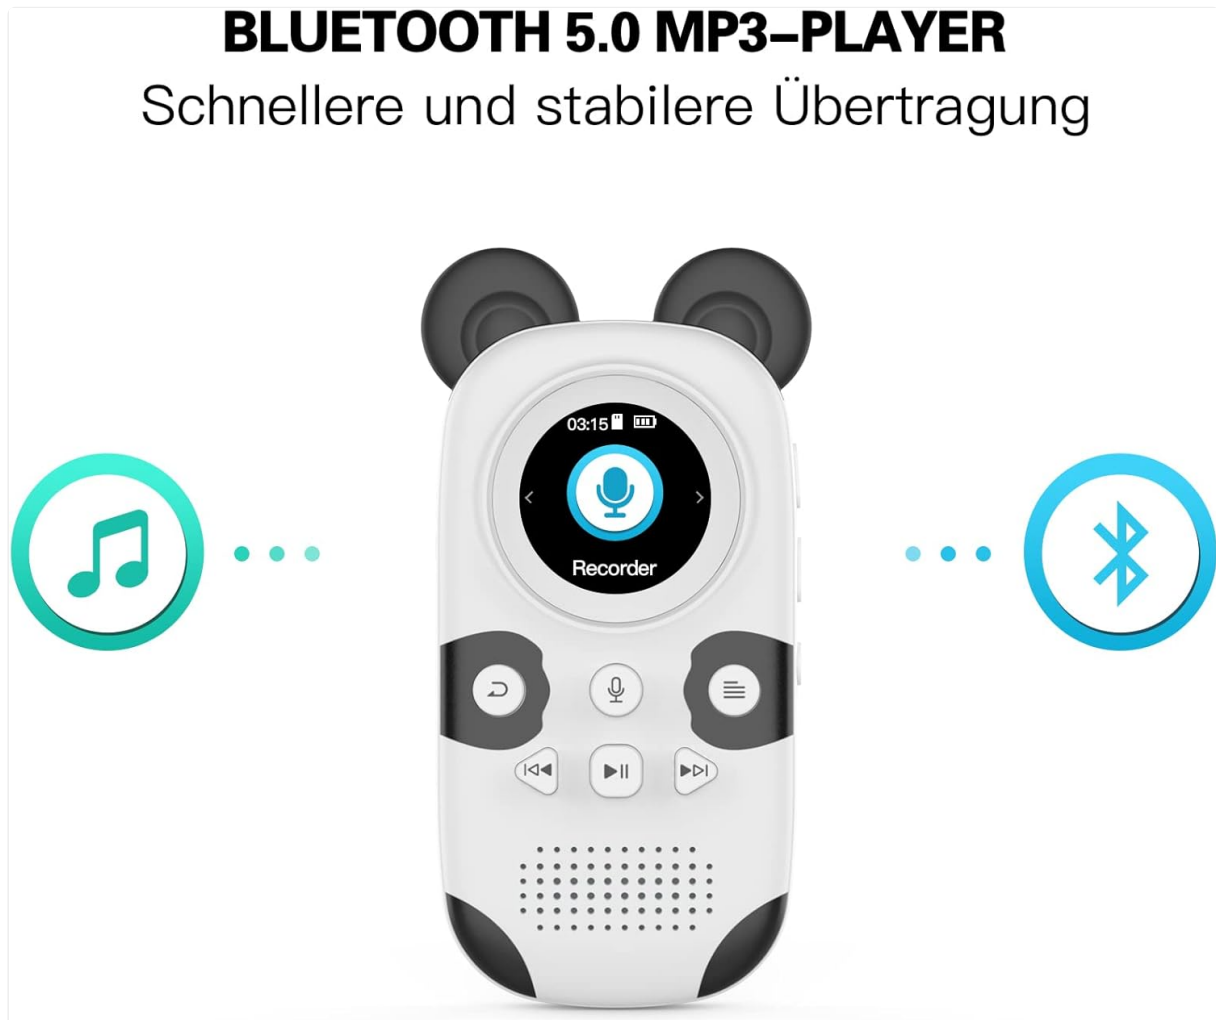 


Figure 4: The MP3 player displaying the Bluetooth icon, indicating its wireless connectivity feature.

5. FM Radio

To use the FM radio, connect the earphones as they act as the antenna.

1. Select "FM Radio" from the main menu.
2. Perform an automatic scan to find and save available stations.
3. Navigate between saved stations using the forward/backward buttons.

6. Voice Recorder

The device includes a voice recording function.

1. Select "Recorder" from the main menu.
2. Press the central button to start recording.
3. Press it again to stop and save the recording.
4. Recordings can be accessed and played back from the "Recordings" folder.



Figure 5: The MP3 player screen showing the "Recorder" menu option, ready for voice recording.

7. Alarm Clock

Set an alarm to wake up or for reminders.

1. Navigate to the "Alarm" function.
2. Set the desired time and alarm sound.
3. Enable the alarm.

8. Pedometer

The built-in pedometer tracks your steps.

1. Access the "Pedometer" function from the main menu.
2. Activate it to start tracking your steps.
3. Review your step count and other activity data.

MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.

- Clean the device with a soft, dry cloth. Do not use harsh chemicals.
- Avoid extreme temperatures.
- Do not attempt to disassemble or repair the device yourself.

TROUBLESHOOTING

Device will not turn on:

- Ensure the battery is charged. Connect to a power source and try again.
- If unresponsive, try a hard reset (refer to manufacturer's specific instructions if available, otherwise hold power button for 10-15 seconds).

Cannot connect to computer:

- Check the USB cable for damage and ensure it is securely connected.
- Try a different USB port on your computer.
- Ensure the device is powered on when connected.

Bluetooth pairing issues:

- Ensure both the MP3 player and the target Bluetooth device are in pairing mode and within range.
- Turn off and on Bluetooth on both devices.
- Clear previous Bluetooth connections on both devices if necessary.

No sound from speaker/headphones:

- Check the volume level.
- Ensure headphones are properly plugged in (if using).
- If using Bluetooth, ensure it is correctly paired and connected.

SPECIFICATIONS

Brand	RUIZU
Model Name	X31
Screen Size	1.5 Inches TFT
Connectivity Technology	USB, Bluetooth 5.0
Internal Storage	64 GB
Expandable Storage	Up to 128 GB (Micro SD card)
Battery Composition	Lithium-ion Polymer
Special Features	Lightweight, Portable, Wireless, Stable, Built-in Speaker, FM Radio, Voice Recorder, Alarm Clock, Pedometer

**Compatible
Devices**

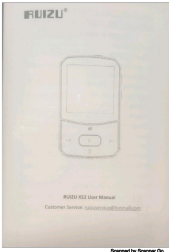 

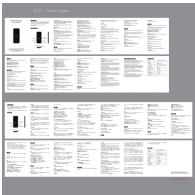 

Personal Computer

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact RUIZU customer service directly. Specific warranty terms may vary by region and retailer.

© 2024 RUIZU. All rights reserved.

Related Documents - X31

	<p>RUIZU X52 User Manual</p> <p>User manual for the RUIZU X52 MP3 player, detailing its specifications, buttons, controls, and functions including music playback, video playback, FM radio, pedometer, Bluetooth, and settings.</p>
	<p>RUIZU X52 User Manual</p> <p>User manual for the RUIZU X52 MP3 player, covering button controls, interface navigation, music playback, video playback, Bluetooth connectivity, FM radio, pedometer, recordings, ebook reader, picture viewer, tools, settings, and specifications.</p>
	<p>RUIZU D19 MP3 Player User Manual</p> <p>Comprehensive user manual for the RUIZU D19 MP3 Player, detailing features such as Bluetooth connectivity, voice recording, clip-on design, and playback controls.</p>
	<p>RUIZU X16 MP3 Player User Manual</p> <p>Comprehensive user manual for the RUIZU X16 MP3 player, covering features like music playback, video, radio, recording, Bluetooth, settings, and troubleshooting. Learn how to use your RUIZU X16 for optimal performance.</p>



[RUIZU M16 MP3 Player User Manual - Features, Specs. and Operation Guide](#)

Comprehensive user manual for the RUIZU M16 MP3 player. Learn about its music, video, FM radio, voice recording, e-book, and Bluetooth features. Includes detailed specifications and operational guidance.



[RUIZU M7 MP3 Player Firmware Update Guide](#)

A step-by-step guide to updating the firmware on your RUIZU M7 MP3 player. Learn how to download the firmware, install the update tool, and successfully complete the update process.