

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Graco](#) /

› [Graco Slim Spaces Compact Baby Swing Instruction Manual](#)

Graco 2156182

Graco Slim Spaces Compact Baby Swing Instruction Manual

Model: 2156182

INTRODUCTION AND OVERVIEW

The Graco Slim Spaces Compact Baby Swing is designed to offer the benefits of a full-size swing while maximizing space efficiency in your home. Its innovative design includes height-adjustable legs, allowing you to customize the swing's position for optimal interaction with your baby. The compact fold feature ensures easy storage when not in use, and the integrated carry handle, combined with its battery-operated motor, makes it exceptionally portable for use in various rooms or on the go.

Key features include:

- **Space-Saving Design:** Compact footprint ideal for any room size.
- **Portability:** Equipped with a carry handle and battery operation for easy movement.
- **Adjustable Height:** Legs can be adjusted to ensure baby is always at the perfect height for interaction.
- **Customizable Swing Speeds:** Multiple settings to find the ideal pace for your baby.
- **Entertainment:** Overhead toy bar with two soft toys to keep baby engaged.

SETUP AND ASSEMBLY

The Graco Slim Spaces Compact Baby Swing is designed for straightforward setup. No complex assembly is required, allowing you to quickly prepare the swing for use.

Battery Installation

This swing operates on batteries, providing cordless convenience. You will need **four D-cell batteries** for operation. The battery compartment is located on the side of the swing's control unit. Ensure batteries are inserted with correct polarity.



Image: The Graco Slim Spaces Baby Swing highlighting its features, including the battery compartment on the side of the control unit.

Video: A demonstration of the battery installation process and the swing's operation, emphasizing the need for D-cell batteries.

OPERATING INSTRUCTIONS

The Graco Slim Spaces Compact Baby Swing offers various settings to soothe and entertain your baby.

Power and Speed Control

To operate the swing, locate the control knob on the side of the unit. Turn the knob to power on the swing and adjust the swinging speed. The red indicator light will illuminate when the swing is active. You can increase or decrease the speed to find the most comfortable setting for your baby.



Adjustable swing speeds and toybar keep baby soothed and happy

Image: A baby comfortably seated in the Graco Slim Spaces Baby Swing, illustrating the adjustable swing speeds and the overhead toy bar.

Height Adjustment

The swing features height-adjustable legs, allowing you to position your baby at an ideal height for interaction. This feature is particularly useful for keeping your baby close while you are seated or standing.



Height-adjustable legs keep baby at the perfect height

Image: A woman standing next to the Graco Slim Spaces Baby Swing, demonstrating the height-adjustable legs that position the baby at a convenient height.

Compact Folding and Portability

For easy storage or transport, the swing can be folded into a compact size. Locate the release buttons on the frame, typically near the pivot points, and press them simultaneously to fold the swing. The integrated carry handle facilitates moving the folded swing.



Easy, compact fold for storage

Image: A woman carrying the Graco Slim Spaces Baby Swing in its compact, folded state, highlighting its portability.

Video: A demonstration of how to fold the Graco Slim Spaces Baby Swing into a compact size for storage or transport, emphasizing its space-saving design.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Graco Slim Spaces Compact Baby Swing.

Cleaning Instructions

- **Fabric Components:** The seat pad and head support are made of polyester. Refer to the care tag for specific washing instructions. Typically, these can be machine washed on a delicate cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Frame:** Wipe down the metal frame with a damp cloth and mild soap. Ensure all parts are thoroughly dry before reassembly or storage.
- **Toys:** The soft toys can be spot cleaned with a damp cloth and mild soap, or hand washed as per their care labels.

Storage

When not in use, especially for extended periods, fold the swing compactly and store it in a dry, clean place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your Graco Slim Spaces Compact Baby Swing, consider the following common solutions:

- Swing Not Operating:** Check if the batteries are correctly installed and not depleted. Replace all four D-cell batteries if necessary. Ensure the speed control knob is turned to an active setting.
- Unusual Noises:** Verify that all frame connections are securely fastened. Ensure no fabric or foreign objects are obstructing the swinging mechanism.
- Swing Movement is Weak:** This often indicates low battery power. Replace the D-cell batteries.
- Folding Difficulty:** Ensure both release buttons on the frame are pressed simultaneously and fully engaged. Do not force the folding mechanism.

If problems persist, refer to the full product manual or contact Graco customer support.

SPECIFICATIONS

Brand	Graco
Model Number	2156182
Color	Reign
Product Dimensions	39"D x 23.25"W x 35"H
Item Weight	12.7 pounds
Frame Material	Metal
Material Type	Polyester
Batteries Required	Yes (4 D-cell batteries)
Assembly Required	No
Is Portable	Yes
UPC	047406181391

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or to contact customer support, please visit the official Graco website or refer to the documentation included with your product. Keeping your proof of purchase is recommended for any warranty claims.

You can find more information and support at the [Graco Store on Amazon](#).

© 2026 Graco. All rights reserved.