

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Proscenic](#) /

› [Proscenic 850T Robot Vacuum Cleaner Instruction Manual](#)

Proscenic 850T

Proscenic 850T Robot Vacuum Cleaner Instruction Manual

Model: 850T

1. INTRODUCTION

The Proscenic 850T Robot Vacuum Cleaner is designed to provide efficient and convenient cleaning for your home. This 3-in-1 device offers vacuuming, sweeping, and mopping functionalities, suitable for various floor types including carpets and hard floors. It features strong suction power, intelligent navigation, and can be controlled via a mobile application, remote control, or voice assistants like Alexa and Google Home. This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Proscenic 850T Robot Vacuum Cleaner. Please read it thoroughly before using the product to ensure safe and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of injury or damage, read these safety instructions carefully and keep them for future reference.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only use the original power adapter provided by the manufacturer.
- Do not use the robot vacuum in wet environments or near water.
- Ensure the charging dock is placed on a flat surface against a wall, with adequate space around it.
- Remove any loose cables, small objects, or fragile items from the floor before operation to prevent entanglement or damage.

- Do not use the robot vacuum to pick up large debris, liquids, burning or smoking materials.
- Regularly clean the dustbin, filters, and brushes to maintain optimal performance.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking.



Image: All components included with the Proscenic 850T Robot Vacuum Cleaner.

1. Proscenic 850T Robot Vacuum Cleaner

2. Charging Adapter

3. Docking Station

4. Side Brushes (set)

5. HEPA Filter (spare)

6. Remote Control

7. Mopping Cloth

8. Cleaning Tool

9. Boundary Strip

10. User Manual (this document)

4. PRODUCT OVERVIEW

The Proscenic 850T is designed for comprehensive floor cleaning with several advanced features.

4.1. 3-in-1 Vacuuming, Sweeping, and Mopping

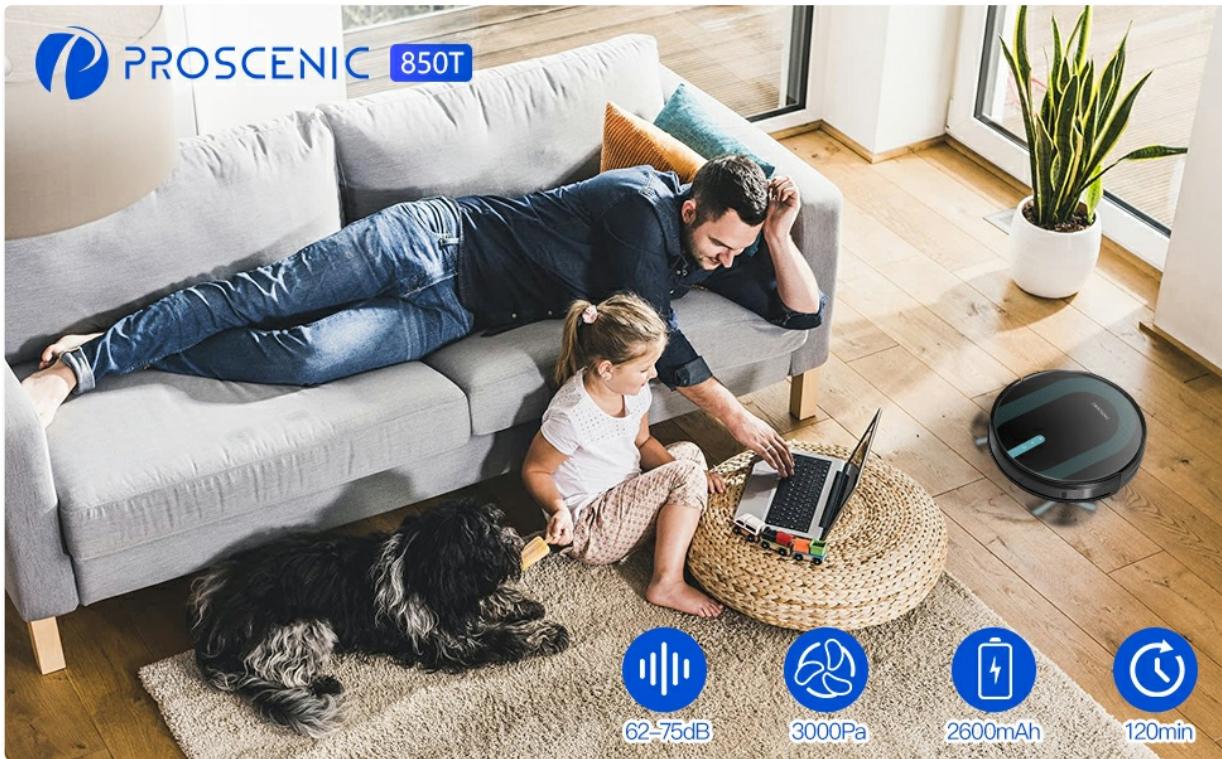


Image: The robot vacuum performing both vacuuming and mopping functions.

This robot vacuum combines vacuuming, sweeping, and mopping capabilities into one device, effectively removing dust, pet hair, and debris from various surfaces. It features a 2-in-1 dust bin and water tank for simultaneous operation.

4.2. Strong Suction Power

Your browser does not support the video tag.

Video: Overview of the Proscenic 850T Robot Vacuum and Mop features, including its strong suction and cleaning capabilities.

Equipped with 3000Pa strong suction, the 850T efficiently picks up pet hair, dirt, and fine dust from both hard floors and carpets. The suction power can be adjusted to suit different cleaning needs.

4.3. Intelligent Navigation and Sensors



Images: The robot vacuum using sensors to detect obstacles and adapting to different floor types.

The robot vacuum utilizes advanced sensors for anti-collision and anti-fall protection, ensuring it navigates your home safely and avoids drops from stairs or collisions with furniture. It follows a specific logic for

cleaning patterns rather than random movement.

4.4. Boundary Strip



Image: The robot vacuum recognizing a virtual boundary strip to avoid restricted areas.

Use the included boundary strip to set up forbidden areas, preventing the robot from entering specific rooms or zones.

4.5. Slim Design

With a super thin design, the 850T can easily clean under furniture and other hard-to-reach places, ensuring thorough cleaning throughout your home.

5. SETUP

5.1. Initial Charging

1. Place the charging dock against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters of space on either side and 1.5 meters in front of the dock.
2. Connect the power adapter to the charging dock and plug it into a wall outlet.
3. Place the robot vacuum onto the charging dock. Ensure the charging contacts on the robot align with those on the dock. The indicator light on the robot will show charging status.
4. Allow the robot to fully charge before its first use (approximately 5-6 hours).



Image: The robot vacuum returning to its charging station.

5.2. App Connection

1. Download the ProscenicHome app from the App Store (iOS) or Google Play Store (Android).
2. Register an account and log in.
3. Follow the in-app instructions to add your 850T robot vacuum. Ensure your phone is connected to a 2.4GHz Wi-Fi network (5GHz is not supported).
4. Once connected, you can control the robot, set cleaning schedules, and monitor its status from your smartphone.

6. OPERATING INSTRUCTIONS

6.1. Cleaning Modes

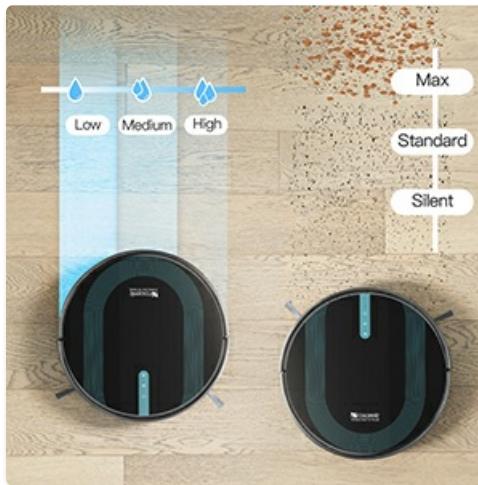


Image: Adjustable suction power and water levels for different cleaning needs.

The Proscenic 850T offers multiple cleaning modes:

- **Auto Clean:** The robot intelligently navigates and cleans the entire area.
- **Spot Cleaning:** Focuses on a specific dirty area for intensive cleaning.
- **Edge Cleaning:** Cleans along walls and furniture edges.
- **Mopping Mode:** Uses the water tank to mop hard floors. Water flow can be adjusted via the app.

6.2. Remote Control

Use the included remote control to start/stop cleaning, change cleaning modes, direct the robot, and send it back to the charging dock.

6.3. App Control and Scheduling



Image: The mobile app interface for setting cleaning schedules and selecting modes.

The ProscenicHome app allows you to:

- Start, pause, or stop cleaning.
- Select cleaning modes.
- Set cleaning schedules for specific times and days.
- Monitor cleaning progress and battery level.
- Adjust suction power and water flow for mopping.

6.4. Voice Control (Alexa, Google Home, Siri)

The Proscenic 850T can be integrated with smart home voice assistants for hands-free control.

6.4.1. Connect to Google Home

Your browser does not support the video tag.

Video: Instructions on how to connect your Proscenic robot vacuum to Google Home for voice control.

6.4.2. Connect to Alexa

Your browser does not support the video tag.

Video: Instructions on how to connect your Proscenic robot vacuum to Amazon Alexa for voice control.

6.4.3. Control via Siri

Your browser does not support the video tag.

Video: Instructions on how to control your Proscenic robot vacuum using Siri shortcuts.

Follow the specific instructions within the ProscenicHome app to link your device with Google Home, Amazon Alexa, or set up Siri shortcuts for voice commands.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your robot vacuum.

7.1. Dustbin and Filter Cleaning

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a trash bin.
3. Remove the primary filter and HEPA filter. Tap them gently to remove dust. Do not wash the HEPA filter with water.
4. Rinse the primary filter and dustbin with water. Ensure they are completely dry before reassembling.
5. Replace the filters and close the dustbin cover. Insert the dustbin back into the robot until it clicks into place.

7.2. Brush Cleaning

1. Turn the robot vacuum upside down.
2. Remove the main brush cover and then the main brush. Use the cleaning tool to cut and remove any hair or debris tangled around the brush.
3. Pull off the side brushes. Remove any hair or debris and reattach them.
4. Clean the universal wheel and charging contacts with a dry cloth.

7.3. Water Tank Maintenance

1. Remove the water tank from the robot.
2. Empty any remaining water.
3. Clean the mopping cloth and allow it to air dry completely.
4. Ensure the water tank is clean and dry before storing or refilling.

8. TROUBLESHOOTING

If you encounter issues with your Proscenic 850T, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on	Low battery; Power switch off	Charge the robot; Ensure power switch is on.
Robot gets stuck frequently	Obstacles on floor; Robot stuck on high ledges	Clear loose cables and small objects; Use boundary strips for problematic areas.
Poor cleaning performance	Full dustbin; Clogged filters; Worn brushes	Empty dustbin; Clean/replace filters; Clean/replace brushes.
Cannot connect to Wi-Fi/App	Incorrect Wi-Fi password; 5GHz network; Router issues	Verify password; Ensure 2.4GHz network; Restart router and robot.
Robot does not return to charging dock	Docking station obstructed; Robot too far from dock	Clear area around dock; Manually place robot near dock.

If the problem persists, please contact Proscenic customer support for assistance.

9. SPECIFICATIONS

Feature	Detail
Brand	Proscenic
Model Name	850T
Special Feature	Anti-Collision
Filter Type	Cartridge
Voltage	14.4 Volts
Capacity (Dustbin)	0.5 Liters
Capacity (Water Tank)	0.3 Liters
Power Source	Battery Powered
Control Method	App Control, Remote Control, Voice Control
Compatible Devices	Amazon Echo, Google Home
Form Factor	Robotic
Product Dimensions	5 x 5 x 2 inches
Item Weight	10.83 pounds
Surface Recommendation	Carpets, Hard Floors

10. WARRANTY AND SUPPORT

Proscenic offers a warranty for its products. Please refer to the warranty card included in your package or visit the official Proscenic website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or any other inquiries, please contact Proscenic customer service through their official website or the ProscenicHome app.