

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moman](#) /

› [Moman Professional Teleprompter Kit User Manual](#)

Moman MT12

Moman Professional Teleprompter Kit User Manual

Model: MT12

Brand: Moman

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Moman MT12 Professional Teleprompter Kit. Please read this manual thoroughly before using the product to ensure proper function and longevity.

SAFETY INFORMATION

- Handle the beamsplitter glass with care to prevent breakage.
- Ensure all components are securely fastened before use to prevent equipment damage.
- Do not expose the teleprompter to extreme temperatures or moisture.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items listed below are included in your package.

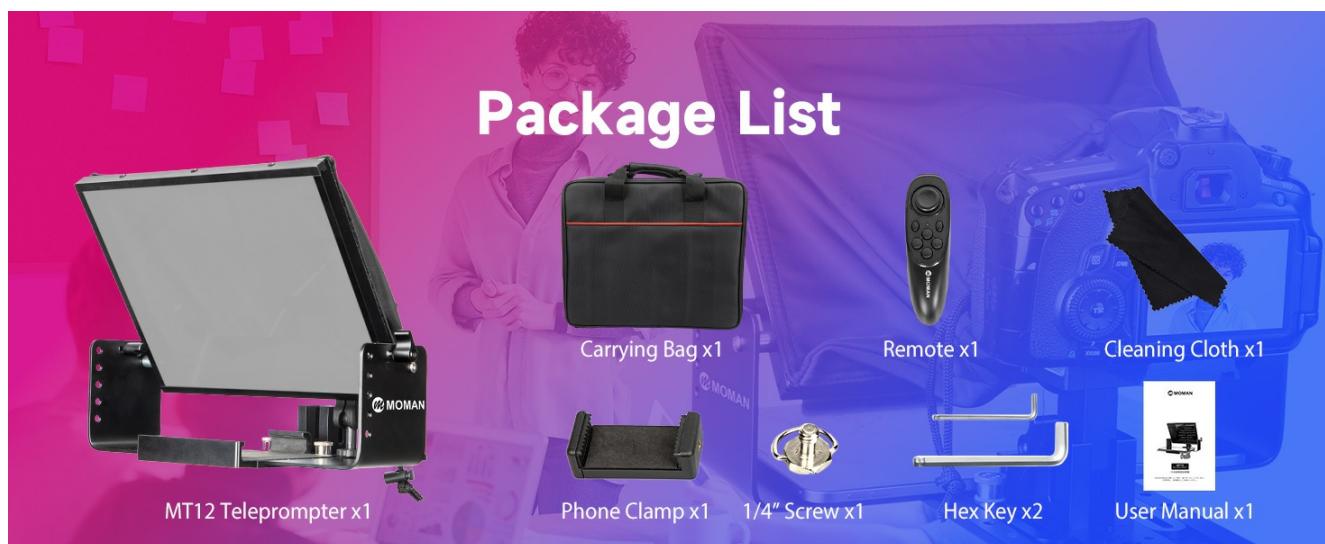


Image: Contents of the Moman MT12 Teleprompter Kit package, including the teleprompter unit, remote control, phone clamp, 1/4"

screw, hex key, cleaning cloth, and user manual.

- MT12 Teleprompter x1
- Remote Control x1
- Phone Clamp x1
- 1/4" Screw x1
- Hex Key x1
- Carrying Bag x1
- Cleaning Cloth x1
- User Manual x1

PRODUCT OVERVIEW

The Moman MT12 Teleprompter is designed for professional video production, offering clear script reflection and broad compatibility.



Image: Diagram highlighting key features such as flexible prompting angle, quick-release plate with adjustable height and distance, and metal structure bearing design.

Key Features

- **12-inch Ultra HD Glass:** Provides clear script reflections for reading distances up to 15 feet (4.5 meters).
- **Robust Metal Construction:** Durable frame ensures stability and broad camera compatibility.
- **Multi-Device Compatibility:** Adjustable clamp holder supports tablets and smartphones up to 12.9 inches.
- **Remote and App Control:** Seamless integration with the Moman Prompter App for text and speed adjustments.
- **Adjustable Prompting Angle:** Knob for adjusting the reflecting angle (45-60 degrees) for various sightlines.
- **Triple Hot Shoe Mounts:** Allows simultaneous attachment of microphones, LED lights, and monitors.

SETUP

Follow these steps to assemble and set up your Moman MT12 Teleprompter.

INSTALLATION STEPS



Image: Visual guide for the six installation steps of the teleprompter.

- 1. Mount the Teleprompter to the Tripod:** Securely attach the teleprompter unit to a sturdy tripod using the 1/4" or 3/8" screw mount at the base.
- 2. Install Blackout Cloth:** Drape the included blackout cloth over the camera lens and secure it around the teleprompter opening to prevent light leakage.
- 3. Install Teleprompter Equipment:** Place your tablet or smartphone into the adjustable clamp holder on the teleprompter's base. Ensure it is firmly seated.
- 4. Remove Quick-Release Plate:** If your camera is already mounted on a quick-release plate, remove it from your camera.
- 5. Mount the Camera:** Attach your camera to the teleprompter's quick-release plate and fix it with the knob. Adjust the camera's height and distance as needed.
- 6. Equip with Photography Fill Light and Microphone:** Utilize the triple hot shoe mounts to attach additional accessories like LED lights and microphones for enhanced production quality.

OPERATING INSTRUCTIONS

Moman Promter App

The Moman Promter App allows you to control your script and teleprompter settings.



Image: Overview of the Moman Promter App interface and the functions of the remote control.

- **Download the App:** Search for "Moman Prompter" on the App Store (iOS) or download from the Moman website for Android devices.
- **Connect Remote Control:** Turn on the remote control. In the app, navigate to "Device connect" and pair the remote via Bluetooth.
- **Load Script:** Copy and paste your script into the app.
- **Adjust Settings:** Use the app to modify font size, text scrolling speed, and text/background color.
- **Mirror Mode:** Ensure "Mirror mode" is enabled in the app for correct text display on the beamsplitter glass.

Remote Control Functions

- **Joystick:** Navigate menus and adjust settings.
- **Confirm Button:** Select options.
- **Menu Button:** Access app menu.
- **Mode Switch:** Change operating modes.
- **Power Button:** Turn the remote on/off.
- **A/B/X/Y Buttons:**
 - **A:** Slow down scripts
 - **Y:** Speed up scripts
 - **X:** Last Page
 - **B:** Next Page

Usage Scenarios



Image: Examples of the teleprompter in use for conferences, interviews, live-streaming, and video recording.

The Moman MT12 Teleprompter is versatile and suitable for various applications, including:

- News Interviews
- Video Conferences
- Live Interactions
- Live-Streaming
- Video Recording

MAINTENANCE

- **Cleaning the Beamsplitter Glass:** Use the provided cleaning cloth or a soft, lint-free cloth with a specialized

glass cleaner. Avoid abrasive materials that could scratch the surface.

- **General Cleaning:** Wipe down the metal frame with a dry or slightly damp cloth. Do not use harsh chemicals.
- **Storage:** When not in use, store the teleprompter in its carrying bag to protect it from dust and physical damage.
- **Component Check:** Periodically check all screws and connections to ensure they remain tight and secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Text is blurry or unclear	Incorrect focus; dirty beamsplitter glass; incorrect app settings.	Adjust camera focus; clean the glass; ensure "Mirror mode" is enabled in the app.
Remote control not connecting	Remote not powered on; Bluetooth not enabled on device; remote not paired.	Ensure remote is on; enable Bluetooth on your tablet/smartphone; re-pair the remote in the Moman Prompter App.
Text not scrolling	App frozen; remote control issue.	Restart the Moman Prompter App; check remote battery; ensure remote is paired.
Teleprompter unstable on tripod	Tripod not sturdy enough; teleprompter not securely mounted.	Use a durable, heavy-duty tripod; ensure the teleprompter is tightly screwed onto the tripod mount.

SPECIFICATIONS

Feature	Detail
Model Number	MT12
Beamsplitter Glass Size	12 inches
Reading Distance	Up to 15 feet (4.5 meters)
Compatible Device Size	Tablets and smartphones up to 12.9 inches
Item Weight	6.05 pounds
Package Dimensions	15.24 x 13.03 x 5.55 inches
Manufacturer	Moman

WARRANTY AND SUPPORT

Moman products come with a standard manufacturer's warranty. For specific warranty details, technical support, or service inquiries, please contact Moman customer service directly.

Visit the official Moman website for more information: www.moman.co