

[Manuals.plus](#) /

› [MAXDONE](#) /

› MAXDONE A4 Laminator Instruction Manual

MAXDONE 4-in-1 A4 Laminator Set

MAXDONE A4 Laminator Instruction Manual

Model: 4-in-1 A4 Laminator Set

1. INTRODUCTION

Thank you for choosing the MAXDONE A4 Laminator. This manual provides essential information for the safe and efficient operation of your laminator. Please read it thoroughly before use and keep it for future reference.

1.1 What's Included

Your laminator kit includes the following items:

- 1 x A4 Laminator
- 30 x Laminating Pouches (5x A4, 10x A5, 15x A6)
- 1 x Paper Trimmer
- 1 x Corner Rounder
- 1 x Hole Punch

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using this appliance:

- Read all instructions before use.
- Do not operate the laminator if the power cord or plug is damaged.
- Keep the laminator away from water or other liquids. Do not operate with wet hands.
- Ensure the laminator is placed on a stable, flat, heat-resistant surface.
- Do not insert objects other than laminating pouches into the feed opening.
- Unplug the laminator from the power outlet when not in use or before cleaning.
- Allow the laminator to cool down completely before storing.

- Keep out of reach of children and pets.
- Do not attempt to open or repair the laminator yourself. Contact customer support for assistance.
- Initial odor or smoke during first use is normal and harmless, dissipating quickly.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Retain the packaging for storage or future transport.

3.2 Placement

Place the laminator on a flat, stable, and heat-resistant surface. Ensure there is enough space behind the laminator for laminated documents to exit freely.

3.3 Power Connection

Plug the power cord into a suitable electrical outlet. Ensure the voltage matches the requirements specified on the device.

4. OPERATING INSTRUCTIONS

4.1 Hot Lamination

1. **Power On and Select Mode:** Plug in the laminator. Press the power button and select the 'HOT' mode.
2. **Warm-up:** Wait for 1 to 2 minutes for the laminator to heat up. The green indicator light will illuminate when the device is ready for use.
3. **Prepare Document:** Place your document inside a laminating pouch, ensuring it is centered and there is an even border around the edges. Pouches from 60 to 135 microns are supported.
4. **Insert Pouch:** Insert the sealed edge of the laminating pouch into the feed opening. The laminator will automatically pull the pouch through.
5. **Retrieve Laminated Document:** Once the pouch exits the rear of the machine, carefully retrieve the laminated document. Allow it to cool on a flat surface.

“

Die Vorwärmzeit beträgt nur 1-2 Minuten, bei einer anderen Marke sind es 3-5 Minuten, Kann heiß und kalt laminieren, sehr einfach zu bedienen, sehr gute Qualität

”



“


Durch das Set mit Beuteln in verschiedenen Größen kann man das Gerät schnell testen. Es heizt schnell auf. Ich habe damit die Dekorationen für eine Burg laminiert, die ich für das Weihnachtsfest meiner Enkelkinder gemacht habe. Tadellos. Hervorragende Laminierwirkung

”

This visual guide shows the four simple steps to operate the laminator: 1. Power on and select Hot Mode, wait for green light. 2. Place item in pouch. 3. Insert pouch into laminator. 4. Seal. It also points out the ABS jam release button.



Vier einfache Schritte

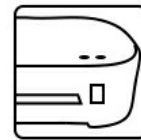


Schritt 1

Schalten Sie das Gerät ein
Klicken Sie auf "HOT" Modus




Schritt 2

Warten Sie 1-2 Minuten, bis
das Licht grün aufleuchtet
Legen Sie die Daten in die
Mitte der 2 Folienschichten in
der richtigen Größe

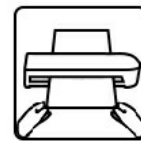

Schritt 3

Legen Sie die Folie mittig und
waagrecht in die
Papiereinzugsöffnung.

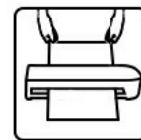

Schritt 4

Wenn Sie mit dem Laminieren
fertig sind, schalten Sie das

*Es ist nicht nötig, auf den Modus "Kalt" zu warten, aber es ist notwendig, den Modus "Kaltlaminierfolie" zu verwenden.

The image illustrates the laminator's quick preheat time of 90 seconds and a lamination speed of 320mm per minute, indicating efficient operation.

4.2 Cold Lamination

Cold lamination does not require heating. It is suitable for heat-sensitive documents or self-adhesive laminating pouches (sold separately).

1. **Power On and Select Mode:** Plug in the laminator. Press the power button and select the 'COLD' mode.
2. **Prepare Document:** Place your document inside a cold laminating pouch.
3. **Insert Pouch:** Insert the sealed edge of the cold laminating pouch into the feed opening.
4. **Retrieve Laminated Document:** Once the pouch exits the machine, retrieve the laminated document.



☀ **Heißlaminieren: 1-2 Minuten vorheizen**

Ideal, um Ihren Fotos, Kinderzeichnungen, Rezepten und Bastelprojekten ein professionelles Finish zu verleihen.

❄ **Kaltlaminierung: Kein Vorheizen erforderlich**

Der Kaltlaminiermodus eignet sich für Dokumente, Lesezeichen und Exemplare, die sehr empfindlich auf Hitze und Feuchtigkeit reagieren.

*Der Kaltmodus ist für selbstklebende Beutel geeignet (nicht im Lieferumfang enthalten).



This image differentiates between hot and cold lamination modes. Hot mode is suitable for high-frequency items and long-term archival, while cold mode is for self-adhesive films and inkjet prints, preventing ink bleeding.

4.3 Using the Accessories

- **Paper Trimmer:** Use the included paper trimmer to cut documents or photos to the desired size before lamination. Always use on a flat, stable surface.
- **Corner Rounder:** After lamination, use the corner rounder to create smooth, rounded corners on your documents, enhancing appearance and safety.
- **Hole Punch:** The hole punch can be used to create holes in documents for binding or filing.

5. MAINTENANCE

5.1 Cleaning

Ensure the laminator is unplugged and completely cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.

5.2 Clearing a Jam (ABS Release Lever)

If a document is misfed or jammed, immediately press and hold the **ABS release lever**. This will disengage the rollers, allowing you to gently pull the document out. Release the lever once the document is clear.

Pro Maintenance Tip: To eliminate bubbles and maintain roller cleanliness, run a blank piece of paper through the laminator periodically, especially after extended use.

6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Laminator not turning on	No power supply	Check power cord connection and wall outlet.
Green light not illuminating	Not fully warmed up (Hot Mode)	Wait for 1-2 minutes for the laminator to reach operating temperature.
Document jam	Misfed pouch, incorrect pouch size	Press the ABS release lever and gently pull out the document. Ensure correct pouch insertion.
Poor lamination quality (bubbles, wrinkles)	Pouch too thin/thick, incorrect temperature, document not centered	Ensure pouch thickness is between 60-135 microns. Allow full warm-up. Center documents properly.
Laminator is noisy	Normal operation sound	The laminator operates at a low noise level (0-30dB). If noise is excessive, contact support.

7. SPECIFICATIONS



This image highlights the internal components of the laminator, showing the dual roller system for smooth lamination and the NTC temperature control for precise heating.

Feature	Detail
---------	--------

Feature	Detail
Brand	MAXDONE
Model Number	4-in-1 A4 Laminator Set
Product Dimensions (L x W x H)	32 x 10 x 6.2 cm
Weight	900 grams
Color	Black
Sheet Size	A4 (Max. 230mm width)
Pouch Thickness Supported	60 to 135 microns
Warm-up Time	1-2 minutes
Lamination Speed	Approx. 56 seconds per A4 sheet (320mm/min)
Lamination Modes	Hot and Cold

8. WARRANTY AND SUPPORT

MAXDONE products are manufactured to high-quality standards. For any issues or questions regarding your laminator, please do not hesitate to contact our customer support team. We are committed to providing a better experience for every customer.

Please refer to your purchase documentation for specific warranty details and contact information.