

[Manuals.plus](#) /

› [Evolved Novelties](#) /

› Evolved Novelties Gender X Bumpy Ride Vibrator Model 840645 User Manual

Evolved Novelties 840645

Evolved Novelties Gender X Bumpy Ride Vibrator User Manual

Model: 840645

1. INTRODUCTION

Thank you for choosing the Evolved Novelties Gender X Bumpy Ride Vibrator. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read these instructions thoroughly before first use and retain them for future reference.

This product is designed for personal use. It features a silicone construction with multiple stimulation points and a powerful motor with various functions.

2. PRODUCT FEATURES

The Gender X Bumpy Ride Vibrator is engineered for enhanced stimulation and user comfort. Key features include:

- **Textured Design:** Four bulbs aligned vertically along the shaft for targeted stimulation.
- **Multiple Functions:** Equipped with a 9-speed motor offering various vibration patterns.
- **Premium Material:** Crafted from smooth silicone for a comfortable feel.
- **Waterproof:** Fully submersible design allows for use in water and easy cleaning.
- **Rechargeable:** Conveniently powered by a rechargeable battery.
- **Ergonomic Grip:** Textured handle base for secure handling.

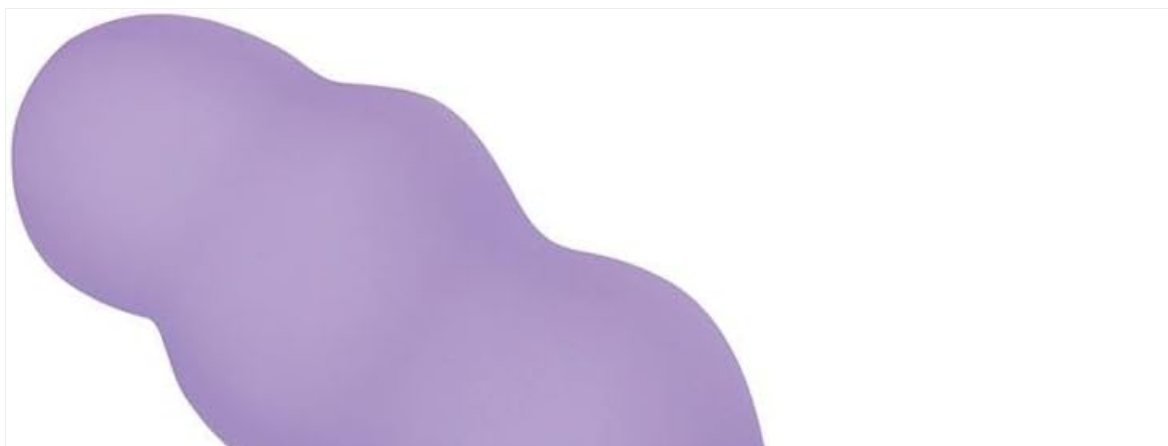




Image 1: Side view of the Gender X Bumpy Ride Vibrator, illustrating its curved form and the four distinct textured bulbs along the shaft.

3. SETUP

3.1 Initial Cleaning

Before first use, and after every subsequent use, clean the device thoroughly. Wash with warm water and a mild, toy-safe soap. Rinse completely and allow to air dry, or gently pat dry with a lint-free cloth. Ensure the charging port is dry before

charging.

3.2 Charging the Device

The Gender X Bumpy Ride Vibrator is rechargeable. Locate the charging port, typically at the base of the device. Connect the included USB charging cable to the device and plug the other end into a compatible USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will illuminate during charging and change when fully charged. Refer to the specific indicator behavior in the operating section.

Note: Do not use the device while it is charging.





Image 2: Front view of the Gender X Bumpy Ride Vibrator, displaying the 'GENDER X' branding and the spiral-textured base, which often houses the charging port and controls.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

To turn the device on, press and hold the power button (usually located on the base) for approximately 2-3 seconds. The device will start vibrating at its lowest setting or the last used setting. To turn off, press and hold the power button again for 2-3 seconds until the vibrations cease.

4.2 Changing Vibration Modes and Speeds

Once the device is on, short presses of the power button will cycle through the 9 available vibration speeds and patterns. Experiment with each setting to find your preferred intensity and rhythm. The device is designed to offer a range of sensations.

4.3 LED Indicator

The blue LED light on the device serves multiple purposes:

- **Charging:** The LED will typically blink or remain solid while charging.
- **Fully Charged:** The LED may turn off or change color (e.g., solid blue) when charging is complete.
- **Low Battery:** The LED may blink rapidly or change color to indicate a low battery level, prompting you to recharge.





Image 3: Back view of the Gender X Bumpy Ride Vibrator, showing the regulatory marks (CE symbol) and the textured base, which typically contains the control button and charging port.

5. MAINTENANCE AND CARE

5.1 Cleaning

Always clean your device before and after each use. Use warm water and a mild, toy-safe soap. Rinse thoroughly to remove all soap residue. The device is waterproof, allowing for easy cleaning under running water. Ensure the charging port is completely dry before charging or storing.

5.2 Storage

Store the device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials (e.g., PVC, jelly) to prevent material degradation or damage. Store in its original packaging or a dedicated storage pouch.

5.3 Lubricant Compatibility

This device is made of silicone. For optimal safety and product longevity, use only water-based lubricants. Avoid oil-based, silicone-based, or petroleum-based lubricants, as these can damage the silicone material.

6. TROUBLESHOOTING

- **Device not turning on:**
 - Ensure the device is fully charged. Connect it to the charger and wait for the charging indicator.
 - Press and hold the power button for the specified duration (2-3 seconds). A quick press may not activate it.
- **Device not charging:**
 - Check if the charging cable is securely connected to both the device and the power source.
 - Try a different USB port or wall adapter.
 - Ensure the charging port on the device is clean and free of debris.
 - Verify the charging cable is not damaged.
- **Vibrations are weak or inconsistent:**
 - The battery may be low. Recharge the device fully.
 - Ensure the device is clean and free from any obstructions.

If you experience issues not covered here, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	840645
Brand	Evolved Novelties
Material	Silicone
Color	Purple (also available in Blue)
Vibration Functions	9 Speeds & Functions
Power Source	Rechargeable Battery
Water Resistance	Waterproof
Package Dimensions	9.06 x 2.36 x 2.32 inches
Weight	5.75 ounces

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details for this product may vary by region and retailer. Please refer to the packaging or the retailer's website for information regarding warranty coverage and terms. Retain your proof of purchase for any warranty claims.

8.2 Customer Support

For further assistance, troubleshooting, or inquiries regarding your Evolved Novelties Gender X Bumpy Ride Vibrator, please contact Evolved Novelties customer support through their official website or the retailer from whom you purchased the product.

Manufacturer: Evolved Novelties INC

© 2024 Evolved Novelties. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question