

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Steamery](#) /

› [Steamery Fabric Shaver Pilo 2 Instruction Manual](#)

Steamery Pilo 2 (SM-0051)

Steamery Fabric Shaver Pilo 2 Instruction Manual

Model: SM-0051

INTRODUCTION

Welcome to the Steamery Fabric Shaver Pilo 2. This device is designed to gently remove lint and pilling from various textiles, restoring their appearance. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Keep the device away from water and moisture. Do not use it in wet conditions.
- This device is not a toy. Keep out of reach of children.
- Ensure the protective cap is in place when not in use to prevent accidental activation or damage to the blades.
- Do not press the shaver too hard against the fabric, especially delicate materials, to avoid damage.
- Regularly clean the lint container and blades to maintain optimal performance and prevent overheating.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

WHAT'S INCLUDED

The package contains the Pilo 2 Fabric Shaver, a USB charging cord, a user manual, and a cleaning brush.

What's included



User
Manual



Pilo 2
Fabric Shaver



USB
Charging Cord



Cleaning
Brush

Image: The package contains the Pilo 2 Fabric Shaver, a USB charging cord, a user manual, and a cleaning brush.

- Pilo 2 Fabric Shaver
- USB Charging Cord
- User Manual
- Cleaning Brush

SETUP

Charging the Device

Before first use, fully charge your Pilo 2 Fabric Shaver. Connect the provided USB-C cable to the charging port on the device and then to a suitable USB power source (e.g., computer, wall adapter). The indicator light will show charging status. The device can be used while charging.

Video: This video demonstrates how to charge and use the Pilo 2 Fabric Shaver, including initial setup and operation.

OPERATING INSTRUCTIONS

Preparing the Fabric

- Lay the garment or textile flat on a hard, even surface.
- Gently stretch the fabric to ensure it is smooth and taut, especially for delicate items.

Using the Fabric Shaver

- Press the power button on top of the device to turn it on.
- Gently sweep the shaving head over the affected areas of the fabric. Use light, even pressure.
- Avoid pressing too hard or holding the shaver in one spot for too long, as this may damage the fabric.
- For best results, move the shaver in small, circular motions or straight strokes.

Video: This video demonstrates how to charge and use the Pilo 2 Fabric Shaver, including initial setup and operation.



Image: The Pilo 2 features six precision blades and a large shaving area for efficient lint removal.



**Powerful
pilling removal**



**Safe on
all fabrics**



**Cordless &
rechargeable**



**Shave whilst
charging**



Image: The Pilo 2 is designed for powerful pilling removal and is safe on all fabrics, offering cordless and rechargeable convenience.



Ergonomic and portable design.

2 hours of continuous usage.

Image: Its ergonomic and portable design allows for up to 2 hours of continuous usage on a single charge.

Video: This video shows a before and after comparison of fabric treated with the Steamery Fabric Shaver, demonstrating its effectiveness.

MAINTENANCE

Cleaning the Lint Container and Blades

For optimal performance, regularly clean the lint container and blades. If the machine starts to run slower, it is likely due to accumulated fuzz.

1. Ensure the device is turned off.
2. Gently twist the top part of the shaver counter-clockwise to remove the shaving head and lint container.
3. Empty the accumulated lint from the container.
4. Use the provided cleaning brush to carefully remove any lint or debris from the blades and the inside of the shaving head.
5. Reattach the shaving head by aligning it and twisting clockwise until it clicks into place.

Video: This video demonstrates how to charge and use the Pilo 2 Fabric Shaver, including cleaning the lint container and blades.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to a power source using the USB-C cable.
- **Poor performance/not removing lint:** The lint container may be full, or the blades might be clogged. Turn off the device, remove the shaving head, empty the container, and clean the blades with the brush.
- **Device stops unexpectedly:** This could indicate a full lint container or low battery. Follow the cleaning and charging instructions.
- **Fabric damage:** Ensure you are not pressing too hard or holding the shaver in one spot. Always lay the fabric flat and taut.

SPECIFICATIONS

Brand	Steamery
Model Number	SM-0051
Material	Plastic
Color	Black
Product Dimensions	2.63"D x 2.63"W x 3.54"H
Item Weight	5.4 ounces
Operation Mode	Manual (with electric motor)
Batteries	2 Lithium Ion batteries (included)
Charging	USB-C

WARRANTY AND SUPPORT

The Steamery Fabric Shaver Pilo 2 comes with a manufacturer's warranty. For detailed warranty information, product support, or service inquiries, please refer to the official Steamery website or contact their customer service directly. Keep your proof of purchase for warranty claims.