

[manuals.plus](#) /› [Rowenta](#) /› [Rowenta RO7236 Silence Force Cyclonic Vacuum Cleaner User Manual](#)

Rowenta RO7236

Rowenta RO7236 Silence Force Cyclonic Vacuum Cleaner User Manual

Model: RO7236EA

1. INTRODUCTION

Thank you for choosing the Rowenta RO7236 Silence Force Cyclonic vacuum cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before using the product and keep them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only.

- Do not use the appliance if the power cord or plug is damaged. Contact an authorized service center for repair.
- Do not use the vacuum cleaner to pick up water or other liquids, flammable substances, hot ashes, or sharp objects.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Unplug the appliance from the power outlet before cleaning or performing any maintenance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not leave the vacuum cleaner unattended when plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

The Rowenta RO7236 Silence Force Cyclonic is a bagless canister vacuum cleaner designed for efficient cleaning across various surfaces. Familiarize yourself with its main components:

- Main Unit with Motor and Cyclonic Dust Bin
- Dust Bin Release Button
- Hose Connection Port
- Flexible Hose

- Telescopic Tube
- Floor Brush (suitable for all floor types, includes a parquet brush)
- Power Cord and Rewind Button
- On/Off Power Button
- Suction Power Control (2 speeds)



Image 1: The main unit of the Rowenta RO7236 Silence Force Cyclonic vacuum cleaner, showcasing its compact design and transparent dust bin.

4. SETUP

Follow these steps to assemble your vacuum cleaner before first use:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or recycling.
2. **Attach the Hose:** Insert the flexible hose into the hose connection port on the main unit until it clicks securely into place.
3. **Assemble the Tube and Brush:** Connect the telescopic tube to the handle of the flexible hose. Then, attach the desired floor brush (e.g., the parquet brush) to the end of the telescopic tube. Ensure all connections are firm.
4. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

Your Rowenta RO7236 is designed for powerful and quiet cleaning.

1. **Power On/Off:** Press the On/Off power button located on the main unit to start or stop the vacuum cleaner.

2. **Adjusting Suction Power:** The appliance features 2 speed settings. Use the suction power control to adjust the intensity according to the surface being cleaned. Lower settings are suitable for delicate surfaces like curtains or rugs, while higher settings are for hard floors and heavily soiled carpets.
3. **Vacuuming Surfaces:** The included floor brush is versatile for all floor types, including hard floors and carpets. For delicate wooden floors, utilize the parquet brush.
4. **Maneuvering:** The compact design and wheels allow for easy movement around furniture and obstacles.



Image 2: A person using the Rowenta RO7236 vacuum cleaner on a hard floor, demonstrating its effective cleaning performance.

TOUS TYPES DE SOLS



Image 3: The Rowenta RO7236 vacuum cleaner being used on a carpet, highlighting its suitability for all floor types.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

- 1. Emptying the Dust Bin:** As a bagless model, the dust bin should be emptied regularly, ideally after each use or when the maximum fill line is reached. Press the dust bin release button, remove the bin, and empty its contents into a waste receptacle.
- 2. Cleaning the Cyclonic Filter:** The cyclonic filter system requires periodic cleaning. Refer to the markings on the dust bin for instructions on how to disassemble and clean the filter components. Wash filters with cold water and allow them to air dry completely before reassembling. Do not use detergents or hot water.
- 3. Cleaning Brushes and Accessories:** Remove any tangled hair, threads, or debris from the floor brush and other accessories. This can be done manually or with scissors.
- 4. Cleaning the Exterior:** Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5. **Cord Care:** Always retract the power cord by pressing the rewind button. Do not pull the cord forcefully.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, consult the following common problems and solutions:

- **Loss of Suction:**

- Check if the dust bin is full and needs emptying.
- Inspect the cyclonic filter for blockages or if it needs cleaning.
- Check the hose, telescopic tube, and floor brush for any obstructions.

- **Vacuum Cleaner Not Turning On:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check the circuit breaker in your home.

- **Unusual Noise:**

- This could indicate an obstruction in the hose or brush. Turn off and unplug the appliance before checking.
- Ensure the dust bin and filters are correctly installed.

If the problem persists after performing these checks, please contact Rowenta customer service.

8. SPECIFICATIONS

Feature	Specification
Brand	Rowenta
Model Number	RO7236EA
Typology	Bagless
Power	550 Watts
Capacity	2.5 Liters
Noise Level	67 Decibels
Number of Speeds	2
Filter Type	Cyclonic
Surface Recommendation	All floor types, carpets
Power Source	Corded Electric
Included Components	Parquet brush, dust bin
Product Dimensions (L x W x H)	38 x 57 x 33 cm
Item Weight	7.19 Kilograms

9. WARRANTY AND SUPPORT

Your Rowenta RO7236 Silence Force Cyclonic vacuum cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service, please contact Rowenta customer support. Contact information can typically be found on the Rowenta official website or on your product's packaging.

© 2024 Rowenta. All rights reserved.