

[manuals.plus](#) /

› [Disney](#) /

› [Disney Just Play Mickey Train Track Set Instruction Manual Model 38054](#)

**Disney 38054**

# Disney Just Play Mickey Train Track Set Instruction Manual

Model: 38054

## 1. INTRODUCTION

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Disney Just Play Mickey Train Track Set. Please read all instructions carefully before use.

## 2. SAFETY INFORMATION

### **WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.**

This product may contain small pieces. Adult supervision is recommended during assembly and play. Ensure all components are securely connected to prevent detachment during use.

## 3. WHAT'S INCLUDED

Your Disney Just Play Mickey Train Track Set includes the following 36 pieces:

- 1 x 3-car train (motorized locomotive and two cars)
- 1 x Remote controller
- 1 x Train station
- 1 x Piano shop
- 1 x Bell tower
- 1 x Post office
- 1 x Flag accessory
- 1 x Directional arrow accessory
- 1 x Billboard accessory
- 1 x Piano accessory
- 1 x Mail accessory
- 22 x Track pieces

*Note: 5 x AAA batteries are required (included) for operation.*

## 4. SETUP

## 4.1 Battery Installation

The train and remote controller require 5 x AAA batteries (included). Locate the battery compartments on the train and remote, insert the batteries according to the polarity indicators, and secure the covers. Adult assembly is required for battery installation.

## 4.2 Track Assembly

The set includes 22 easy-to-connect track pieces. You can build the track in three different ways to create varied play experiences. Ensure all track pieces are firmly connected to prevent the train from derailing during operation.



Figure 1: Example of a track layout for the Mickey Train Track Set.



Figure 2: Another example of a track layout for the Mickey Train Track Set.

#### 4.3 Accessory Placement

Place the train station, piano shop, bell tower, post office, and other accessories around the track as desired. These elements enhance the imaginative play experience.



Figure 3: The complete Mickey Train Track Set with a child playing.

## 5. OPERATING INSTRUCTIONS

### 5.1 Remote Control Operation

Use the remote controller to move the motorized train forward and backward along the track. The remote is designed for easy use by young children.



Figure 4: The remote controller for the Mickey Train Track Set.

## 5.2 Train Sounds and Phrases

The train features realistic train sounds and over 20 Mickey Mouse phrases. These sounds and phrases activate as the train moves and makes stops, enhancing the play experience.



Figure 5: The train activates sounds and phrases during play.

### 5.3 Imaginative Play

Encourage children to create their own adventures and scenarios with Mickey Mouse making special deliveries around the town track set. The various stops and props provide opportunities for diverse storytelling.

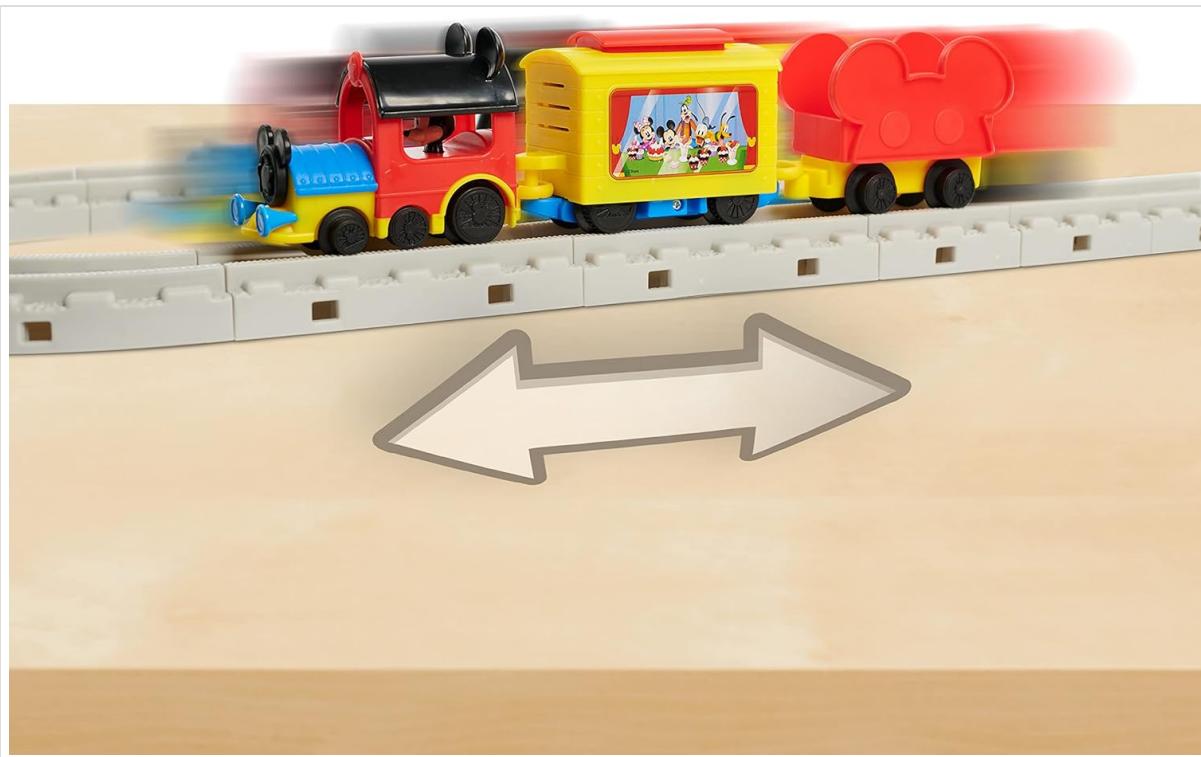


Figure 6: The motorized train can move forward and backward.

## 6. MAINTENANCE

### 6.1 Cleaning

Wipe the train and track pieces with a dry or slightly damp cloth to remove dust and dirt. Do not immerse electronic components in water.

### 6.2 Battery Replacement

When the train's movement slows or sounds become distorted, it is time to replace the batteries. Follow the battery installation steps in Section 4.1.

### 6.3 Storage

Store the set in a cool, dry place away from direct sunlight when not in use. Disassemble the track pieces for compact storage if needed.

## 7. TROUBLESHOOTING

### 7.1 Train Not Moving or Responding to Remote

- Check if batteries are correctly installed in both the train and the remote controller.
- Replace old batteries with new ones.
- Ensure the train's power switch is in the 'ON' position.

### 7.2 Train Derails Frequently

- Verify that all track pieces are securely connected and laid on a flat, stable surface.
- Inspect track pieces for any damage or warping.
- Ensure no accessories or foreign objects are obstructing the track.

### 7.3 Sounds/Phrases Not Working

- Check battery levels in the train.
- Ensure the train's power switch is in the 'ON' position.

## 8. SPECIFICATIONS

---

- **Product Dimensions:** 20 x 5.5 x 15.5 inches
- **Item Weight:** 5.84 pounds
- **Item Model Number:** 38054
- **Manufacturer Recommended Age:** 36 months - 8 years
- **Batteries:** 5 x AAA batteries (included)
- **Manufacturer:** Just Play
- **Release Date:** August 1, 2022

## 9. WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Disney or Just Play customer service website. Keep your purchase receipt for any warranty claims.