

Inscabin D8

Inscabin D8 Internet DAB/DAB+ Digital Radio User Manual

Model: D8 (054114452460)

INTRODUCTION

Thank you for choosing the Inscabin D8 Internet DAB/DAB+ Digital Radio. This manual provides detailed instructions for setting up, operating, and maintaining your new radio. The D8 offers a versatile listening experience, combining traditional radio formats with modern streaming capabilities.

Key features include:

- Access to over 25,000 internet radio stations worldwide.
- DAB/DAB+ and FM digital radio reception.
- Spotify Connect integration for seamless music streaming.
- Bluetooth connectivity for streaming from your smartphone or tablet.
- Integrated kitchen timer, sleep timer, and dual alarms.
- Customized 3-inch full-range speakers with adjustable bass and treble.



Figure 1: Front view of the Inscabin D8 Internet Radio, showcasing its display and control knobs.

SAFETY INFORMATION

Please read all safety instructions carefully before using the device.

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Keep the unit away from strong magnetic fields.
- Clean the unit only with a soft, dry cloth. Do not use liquid cleaners.

SETUP

1. Unpacking and Contents

Carefully remove all components from the packaging. Please check that all items listed below are present:

- Inscabin D8 Internet Radio Unit
- Power Adapter
- Remote Control

- User Manual (this document)



Figure 2: Contents of the Inscabin D8 package, including the radio, remote control, power adapter, and user manual.

2. Power Connection

1. Locate the DC IN port on the back of the Inscabin D8 radio.
2. Connect the power adapter cable to the DC IN port.
3. Plug the power adapter into a suitable wall outlet.
4. The radio will power on automatically or enter standby mode.

3. Initial Power On and Network Setup

Upon first power-on, the radio will guide you through the initial setup wizard.

1. **Language Selection:** Use the **ENTER** knob to select your preferred language.
2. **Network Connection:** The radio will prompt you to connect to a Wi-Fi network.
 - Select "Scan Network" to find available Wi-Fi networks.
 - Choose your network from the list.
 - Enter your Wi-Fi password using the **ENTER** knob to navigate characters and confirm.
 - Once connected, the radio will display a confirmation message.
3. **Time and Date:** The radio will automatically set the time and date once connected to the internet. You can manually adjust these settings later in the system settings if needed.

OPERATING INSTRUCTIONS

1. Controls Overview

The Inscabin D8 features intuitive controls for easy navigation and operation.



Figure 3: Detailed view of the Inscabin D8's control panel, showing the display, volume knob, mute button, preset buttons, skip buttons, and enter knob.

- **VOLUME +/- Knob:** Rotate to adjust the volume level. Press to mute/unmute.
- **ENTER Knob:** Rotate to scroll through menus and options. Press to confirm a selection.
- **P1, P2, P3 Buttons:** Quick access preset buttons. Press and hold to save a station; short press to recall.
- **SKIP +/- Buttons:** Navigate through tracks or menu items.
- **Power Button:** Press to turn the radio on/off or put it into standby.
- **Menu Button:** Access the main menu.
- **Back Button:** Go back to the previous screen or menu.

2. Mode Selection

From the main menu, you can select various operating modes:

- **Internet Radio:** Access thousands of online radio stations from around the world. Browse by genre, location, or search for specific stations.
- **DAB/DAB+ Radio:** Tune into digital audio broadcast stations. The radio will automatically scan for available stations upon first selection.
- **FM Radio:** Tune into traditional FM radio stations.
- **Bluetooth:** Connect your smartphone or other Bluetooth-enabled device to stream audio wirelessly.

- **Spotify Connect:** Stream music directly from your Spotify account using the Spotify app on your device.

3. Bluetooth Pairing

1. Select "Bluetooth" mode from the main menu. The radio will enter pairing mode and display "Waiting for connection".
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "Inscabin D8" from the list of devices.
4. Once paired, the radio will confirm the connection, and you can begin streaming audio from your device.

4. Spotify Connect

To use Spotify Connect, ensure your Inscabin D8 and your mobile device are connected to the same Wi-Fi network.

1. Open the Spotify app on your smartphone or tablet.
2. Play a song or podcast.
3. Tap the "Devices Available" icon (usually a speaker or computer icon) at the bottom of the playback screen.
4. Select "Inscabin D8" from the list of available devices.
5. Audio will now stream through your Inscabin D8 radio.

5. Alarms and Timers

- **Alarm Clock:** Set up to two independent alarms with customizable sound sources (buzzer, internet radio, DAB, FM) and volume. Access this feature via the main menu under "Alarms".
- **Sleep Timer:** Set a timer for the radio to automatically turn off after a specified duration (e.g., 15, 30, 60 minutes). This is typically found in the system settings or by pressing a dedicated button on the remote.
- **Kitchen Timer:** A simple countdown timer useful for cooking or other activities.

MAINTENANCE

1. Cleaning

To maintain the appearance of your radio, wipe the surfaces with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as these may damage the finish.

2. Storage

If you plan to store the radio for an extended period, disconnect it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

3. Software Updates

Periodically check for software updates through the radio's system settings. Updates can improve performance and add new features. Follow the on-screen instructions carefully during an update.

TROUBLESHOOTING

If you encounter any issues with your Inscabin D8 radio, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; power outlet not active.	Ensure the power adapter is securely connected to the radio and a working power outlet. Try a different outlet.

Problem	Possible Cause	Solution
No sound	Volume too low; muted; incorrect source selected.	Increase volume. Press the MUTE button. Ensure the correct input mode (Internet Radio, DAB, FM, Bluetooth) is selected.
Cannot connect to Wi-Fi	Incorrect password; Wi-Fi signal too weak; router issue.	Double-check Wi-Fi password. Move radio closer to router. Restart your Wi-Fi router.
Poor radio reception (DAB/FM)	Antenna not extended; weak signal area.	Fully extend the telescopic antenna. Try repositioning the radio for better reception. Perform a new station scan.
Bluetooth pairing issues	Device not in pairing mode; already paired with another device.	Ensure the radio is in Bluetooth pairing mode. Disconnect from other Bluetooth devices. Restart both the radio and your mobile device.

SPECIFICATIONS

Feature	Detail
Brand	Inscabin
Model Number	054114452460 (D8)
Product Dimensions	0.02 x 0.01 x 0.01 cm
Item Weight	1.14 kg
Colour	Cherry
Tuner Technology	DAB, Internet Radio, FM
Connectivity Technology	Bluetooth, Wi-Fi
Hardware Interface	3.5mm Audio
Power Source	Corded Electric
Compatible Devices	Tablet (and other Bluetooth devices)
Special Features	Internet, DAB, FM radio, Spotify Connect, Bluetooth, Alarms, Timers

WARRANTY AND SUPPORT

For information regarding warranty coverage and terms, please refer to the documentation provided at the time of purchase or contact your retailer.

For technical support or further assistance, please visit the official Inscabin website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question