

Manuals.plus /

› VINABTY /

› VINABTY Replacement Remote Control for Harman Kardon Audio Video Receiver AVR130 Series User Manual

VINABTY AVR130

VINABTY Replacement Remote Control User Manual

For Harman Kardon Audio Video Receivers: AVR130, AVR 130 E10, AVR210, AVR135, AVR146, AVR220, AVR225, AVR7500

INTRODUCTION

This manual provides comprehensive instructions for the VINABTY Replacement Remote Control. This remote is designed to function as a direct replacement for original remote controls used with various Harman Kardon Audio Video Receivers. It offers basic infrared (IR) functionality without requiring any programming.

SETUP

Battery Installation

The VINABTY Replacement Remote Control requires two AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery compartment.

This image displays the rear side of the VINABTY remote control, highlighting the battery compartment located at the bottom. The compartment cover is visible, indicating where to insert the two AAA batteries.

Initial Use

Once batteries are installed, the remote is ready for use. No additional programming or setup is required. Simply point the remote control towards your Harman Kardon Audio Video Receiver and press the desired function button.

OPERATING INSTRUCTIONS

The VINABTY Replacement Remote Control provides direct access to common functions of your Harman Kardon Audio Video Receiver. Ensure there is a clear line of sight between the remote's IR emitter and the receiver's IR sensor.





Image: Front of the remote control with button layout.

This image shows the front face of the VINABTY remote control, displaying its full array of buttons. Key sections include power, number pad, volume, channel, input selection, and navigation controls.

Key Functions

- **SHIFT / Power:** Turns the receiver on or off. The red button at the top.
- **Number Pad (0-9):** For direct input of channel numbers or other numerical selections.
- **V+ / V-:** Adjusts the volume up or down.
- **CH+ / CH-:** Changes the channel up or down.
- **AV / HDMI / TV:** Selects different audio/video input sources.
- **MENU / OK / Navigation Arrows:** Used to navigate menus and confirm selections on your receiver's display.
- **EXIT / RETURN:** Exits current menu or returns to the previous screen.
- **SLEEP:** Activates the sleep timer function on compatible receivers.
- **SPKR:** Speaker selection or adjustment.
- **AM/FM:** Toggles between AM and FM radio bands.
- **TUNING:** For manual radio tuning.
- **DOLBY SUR. / DTS SUR. / LOGIC7:** Selects various surround sound modes.
- **VID1 / DVD / CD:** Direct input selection for specific devices.
- *Other buttons are labeled for specific functions and should correspond to your receiver's capabilities.*

Compatible Receiver Models

This remote control is compatible with the following Harman Kardon Audio Video Receiver models:

- AVR130
- AVR 130 E10
- AVR210
- AVR135
- AVR146
- AVR220
- AVR225

- AVR7500

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's performance degrades or stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the receiver's IR sensor.
 - Verify that you are within the effective operating range (up to 33 feet).
- **Specific buttons not working:**
 - Some functions may be specific to certain Harman Kardon receiver models. Refer to your receiver's original manual for specific feature compatibility.
 - Ensure the remote is pointed directly at the receiver.

SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	AVR130 (Mfr Part Number: AVR130-XINHAO)
Connectivity Technology	Infrared (IR)
Compatible Devices	Harman Kardon Audio Video Receivers (AVR130, AVR 130 E10, AVR210, AVR135, AVR146, AVR220, AVR225, AVR7500)
Battery Type	2 x AAA (not included)
Maximum Range	33 Feet
Button Quantity	30
Color	Black
Item Weight	0.09 Kilograms
Item Dimensions (L x W x H)	5"L x 1.9"W x 0.5"H

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided at the time of purchase or contact the retailer where the product was acquired. As a replacement remote, specific warranty terms may vary.