

[Manuals.plus](#) /

› [Qaba](#) /

› Qaba Kids Tricycle 4 in 1 Trike User Manual

Qaba 370-199GY

Qaba Kids Tricycle 4-in-1 Trike User Manual

Model: 370-199GY

INTRODUCTION

This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your Qaba Kids Tricycle 4-in-1 Trike. Please read this manual thoroughly before use and retain it for future reference. This tricycle is designed to adapt to your child's growth, offering multiple configurations for children aged 1 to 5 years.



Image: The Qaba Kids Tricycle 4-in-1 Trike in grey, showcasing its primary configuration with parent handle and canopy.

SAFETY INFORMATION

- **Adult Supervision:** Always ensure adult supervision during the use of this tricycle.
- **Weight Limit:** Do not exceed the manufacturer's suggested maximum weight of 55 lbs (25 kg).
- **Age Range:** Suitable for children aged 1 month to 5 years. Ensure the tricycle configuration matches the child's age and developmental stage.
- **Safety Belt:** Always secure your child with the 3-point safety belt when using the tricycle.
- **Guardrail:** Ensure the removable guardrail is properly installed and locked when used with younger children.
- **Brakes:** Utilize the rear wheel brake for secure parking.
- **Wheels:** The fully closed wheels are designed to prevent injuries. Keep fingers and clothing away from moving parts.

- **Assembly:** Ensure all parts are correctly assembled and securely fastened before each use.

PRODUCT FEATURES

4-in-1 Multifunctional Design

The Qaba Kids Tricycle offers four distinct configurations to accommodate your child's growth and varying needs:

1. **Parent-Controlled Push Trike:** For younger children, with parent handle, canopy, safety bar, and footrest.
2. **Assisted Trike:** Child can pedal with parent assistance, safety bar and canopy may be removed.
3. **Independent Trike:** Child pedals and steers independently, parent handle, safety bar, and footrest removed.
4. **Balance Bike Mode:** (If applicable, based on design, though not explicitly stated as a separate mode, the description implies progression).



Image: Visual representation of the four different configurations of the tricycle, adapting to a child's age from 1 to 5 years.

Adjustable Components

- **Parent Push Handle:** Three-gear adjustable height (33.75"-37.75" / 86-96 cm) to suit different adult heights. It is also removable.
- **Canopy:** Easily adjustable and removable to provide shade.
- **Seat:** Reversible and angle-adjustable to provide comfort and allow for parent-child interaction.
- **Footrest:** Foldable for convenience as the child grows.

COMFORTABLE SEAT



Angle adjustable



Reversible

Image: Illustration of the tricycle's seat, highlighting its angle adjustment and reversible feature for facing forward or backward.

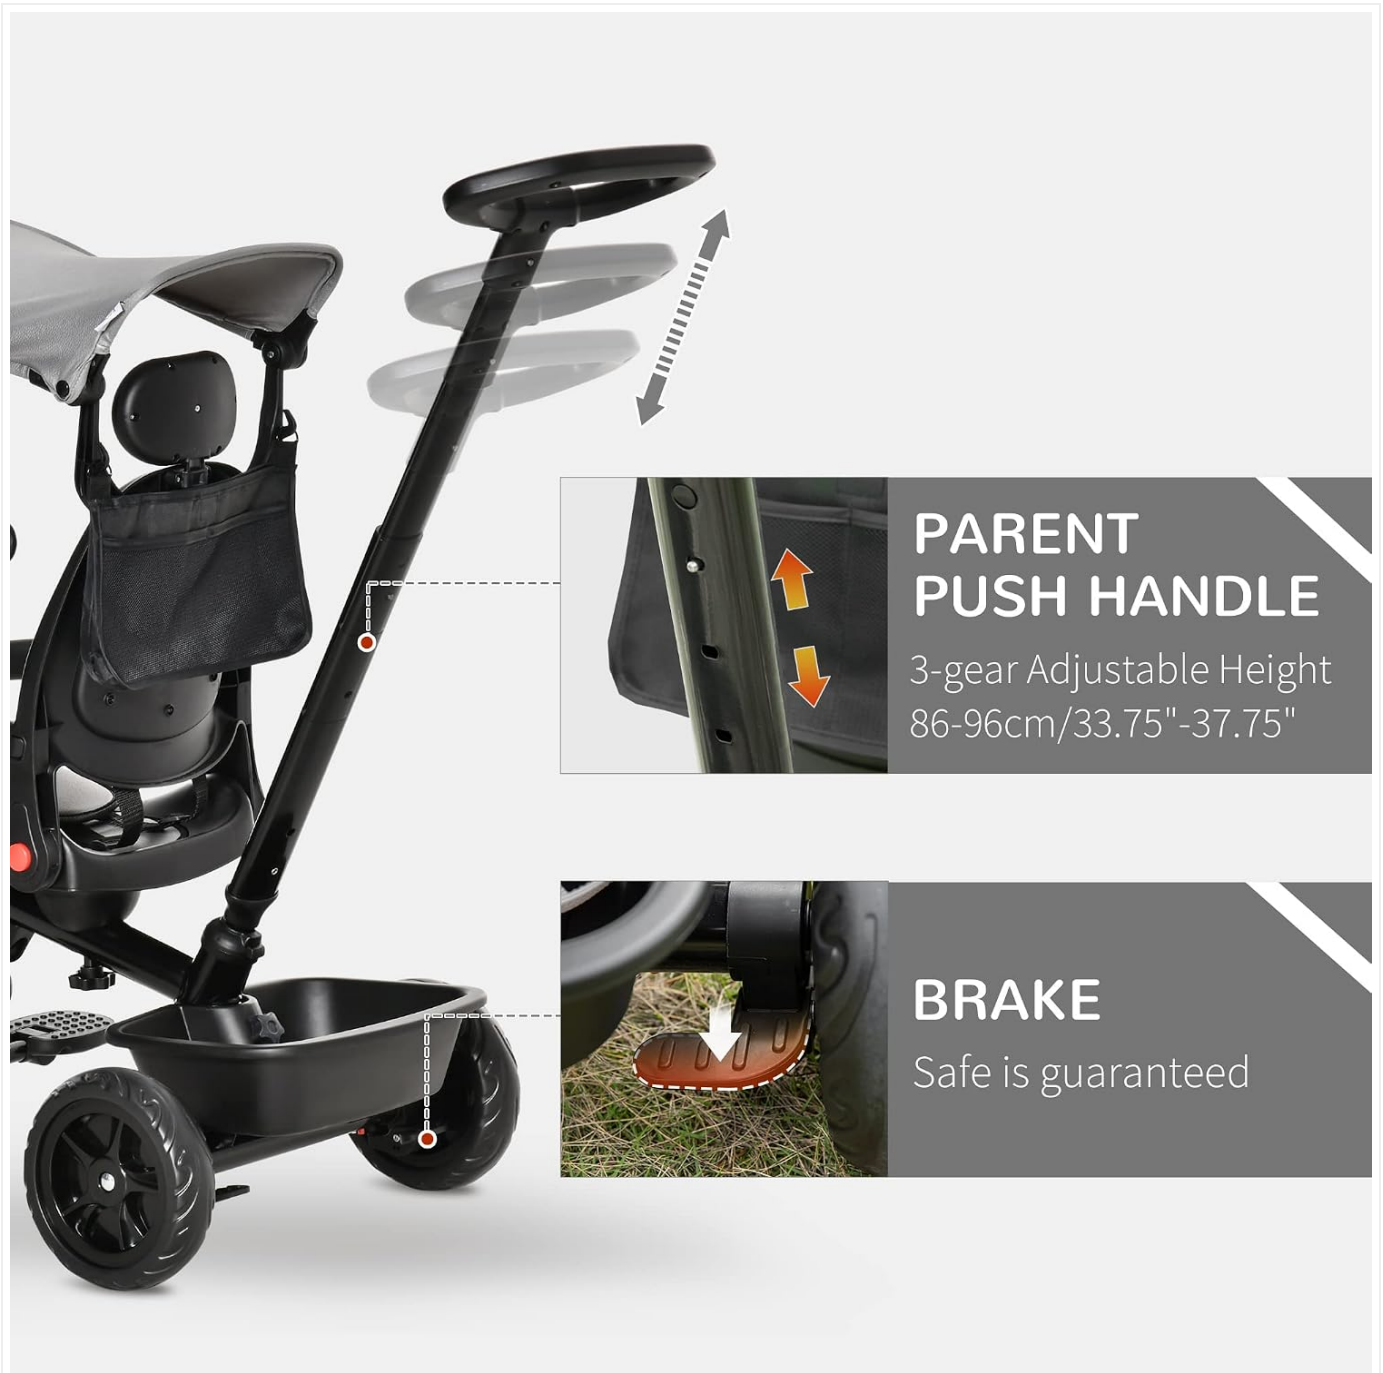


Image: Close-up view of the parent push handle with height adjustment indicators and the foot-operated brake on the rear wheel.

Safety and Convenience

- **3-Point Safety Belt:** Secures the child in the seat.
- **Removable Guardrail:** Provides additional security for younger riders.
- **Fully Closed EVA Wheels:** Designed for durability and safety, preventing entanglement.
- **Front Wheel Clutch:** Allows the parent to control the pedals or let the child pedal freely.
- **Rear Wheel Brake:** For secure stopping and parking.
- **Storage Baskets:** Two baskets for carrying essentials.
- **Mommy Pocket:** A small pocket for personal items.

MORE DETAILS



Image: A composite image highlighting various detailed features such as the 3-point safety belt, removable guardrail, foldable footrest, front wheel clutch, fully closed EVA wheels, mommy pocket, and storage baskets.

SETUP AND ASSEMBLY

The Qaba Kids Tricycle features a quick and easy disassembly design, requiring minimal tools for assembly. Follow the included graphical instructions for detailed steps.

General Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Attach the front wheel assembly to the main frame.
3. Install the rear wheels.
4. Mount the seat and backrest onto the frame.
5. Attach the parent push handle and canopy.
6. Install the safety bar, footrest, and storage baskets.

7. Ensure all connections are secure and locked into place before first use.

OPERATING INSTRUCTIONS

Adjusting the Parent Push Handle

- Locate the adjustment mechanism on the parent handle pole.
- Press the release button or lever and slide the handle to one of the three desired height settings.
- Ensure the handle locks securely into position before pushing.

Using the Brakes

- To engage the brake, press down on the brake lever located near the rear wheels with your foot.
- To release, lift the brake lever.
- Always engage the brake when parking the tricycle or when the child is getting on or off.

Front Wheel Clutch Operation

- The front wheel clutch allows you to disengage the pedals from the wheel.
- When the clutch is engaged (locked), the child's pedaling will propel the tricycle.
- When the clutch is disengaged (unlocked), the pedals will spin freely without affecting the wheel, allowing the parent to push the tricycle without the child's feet interfering.
- Refer to the specific mechanism on your tricycle for engaging/disengaging the clutch.

Reversing and Adjusting the Seat

- To reverse the seat, locate the release mechanism (often a button or lever) beneath the seat.
- Follow the instructions to rotate the seat 180 degrees.
- To adjust the seat backrest angle, use the recline mechanism, typically found on the side or back of the seat.
- Ensure the seat is securely locked in the desired position before use.



Image: A parent pushing a child in the Qaba Kids Tricycle through a park, demonstrating the parent-controlled mode.

MAINTENANCE

- **Cleaning:** Wipe down the tricycle with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. The seat fabric is non-detachable and non-washable.
- **Lubrication:** Lubricate moving parts, such as wheel axles and pedal mechanisms, regularly to ensure smooth operation.
- **Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Inspect the frame, wheels, and other components for any signs of wear or damage. Replace damaged parts immediately.
- **Storage:** Store the tricycle in a dry, cool place away from direct sunlight and extreme temperatures to prevent material degradation. The tricycle can be partially disassembled for more compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle difficult to steer/push	Loose parent handle connection; insufficient lubrication; debris in wheels.	Check parent handle connection; lubricate moving parts; clean wheels.
Pedals not engaging/spinning freely	Front wheel clutch is disengaged.	Engage the front wheel clutch. Refer to operating instructions.
Brake not holding securely	Brake mechanism needs adjustment or is worn.	Inspect brake mechanism for wear; ensure it is fully engaged. Contact support if issue persists.
Unstable or wobbly ride	Loose fasteners; improper assembly.	Check all screws, bolts, and connections for tightness. Re-verify assembly steps.

SPECIFICATIONS

Feature	Detail
Model Number	370-199GY
Colour	Grey
Recommended Age	1 month - 5 years
Maximum Weight Capacity	55 lbs (25 kg)
Overall Dimensions (L x W x H)	44" x 20.5" x 38.5" (111.5 x 52 x 98 cm)
Parent Handle Adjustable Height	33.75" - 37.75" (86 - 96 cm)
Materials	PP, PA, ABS, Metal, Polyester, EVA
Assembly Required	Yes
Item Weight	16.28 lbs (7.38 kg)
UPC	673986108192



Image: A diagram illustrating the key dimensions of the Qaba Kids Tricycle, including length, width, and height.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact Qaba customer service. Details can typically be found on the product packaging or the official Qaba website.

You can also visit the [Qaba Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09N34JWDH>

More documents and user manuals: <https://manuals.plus/>