

LEICKE EP18222

LEICKE DJ Roxxx Bluetooth Speaker EP18222 User Manual

INTRODUCTION

Thank you for choosing the LEICKE DJ Roxxx Bluetooth Speaker. This portable, waterproof speaker is designed to deliver high-quality audio for various outdoor and indoor activities. Featuring IPX7 water resistance, MaxSound bass, and compatibility with voice assistants like Siri and Google Assistant, it offers a versatile audio experience. This manual provides essential information for the proper setup, operation, and maintenance of your speaker.



Image: The LEICKE DJ Roxxx Bluetooth Speaker, showcasing its IPX7 waterproof design with water splashing across its surface.

PACKAGE CONTENTS

Please check the package for the following items:

- LEICKE DJ Roxxx Bluetooth Speaker (Round Clip Edition)
- USB Charging Cable
- Carabiner
- User Manual



Karabiner
Carbine



USB-C



Image: The LEICKE DJ Roxxx Bluetooth Speaker, carabiner, and USB-C charging cable, representing the items included in the package.

PRODUCT OVERVIEW

Speaker Features

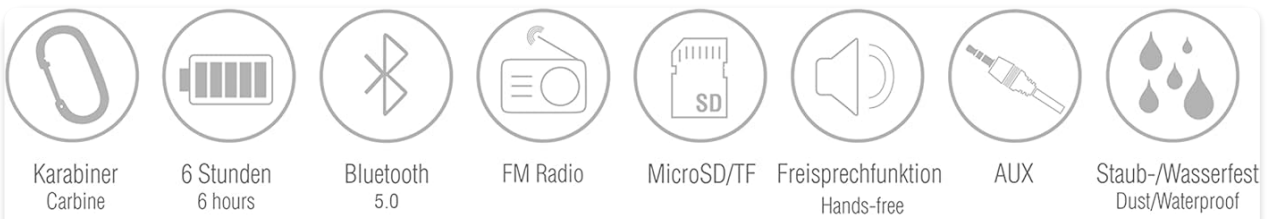


Image: An overview of the speaker's key features, including its carabiner, battery life, Bluetooth version, FM radio, MicroSD/TF card slot, hands-free calling, AUX input, and waterproof design.

Button Functions



Image: A detailed view of the speaker's control buttons and their respective functions, such as play/pause, volume control, and voice assistant activation.

Ports and Connections



Image: The side panel of the speaker, highlighting the USB-C charging port, Micro SD/TF card slot, and AUX input.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the USB-C port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

2. Powering On/Off

- To power on: Press and hold the Power button for a few seconds until you hear an audible prompt.
- To power off: Press and hold the Power button again for a few seconds.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "LEICKE DJ Roxxx" from the list.
4. Once connected, the speaker will provide an audible confirmation, and the LED indicator will stop flashing.

4. Connecting to PC (as Speaker)

You can connect the speaker to your PC using the provided USB cable to use it as a full-fledged PC speaker. Ensure your PC recognizes the speaker as an audio output device.

OPERATING INSTRUCTIONS

1. Music Playback

- **Bluetooth:** After successful pairing, play music from your connected device. Use the speaker's multifunction button to play/pause. Use the volume buttons to adjust volume or skip tracks (long press for volume, short press for track).
- **MicroSD/TF Card:** Insert a MicroSD/TF card with MP3 files into the designated slot. The speaker will automatically switch to card playback mode.
- **AUX Input:** Connect an audio device using a 3.5mm AUX cable (not included) to the AUX port. The speaker will switch to AUX mode.
- **FM Radio:** Connect the Micro USB cable (acting as an antenna) to the USB-C port. Press the Power Mode button to switch to FM radio mode. Use the volume buttons to scan for stations.

2. Hands-Free Calling

When connected via Bluetooth, the integrated microphone allows you to use the speaker for hands-free calls. Press the multifunction button to answer or end a call.

3. Voice Assistant Activation

The speaker is compatible with Siri (iOS) and Google Assistant. With a single click of the dedicated voice assistant button, you can activate your device's voice assistant to control your smart home or perform other commands.

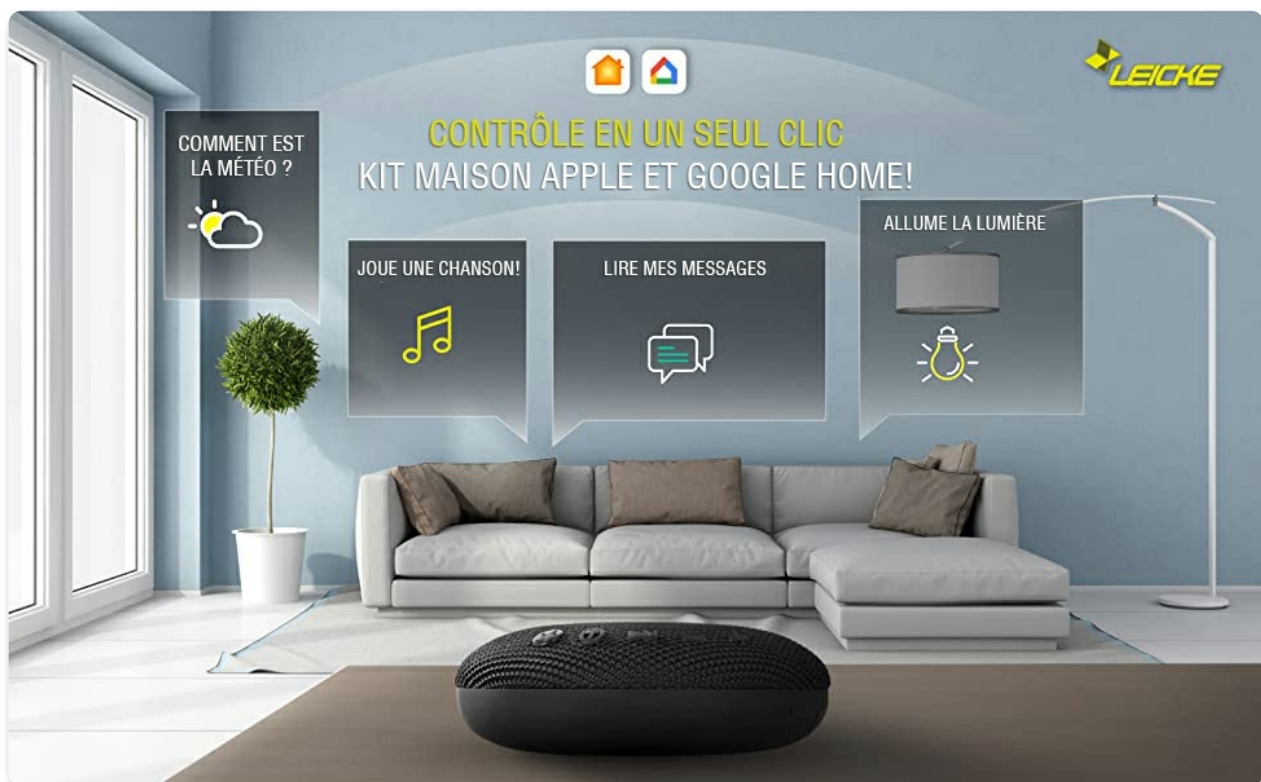


Image: The speaker demonstrating its voice assistant capabilities, allowing users to control smart home devices or get information with simple voice commands.

MAINTENANCE

1. Water Resistance (IPX7)

The speaker has an IPX7 rating, meaning it can be submerged in water up to 1 meter for 30 minutes. Ensure all port covers are securely closed before exposing the speaker to water. Do not expose to saltwater or other chemicals.

2. Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.

3. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

- **Speaker does not turn on:** Ensure the battery is charged. Connect the speaker to a power source using the USB cable.
- **Cannot pair via Bluetooth:**
 - Ensure the speaker is in pairing mode.
 - Make sure Bluetooth is enabled on your device.
 - Move the speaker closer to your device.
 - Forget the device from your phone's Bluetooth list and try pairing again.
- **No sound:**
 - Check the volume level on both the speaker and your connected device.
 - Ensure the correct input mode (Bluetooth, AUX, TF, FM) is selected.
 - If using AUX, ensure the cable is fully inserted and functional.
- **Poor sound quality:**
 - Ensure the speaker is within Bluetooth range and there are no obstructions.
 - Try playing a different audio source.
- **FM Radio not working:** Ensure the USB cable is connected to act as an antenna. Try repositioning the speaker for better reception.

SPECIFICATIONS

Model Name	EP18222
Brand	LEICKE
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Radio Frequency
Compatible Devices	Smartphone, Tablet, Laptop, Desktop
Special Features	For music, Voice Assistant compatible
Waterproof Rating	IPX7
Power Source	Battery Powered
Speaker Output Power	5 Watts (Max 25 Watts)




Audio Output Mode	Stereo, Surround Sound
Surround Sound Channel Configuration	2.1
Control Method	Voice, Button
Product Dimensions (L x W x H)	11.6 x 3.9 x 11.6 cm
Weight	238 grams
Material	Plastic or Rubber
Mounting Type	Table Mount

WARRANTY AND SUPPORT

LEICKE products are designed for reliability and performance. For warranty information and technical support, please refer to the documentation included with your purchase or visit the official LEICKE website. Keep your proof of purchase for warranty claims.

Related Documents - EP18222

	<p>LEICKE Bluetooth Speaker DJ Roxxx Round Clip Manual - EP18222</p> <p>User manual for the LEICKE Bluetooth Speaker DJ Roxxx Round Clip (Model EP18222). Learn about package contents, technical specifications, Bluetooth pairing, modes, controls, troubleshooting, safety, and compliance.</p>
	<p>LEICKE DJ Roxxx Shower Bluetooth Speaker EP18141 User Manual and Guide</p> <p>Comprehensive user manual for the LEICKE DJ Roxxx Shower Bluetooth Speaker (EP18141). Learn about package contents, technical specifications, Bluetooth pairing, modes, controls, troubleshooting, safety, and FCC compliance.</p>
	<p>LEICKE DJ Roxxx Bluetooth-Lautsprecher Bedienungsanleitung</p> <p>Benutzerhandbuch für den LEICKE DJ Roxxx Bluetooth-Lautsprecher (Modell EP18177), das den Lieferumfang, technische Spezifikationen, Betriebsmodi, Fernbedienung, Sicherheitshinweise und Konformitätsinformationen abdeckt.</p>

	<p><u>LEICKE DJ ROXXX DAB+ Radio Handbuch und Funktionen</u></p> <p>Umfassendes Benutzerhandbuch für das LEICKE DJ ROXXX DAB+ Radio, das Funktionen, Einrichtung, Bedienung und Fehlerbehebung für diesen tragbaren Bluetooth-Lautsprecher und Digitalradio detailliert beschreibt. Enthält technische Spezifikationen und Sicherheitshinweise.</p>
	<p><u>LEICKE Music Beanie User Manual - Bluetooth Beanie for Smartphones (WD67221, WD67223, WD67224)</u></p> <p>LEICKE Music Beanie User's Manual: This guide provides comprehensive information on the LEICKE Music Beanie (models WD67221, WD67223, WD67224), a Bluetooth 2.1+EDR wearable audio device for smartphones. Learn about package contents, technical specifications, charging, pairing instructions, device functions, washing care, safety guidelines, FCC compliance, and disposal. Find contact details for LEICKE GmbH.</p>
	<p><u>LEICKE Pro 3 TWS ANC Bluetooth Earphones User Manual</u></p> <p>User manual for LEICKE Pro 3 True Wireless Stereo (TWS) Bluetooth earphones with Active Noise Cancellation (ANC). Learn about package contents, technical specifications, functions like pairing, ANC mode, music control, and safety instructions.</p>