



Manuals.plus /

› KidKraft /

› KidKraft Smoothie Fun Wooden Play Kitchen Model 20071 Instruction Manual

KidKraft 20071

KidKraft Smoothie Fun Wooden Play Kitchen - Instruction Manual

Model: 20071

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your KidKraft Smoothie Fun Wooden Play Kitchen. Please read all instructions carefully before assembly and use to ensure proper function and longevity of the product. This play kitchen is designed to encourage imaginative play and healthy habits in children.

2. IMPORTANT SAFETY INFORMATION

- **Adult assembly required.** Ensure all parts are securely fastened by an adult before allowing children to play.
- For domestic use only.
- **Not suitable for children under 36 months (3 years)** due to small parts which may present a choking hazard.
- Regularly check all fasteners (screws, bolts) to ensure they remain tight. Retighten as necessary.
- Do not stand, climb, or sit on the product. This product is designed for play, not as a climbing structure or seating.
- Keep away from open flames, direct heat sources, and excessive moisture.
- Always supervise children during play to prevent accidents.

3. PACKAGE CONTENTS

Verify that all components and accessories are present before beginning assembly. The KidKraft Smoothie Fun Wooden Play Kitchen includes the main kitchen unit and 22 play accessories.



Image Description: A flat lay photograph showcasing the 22 play accessories included with the KidKraft Smoothie Fun Wooden Play Kitchen. Items visible include a toy blender, a frying pan, a spatula, a spoon, a cutting board, a knife, various toy fruits (banana, orange, apple, grapes, strawberry), a juice carton, a cup, and two hanging baskets with more fruit. These accessories are essential for interactive play.

Included Accessories:

- Blender with lid
- Frying pan
- Spatula and spoon
- Cutting board and play knife
- Assorted play fruits (e.g., banana, orange, apple, grapes, strawberry)
- Juice carton
- Play cup
- Two hanging fruit baskets
- Smoothie cardstock insert
- Other small play food items and utensils

4. ASSEMBLY INSTRUCTIONS

Assembly of the KidKraft Smoothie Fun Wooden Play Kitchen requires adult supervision and basic tools. Please follow the detailed assembly instructions provided in the separate assembly guide included with your product. Ensure all parts are correctly oriented and fasteners are tightened securely.

- **Tools Required:** Typically, a Phillips head screwdriver is needed.
- **Unpack:** Carefully remove all components from the packaging and lay them out on a clean, flat surface.
- **Identify Parts:** Match each part to the corresponding labels in the assembly guide.
- **Follow Steps:** Assemble the kitchen unit step-by-step as indicated in the guide, paying close attention to diagrams.
- **Secure Fasteners:** Ensure all screws and bolts are tightened firmly but do not overtighten, which could damage the wood.



Image Description: A front view of the fully assembled KidKraft Smoothie Fun Wooden Play Kitchen. It features a sink with a golden faucet, a cutting board, a stove with clickable knobs, an oven with a clear door, and a blender on the countertop. Hanging baskets with play fruit are visible on the left side. The kitchen has a light grey and mint green color scheme with golden accents.

5. OPERATING INSTRUCTIONS

The KidKraft Smoothie Fun Play Kitchen offers various interactive features for engaging play.

- **Blender Function:** Place play fruits into the blender. Press the button located at the base of the blender to activate its spinning and whirring action, simulating real blending.



Image Description: A close-up shot focusing on the toy blender of the KidKraft Smoothie Fun Play Kitchen. A child's hand is shown pressing the button at the base of the blender, which contains colorful play fruit, demonstrating the interactive blending feature.

- **Clickable Knobs:** The stove knobs produce a clicking sound when turned, enhancing the realistic cooking experience.
- **Opening Doors:** The oven door and cabinet doors can be opened and closed, providing storage space for play accessories.
- **Movable Faucet Handle:** The faucet handle can be moved up and down, simulating water flow.
- **Hanging Baskets:** Use the two hanging baskets to store and display play fruits or other small accessories.
- **Cutting Board:** The space-saving cutting board fits over the sink, providing a surface for preparing play food.



Image Description: A young child, seen from the side, actively engaged in playing with the KidKraft Smoothie Fun Wooden Play Kitchen. The child is holding a play juice carton and appears to be adding play fruit into the blender, demonstrating the interactive nature of the toy.

6. MAINTENANCE AND CARE

Proper care will extend the life of your KidKraft Smoothie Fun Wooden Play Kitchen.

- **Cleaning:** Wipe surfaces with a slightly damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Drying:** Ensure the kitchen is thoroughly dried after cleaning to prevent moisture damage to the wood.
- **Inspection:** Periodically inspect the kitchen for any signs of wear, loose parts, or damage. Address any issues promptly.
- **Storage:** Store the play kitchen in a dry environment, away from extreme temperatures or humidity.

7. TROUBLESHOOTING

If you encounter any issues with your play kitchen, refer to the following common solutions:

- **Missing Parts:** If any parts are missing upon unpacking, please contact KidKraft customer support immediately.
- **Loose Connections:** If the kitchen feels wobbly or parts are loose, check all screws and fasteners and retighten them as per the assembly instructions.
- **Blender Not Spinning:** Ensure the button is fully depressed. If the issue persists, inspect for any obstructions or contact customer support.
- **Damaged Components:** Do not use the product if any components are broken or damaged. Contact KidKraft customer support for replacement parts.

8. SPECIFICATIONS

Model Number	20071
Product Dimensions (Overall)	33.94 Inches (H) x 12.44 Inches (W) x 32.28 Inches (D)
Item Weight	11 pounds
Recommended Age	3 years and up
Material	Wood, Plastic

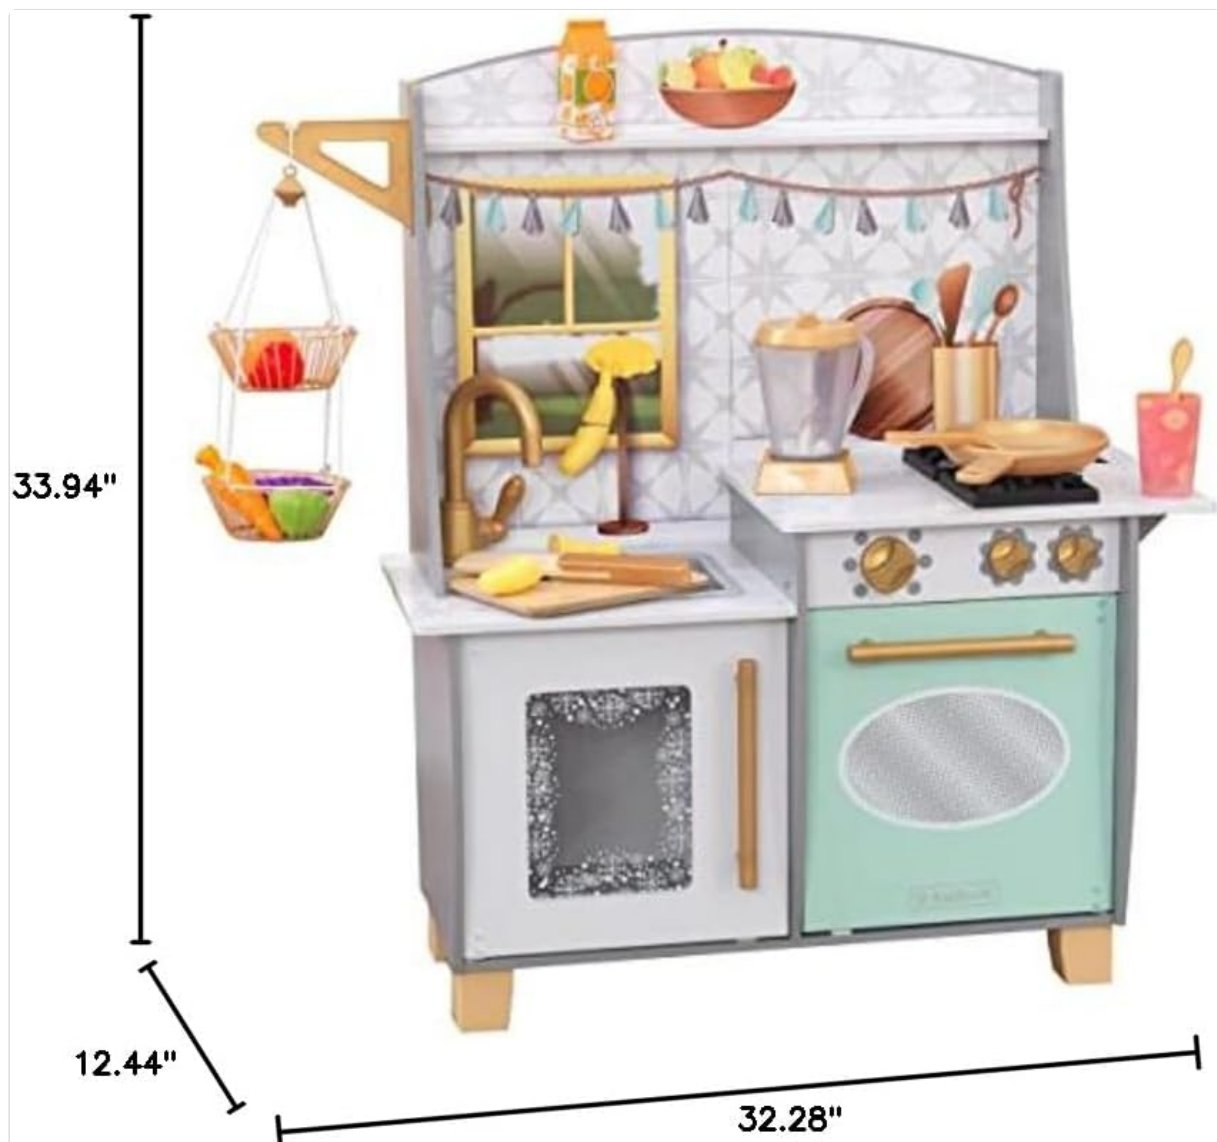


Image Description: A diagram illustrating the overall dimensions of the KidKraft Smoothie Fun Wooden Play Kitchen. The image clearly labels the height as 33.94 inches, the width as 32.28 inches, and the depth as 12.44 inches, providing a visual reference for its size.

9. WARRANTY AND SUPPORT

KidKraft products are manufactured with quality and durability in mind. This product comes with a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or visit the official KidKraft website.

Contact Information:

- **Website:** www.kidkraft.com (Please check the official website for the most current contact information.)
- **Customer Service:** Refer to the website for phone numbers or email support.