

[Manuals.plus](#) /

› [Easytry123](#) /

› Instruction Manual: Easytry123 Replacement Remote Control

Easytry123 C25 CD15 CD35 I15 I25 I35 SC15

Instruction Manual: Replacement Remote Control

For PRIMARE C25, CD15, CD35, I15, I25, I35, SC15 Compact Disc CD Player Standard System

INTRODUCTION

This document provides detailed instructions for the Easytry123 Replacement Remote Control. This remote is designed to function as a direct infrared (IR) replacement for your original remote control, specifically compatible with various PRIMARE Compact Disc CD Players and Standard Systems, including models C25, CD15, CD35, I15, I25, I35, and SC15.

Please ensure your original remote control matches the appearance of this replacement for optimal compatibility and functionality. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new remote control.

PACKAGE CONTENTS

- 1 x Easytry123 Replacement Remote Control

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two (2) AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely, indicating it is closed.





Image: Back view of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries. Note the positive and negative terminals for correct orientation.

Initial Use

This replacement remote control operates using infrared (IR) technology and typically requires no programming or pairing. Once batteries are installed, it should be ready for immediate use with compatible PRIMARE devices.

Point the remote control directly at the infrared receiver of your PRIMARE CD Player or System. Ensure there are no obstructions between the remote and the device.

OPERATING INSTRUCTIONS

The remote control features a standard layout of buttons for controlling your PRIMARE CD Player or System. Below is a general overview of common button functions. For specific advanced features, refer to your PRIMARE device's original user manual.





Image: Front view of the remote control, displaying the layout of all buttons including power, numerical keys, navigation, volume, and playback controls.

Button Functions

Button	Function
Power ()	Turns the connected PRIMARE device on or off.
Numerical Keys (0-9)	Used for direct track selection or inputting numerical values.
SELECT / Navigation Arrows	Navigates through menus and confirms selections (Up, Down, Left, Right, Select).
AMP AV / CD SC / PRE AUX	Selects different input sources or modes on your PRIMARE system.
Volume (+ / -)	Increases or decreases the audio volume.
Mute ()	Mutes or unmutes the audio output.
Play/Pause ()	Starts or pauses playback of audio content.
Stop ()	Stops playback.
Skip Forward/Backward (/)	Skips to the next or previous track/chapter.
MENU	Accesses the main menu of the connected device.
ZONE HOME	Specific function for multi-zone audio control or returning to a home screen.
AUDIO SUBT	Toggles between available audio tracks or subtitle options.
POP TITLE	Accesses pop-up menus or title screens.

Note: Specific button functions may vary slightly depending on your exact PRIMARE model and its firmware. Refer to your PRIMARE device's original manual for detailed functionality.

MAINTENANCE

- **Cleaning:** To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both AAA batteries at the same time with new ones to ensure consistent performance. Do not mix old and new batteries or different battery types.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, high humidity, and extreme temperatures. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	• Batteries: Check if batteries are inserted correctly with the proper polarity. Replace with new AAA batteries. • Line of Sight: Ensure there are no physical obstructions (e.g., furniture, objects) between the remote's IR emitter and the device's IR receiver. • Distance: Move closer to the device. The effective range of IR remotes is typically limited. • Compatibility: Verify that this remote is the correct replacement for your specific PRIMARE model. This remote is designed as an IR replacement for models listed in the title.
Some buttons not working.	• Compatibility: While this remote is a replacement, some highly specialized or model-specific functions might not be fully supported if they differ significantly from the original remote's codes. Refer to your device's original manual. • Dirt/Debris: Ensure buttons are not physically stuck or obstructed by dirt or debris.
Device responds intermittently.	• Low Batteries: Replace batteries with new ones. • Interference: Strong light sources (like direct sunlight or certain types of fluorescent lighting) can interfere with the IR signal. Try operating the remote in a different lighting condition.

If issues persist after attempting these troubleshooting steps, please contact the seller for further assistance.

SPECIFICATIONS

- **Model:** Replacement Remote Control for PRIMARE C25 CD15 CD35 I15 I25 I35 SC15
- **Brand:** Easytry123
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Compatible Devices:** PRIMARE C25, CD15, CD35, I15, I25, I35, SC15 Compact Disc CD Player Standard System
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design, Direct Replacement functionality

WARRANTY AND SUPPORT

Warranty Information

This product is a replacement remote control. For details regarding warranty, returns, or exchanges, please refer to the specific policies provided by the seller on the platform where your purchase was made. It is recommended to retain your proof of purchase.

Customer Support

For any questions, concerns, or issues not addressed in this manual, please contact the seller directly through the messaging system of the platform where you purchased the remote control. To facilitate a quick resolution, please provide your order number and a detailed description of the issue you are experiencing.

Note: This product does not typically include a printed manual. This digital document serves as the comprehensive guide for its use.

© 2024 Easytry123. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question