

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bosch](#) /

› [Bosch Serie 4 Wall Mounted Inclined Design Cooker Hood DWKA98G60I User Manual](#)

Bosch DWKA98G60I

Bosch Serie 4 Wall Mounted Inclined Design Cooker Hood DWKA98G60I User Manual

Model: DWKA98G60I

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Bosch Serie 4 Wall Mounted Inclined Design Cooker Hood, model DWKA98G60I. Please read these instructions carefully before installation, operation, or maintenance to ensure proper functioning and to prevent damage or injury. Keep this manual for future reference.



Image 1.1: Front view of the Bosch Serie 4 DWKA98G60I cooker hood, showcasing its inclined design and black finish, mounted above a cooktop.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent accidents and ensure the longevity of your appliance:

- Ensure the appliance is installed by a qualified technician.
- Ducting is compulsory for this model. Ensure proper ventilation and exhaust air discharge.
- Do not flambé under the cooker hood.
- Clean the grease filters regularly to prevent fire hazards.
- Keep children away from the appliance during operation.
- Disconnect the power supply before any cleaning or maintenance.

3. SETUP AND INSTALLATION

The Bosch DWKA98G60I cooker hood is designed for wall-mounted installation. Proper measurements and ducting are crucial for optimal performance.

3.1 Product Dimensions

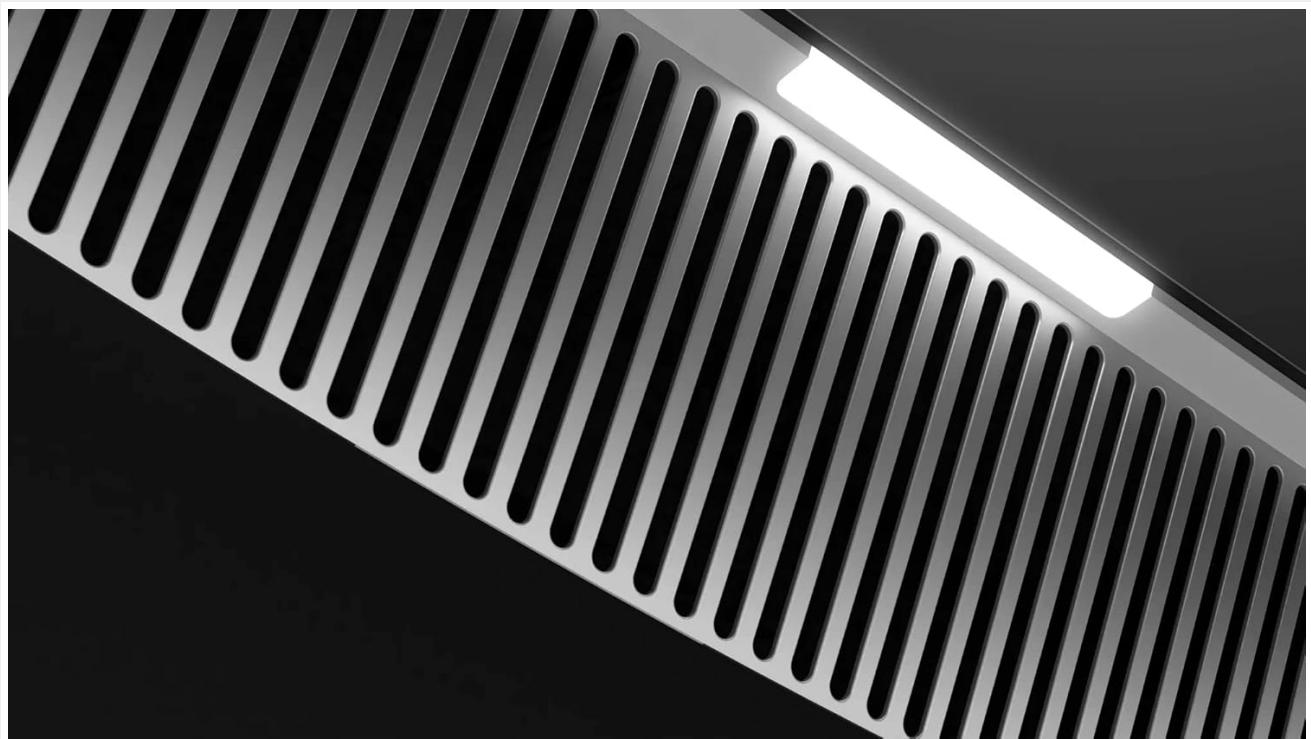


Image 3.1: Detailed diagram showing the overall dimensions of the cooker hood in millimeters, including height, width, and depth, and the ducting diameter (\varnothing 184).

3.2 Mounting Requirements

Ensure the mounting surface is strong enough to support the appliance's weight (approximately 25 kg). Maintain the specified minimum distance from the cooktop.

Measurements in mm


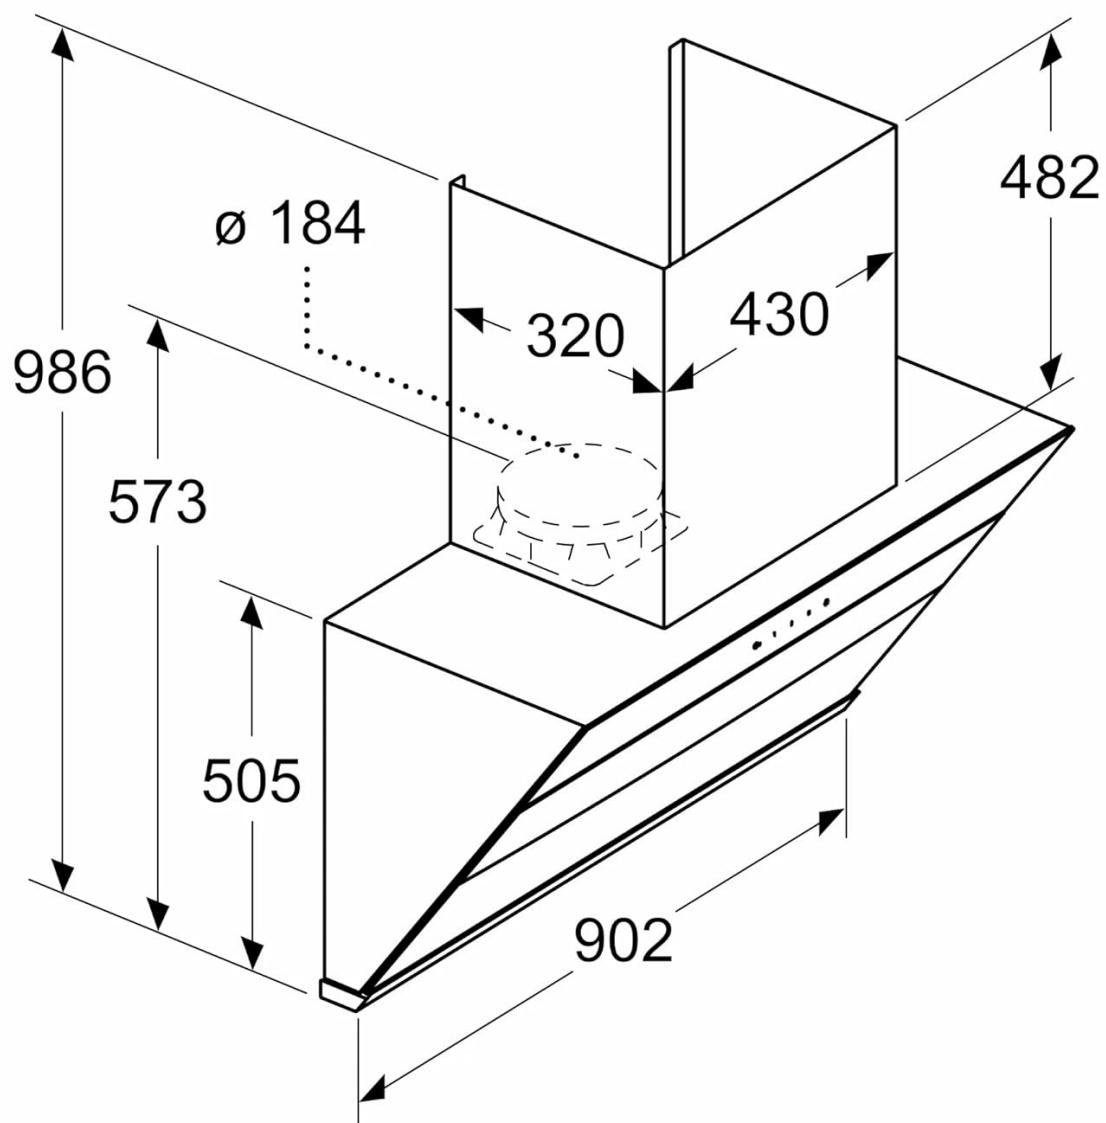


Image 3.2: Diagram illustrating the mounting bracket dimensions and recommended installation height. The distance from the upper edge of the pan support (A) must be at least 500 mm.

3.3 Exhaust Air Outlet and Electrical Connection

The exhaust air outlet (A) has a diameter of 180 mm. Ensure the electrical socket (B) is positioned correctly for easy access and connection.

Measurements in mm

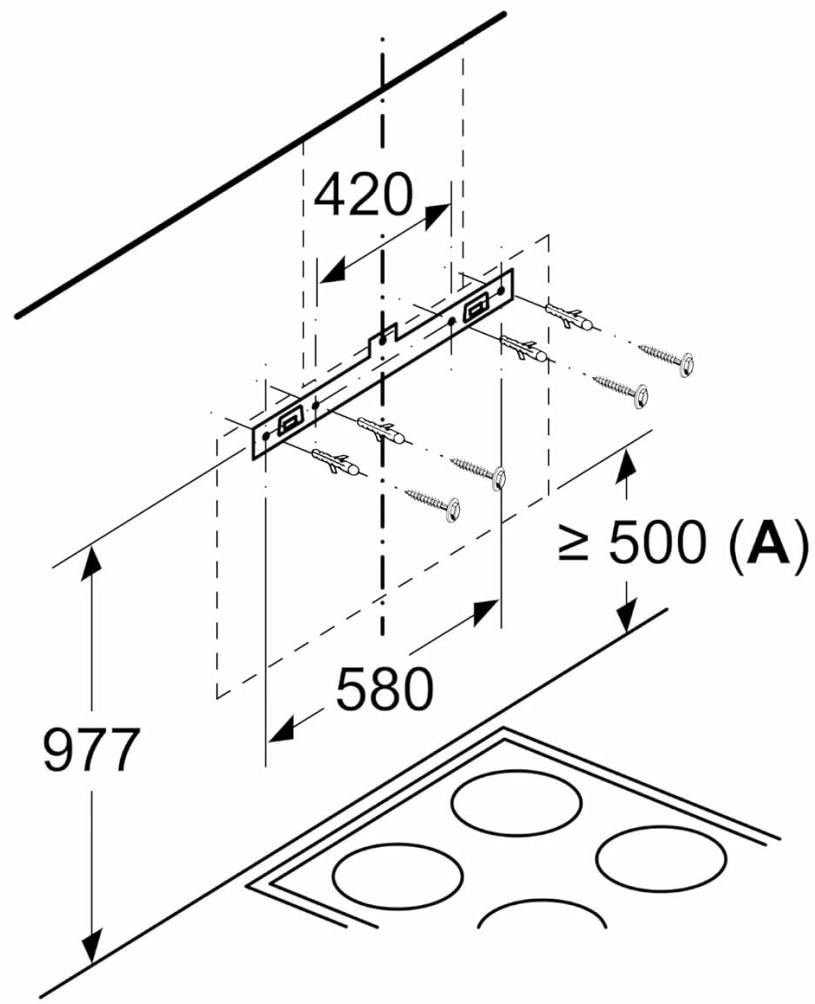


A: From upper edge of pan support

Image 3.3: Diagram showing the placement of the exhaust-air outlet (A) and electrical socket (B) relative to the cooker hood and cooktop. The minimum distance from the upper edge of the pan support (C) is 500 mm.

3.4 Side View Measurements

Measurements in mm

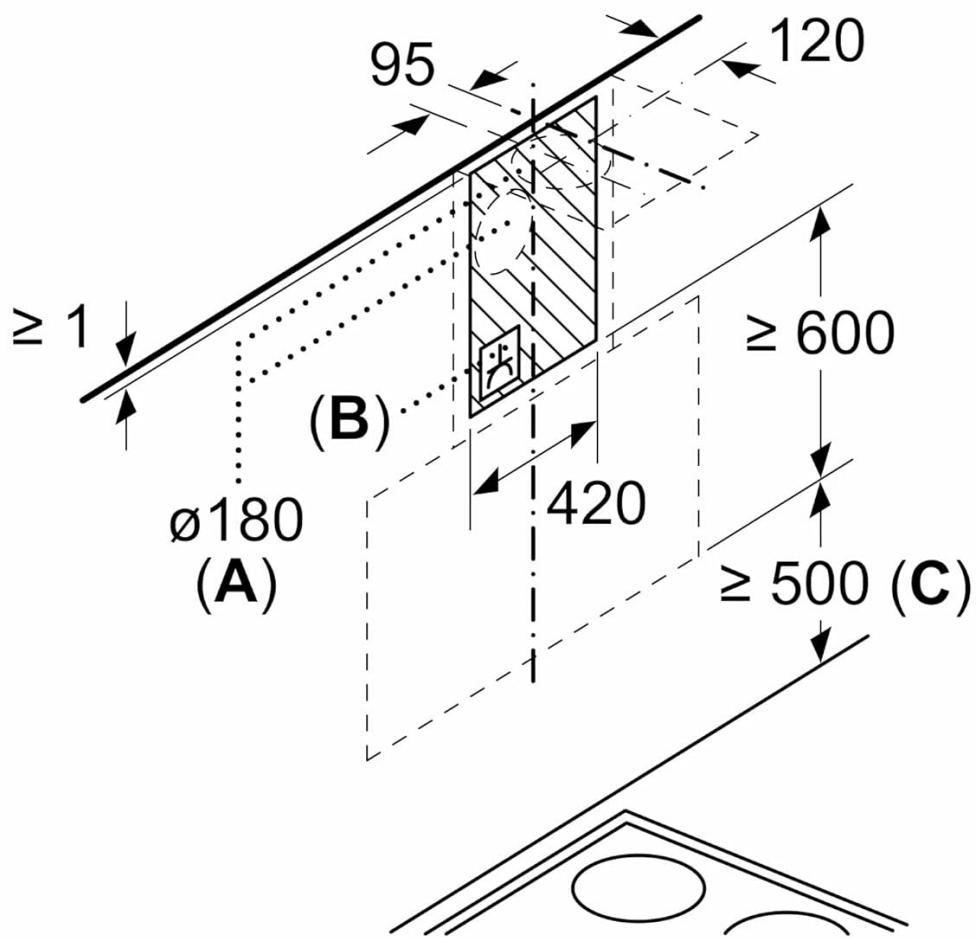

A: Exhaust-air outlet

B: Socket

C: From upper edge of pan support

Image 3.4: Side view diagram detailing the depth and height measurements of the cooker hood, including the minimum distance from the upper edge of the pan support (A).

4. OPERATING INSTRUCTIONS

The Bosch DWKA98G60I features intuitive touch controls for fan speed and lighting.

4.1 Control Panel Overview

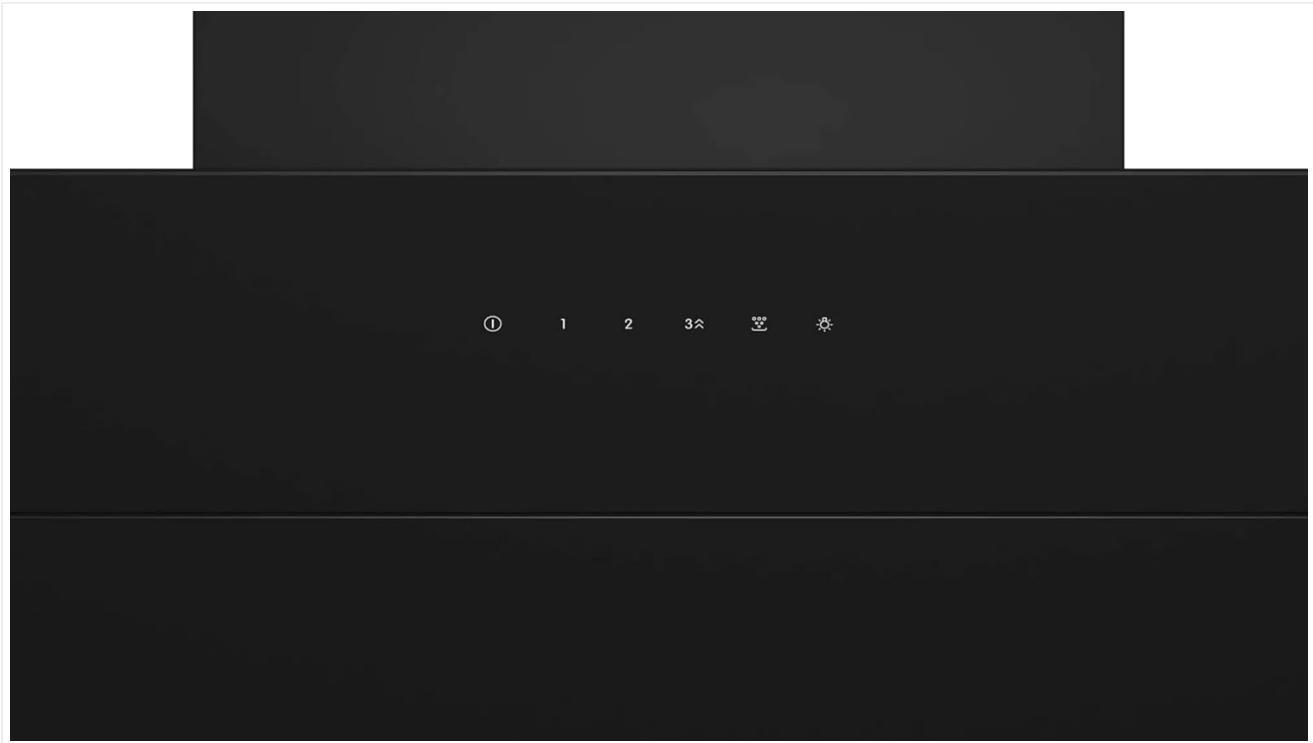


Image 4.1: Close-up of the touch control panel on the cooker hood, showing icons for power, fan speeds (1, 2, 3), intensive speed, and lighting.

4.2 Fan Speed Settings

The cooker hood offers 3 normal speed settings and an intensive speed setting for powerful extraction.

- **Power Button ():** Press to turn the hood on or off.
- **Speed 1, 2, 3:** Select the desired fan speed for normal cooking.
- **Intensive Speed (3↔):** Activates maximum extraction power for strong odors and steam. This setting typically reverts to a lower speed after a set time.

4.3 Lighting Control

The integrated LED lighting illuminates your cooking area.

- **Light Button (*):** Press to turn the LED lights on or off.


5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your cooker hood.

5.1 Cleaning the Grease Filters

The mesh filters capture grease and should be cleaned regularly. This model features an 'Auto Clean' function, but manual cleaning of filters is still required periodically.

Measurements in mm

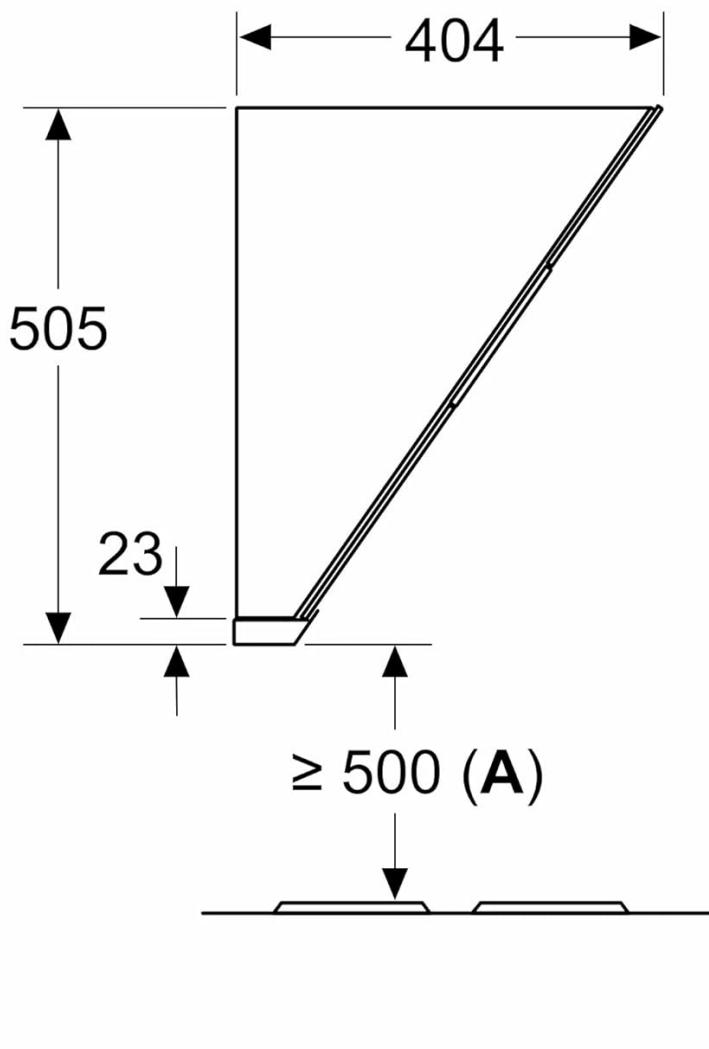

A: From upper edge of pan support

Image 5.1: Close-up view of the mesh grease filter, designed to trap cooking fats and particles.

1. Switch off the appliance and disconnect it from the power supply.
2. Carefully remove the mesh filters. Refer to the installation diagrams for filter access.
3. Clean the filters in warm soapy water or in a dishwasher.
4. Ensure filters are completely dry before re-installing.

5.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals.

6. TROUBLESHOOTING

If you encounter issues with your cooker hood, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Hood not turning on	No power supply	Check power connection and circuit breaker.
Low extraction power	Clogged grease filters or blocked ducting	Clean grease filters. Check ducting for obstructions.
Excessive noise	Loose components or improper installation	Ensure all parts are securely fastened. Contact a technician if noise persists.
Lights not working	Faulty LED or electrical connection	Check light connection. Contact service for LED replacement.

If the problem persists after attempting these solutions, please contact Bosch customer support.

7. SPECIFICATIONS

Key technical specifications for the Bosch Serie 4 DWKA98G60I Cooker Hood:

Feature	Specification
Model	DWKA98G60I
Mounting Type	Wall Mount
Controls Type	Touch
Number of Speeds	3 (Normal) + 1 (Intensive)
Noise Level	44 Decibels
Item Weight	25 Kilograms
Light Source Type	LED
Filter Type	Mesh
Ventilation Type	Ducted/Vented
Product Dimensions (LxWxH)	41.5 x 90 x 50.5 Centimeters
Material	Glass
Finish Type	Black

8. WARRANTY AND SUPPORT

For installation, demonstration, and any support queries regarding your Bosch cooker hood, please use the contact information below:

- **Customer Service Hotline:** 1800-266-1880
- **WhatsApp Support:** 987-366-1880

Please refer to your purchase documentation for specific warranty terms and conditions applicable to your region.

